

Portable CD Player

Operating Instructions 使用說明書

 


D-EJ785

Sony Corporation ©2002


http://www.sony.net/

“WALKMAN” is a registered trademark of Sony Corporation to represent Headphone Stereo products. WALKMAN is a trademark of Sony Corporation.




Printed on 100 % recycled paper using VOC (Volatile Organic Compound)-free vegetable oil based ink.


CD player (front)/CD唱機（正面）

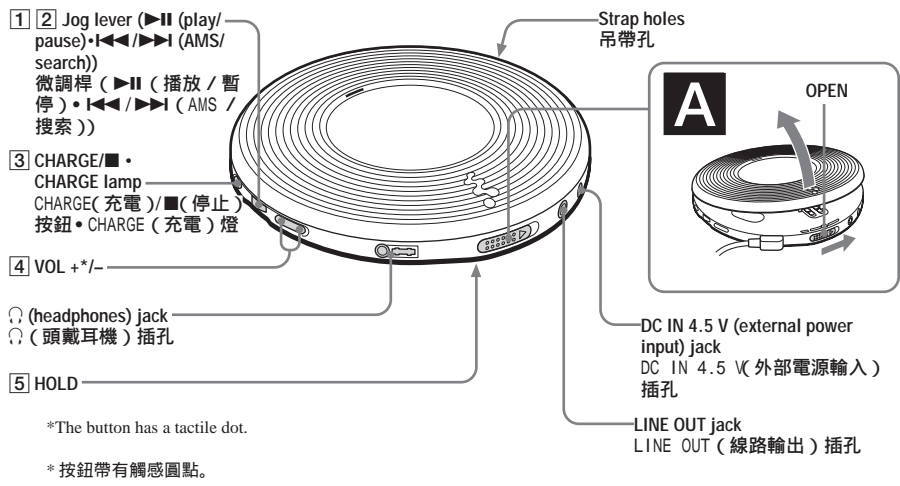

CD player (inside)/CD唱機（裡面）

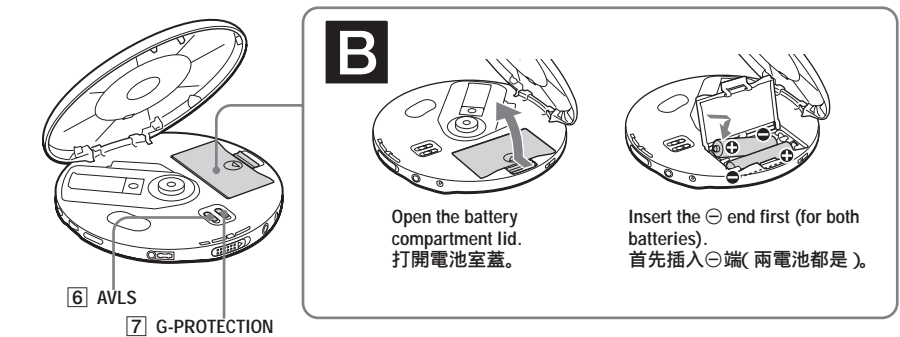


Remote control/遙控器

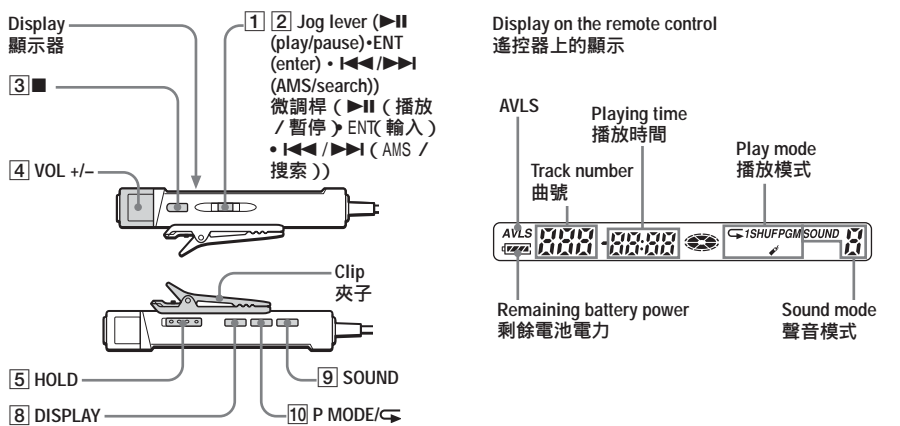


註 限使用附帶的遙控器。不能用其他 CD 唱機所附帶的遙控器去控制操作本 CD 唱機。


C

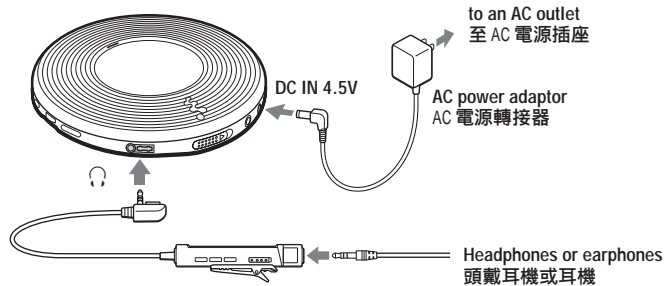

D

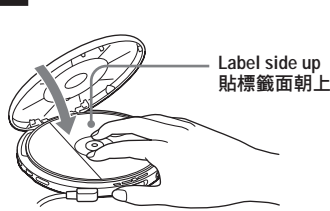

E

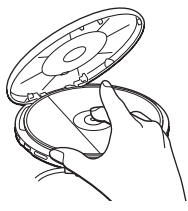

English

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

To prevent fire, do not cover the ventilation of the apparatus with newspapers, tablecloths, curtains, etc. And don't place lighted candles on the apparatus.

To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus.

Certain countries may regulate disposal of the battery used to power this product. Please consult with your local authority.

CAUTION
• INVISIBLE LASER RADIATION WHEN OPEN
• DO NOT STARE INTO BEAM OR VIEW DIRECTLY WITH OPTICAL INSTRUMENT

The validity of the CE marking is restricted to only those countries where it is legally enforced, mainly in the countries EEA (European Economic Area).

Power Sources

To use the AC power adaptor (C)

- 1 Connect the AC power adaptor to an AC outlet.

To use the batteries (B)

Use only the following batteries for your CD player:

Rechargeable batteries

Charge the rechargeable batteries before using them for the first time.

- NH-7WMAA
- NH-WM2AA (NH-WMAA × 2)

Dry batteries

- LR6 (size AA) alkaline batteries

To insert the batteries

- 1 Open the battery compartment lid inside your CD player.
- 2 Insert two batteries by matching the ⊕ to the diagram in the battery compartment and close the lid until it clicks into place.
- 3 When using the rechargeable batteries, connect the AC power adaptor to the DC IN 4.5 V jack of your CD player and an AC outlet, then press CHARGE/■ to start charging. The CD player charges the batteries. In the display on the remote control, the indicator sections of ◻◻◻◻ light up in succession. The CHARGE lamp on the CD player turns on. When the batteries are completely charged, the CHARGE lamp and ◻◻◻◻ indicator get turned off. If you press CHARGE/■ after the charge has already been completed, the ◻◻◻◻ indicator flashes and “Full” appears in the display.
- 4 Disconnect the AC power adaptor.

Battery life* (approx. hours)

(When the CD player is used on a flat and stable place.)
Playing time varies depending on how the CD player is used.

	G-PROTECTION on	off
Two NH-7WMAA (charged for about 2 hours**)	15	10
NH-WM2AA (charged for about 4 hours**)	32	24
Two Sony alkaline batteries LR6 (SG) (produced in Japan)	50	35

* Measured value by the standard of JEITA (Japan Electronics and Information Technology Industries Association).

** Charging time varies depending on how the rechargeable battery is used.s

Button/Switch	Function/Operation
[1] P MODE/◀ (play mode/repeat)	Press repeatedly until the play mode you want appears in the display. No indication: Normal play “1”: Single play “SHUF”: Shuffle play “◻”: Bookmark track play “PGM”: PGM (program) play To repeat the play mode you selected, press and hold until “◻” appears.

*1 AMS = Automatic Music Sensor

*2 AVLS = Automatic Volume Limiter System

*3 Sound may skip:

 
 
- if the CD player receives stronger continuous shock than expected.
- if a dirty or scratched CD is played or
- when using poor-quality CD-Rs/CD-RWs or if there is a problem with the recording device or application software.

*4 If the sound is distorted when using the SOUND function, turn down the volume.

To check the remaining power of the batteries

You can check it in the display.

Replace the batteries when “◻◻◻◻” flashes.



* Beep sounds.

Notes

- The indicator sections of ◻◻◻◻ roughly shows the remaining battery power. One section does not always indicate one-fourth of the battery power.
- Depending on operating conditions, the indicator sections of ◻◻◻◻ may increase or decrease.

When to replace the rechargeable batteries

If the battery life becomes shorter by about half, replace the batteries with new rechargeable batteries.

Notes on the rechargeable batteries

- To keep the original battery capacity for a long time, charge the batteries only when they are completely depleted.
- If the battery is new or has not been used for a long time, it may not be charged completely until you charge and discharge it several times.
- When carrying the rechargeable batteries, use the supplied battery carrying case to prevent unexpected heat. If the rechargeable batteries and the metallic objects get contacted, heat or fire may occur due to a short circuit.

Notes on using the dry batteries

- Be sure to remove the AC power adaptor.
- When the batteries are depleted, replace both batteries with new ones.

Playing a CD

To insert a CD

- 1 Slide OPEN to open the lid (A).
- 2 Fit the CD to the pivot, then close the lid (D).

Notes

- This CD player can play CD-Rs/CD-RWs recorded in the Compact Disc Digital Audio (Audio CD) format, but playback capability may vary depending on the quality of the disc and the condition of the recording device.
- This product is designed to play back discs that conform to the Compact Disc (CD) standard. Recently, various music discs encoded with copyright protection technologies are marketed by some record companies. Please be aware that among those discs, there are some that do not conform to the CD standard and may not be playable by this product.

To operate the CD player

Button/Switch	Function/Operation
[1] Jog lever ▶▶ (play/pause)	Press to start play. Press again to pause play. To play from the first track, press for 2 seconds or more while the CD player is stopped.
[2] Jog lever ◀◀/▶▶ (AMS*/search)	Flick toward ◀◀ or ▶▶ once to find the beginning of the current/next track. Flick toward ◀◀ or ▶▶ repeatedly to find the beginning of the previous/succeeding tracks. Hold toward ◀◀ or ▶▶ to go backward/forward quickly.
[3] CHARGE/■ (■) (stop)	Press to stop playing.
[4] VOL +/-	Press (turn for the remote control) to adjust the volume.
[5] HOLD	Use to lock the controls on your CD player or remote control to prevent accidental button presses. HOLD on the CD player works only for the player, while HOLD on the remote control works only for the remote control. The CHARGE lamp flashes if you press any button when the HOLD function is activated.
[6] AVLS*2	Set to “LIMIT” when you want to keep down the maximum volume to protect your hearing.
[7] G-PROTECTION	Protect against sound skipping.*3
[8] DISPLAY	Press to display the remaining time/tracks.
[9] SOUND	Use to emphasize the bass-boosted sound. Press repeatedly to select SOUND 1 or SOUND 2. SOUND 2 enhances more than SOUND 1.*4

電池使用時間* (大約時數)

(在平穩表面使用 CD 唱機時)
播放時間因 CD 唱機的使用狀況而異。

	G-PROTECTION 開	設定 關
兩 NH-7WMAA (充電大約 2 小時**)	15	10
NH-WM2AA (充電大約 4 小時**)	32	24
兩 Sony 鹼性電池 LR6 (SG) (日本製)	50	35

 
 
* JEITA (Japan Electronics and Information Technology Industries Association) 日本電子和資訊技術產業協會) 的標準測值。

** 充電時間，隨充電式電池的使用狀況而異。

檢查電池剩餘電力

可以在顯示器上檢查。

當 “◻◻◻◻” 閃爍時請更換電池。



* 哩聲。

註

- ◻◻◻◻ 的指示段節相示剩餘電池電力。其一段段節不一定正確代表電池電力的四分之一。
- 根據操作條件，◻◻◻◻ 的指示段節的使用時間可能增加或減少。

何時更換充電式電池

當電池使用時間縮短到大約一半時，即請更換新的充電式電池。

充電式電池須知

- 為保持充電式電池原有容量維持長時間的電池使用時間，請在完全耗盡電力時才給電池充電。
- 新充電式電池或擺置長時間沒用的充電式電池，可能不能完全充滿電，須等充電使用過數次之後才能達到完全充滿電。
- 請利用附帶的電池攜帶盒以防意外生熱。讓充電式電池和金屬小件物品混合放置，可能發生短路而生熱，甚至有起火危險。

使用乾電池的注意事項

- 務必卸下 AC 電源轉接器。
- 當電池用完時，同時更換兩節新電池。

播放 CD

插入 CD

- 1 滑動 OPEN 打開頂蓋 (A)。
- 2 把 CD 接入中心軸，然後蓋上頂蓋 (D)。

註

- 本 CD 唱機可以播放以雷射光碟數位音訊 (音訊 CD) 格式錄製的 CD-R/CD-RW。但播放能力取決於光碟質量和錄音設備的狀況。
- 本產品設計用於播放符合 Compact Disc (CD) 標準的光碟。近來，許多錄製公司都出售各種版權保護技術編碼的音樂光碟。請注意，這些光碟中可能會有不符合 CD 標準的光碟，且可能無法用本產品播放。

操作 CD 唱機

按鈕 / 開關	功能 / 操作
[1] 微調桿 ▶▶ (播放/暫停)	按下此桿開始播放。再按一次暫停播放。 要從第一個曲子開始播放，當 CD 唱機停止時，按住此鈕 2 秒以上。
[2] 微調桿 ◀◀/▶▶ (AMS*/搜索)	朝 ◀◀ 或 ▶▶ 按此鈕一次查找當前/下一曲子的開頭。反覆朝 ◀◀ 或 ▶▶ 按此鈕查找前面/後面曲子的開頭。朝 ◀◀ 或 ▶▶ 方向按住此鈕快速/快進。
[3] CHARGE/■ (■) (停止)	按下停止播放。
[4] VOL +/-	按下(遙控器上則為轉動)以調節音量。
[5] HOLD	用於鎖定 CD 唱機或遙控器上的控制鈕以防止意外按動。CD 唱機上的 HOLD 僅作用於 CD 唱機，遙控器上的 HOLD 僅作用於遙控器。 當 HOLD 功能激活時，如果按任何按鈕，CHARGE 燈閃爍。
[6] AVLS*2	當您要控制最大音量以保護聽力時，將它設為 “LIMIT”。
[7] G-PROTECTION	防止聲音跳動。*3
[8] DISPLAY	按下顯示剩餘時間/曲子。
[9] SOUND	用於加強低音。反覆按以選擇 SOUND 1 或 SOUND 2。SOUND 2 比 SOUND 1 更強。*4

