

Portable CD Player

Operating Instructions 使用說明書



 
D-EJ365

Sony Corporation ©2002

http://www.sony.net/


“WALKMAN” is a registered trademark of Sony Corporation to represent Headphone Stereo products. is a trademark of Sony Corporation.

CD player (front)/CD唱機（正面）

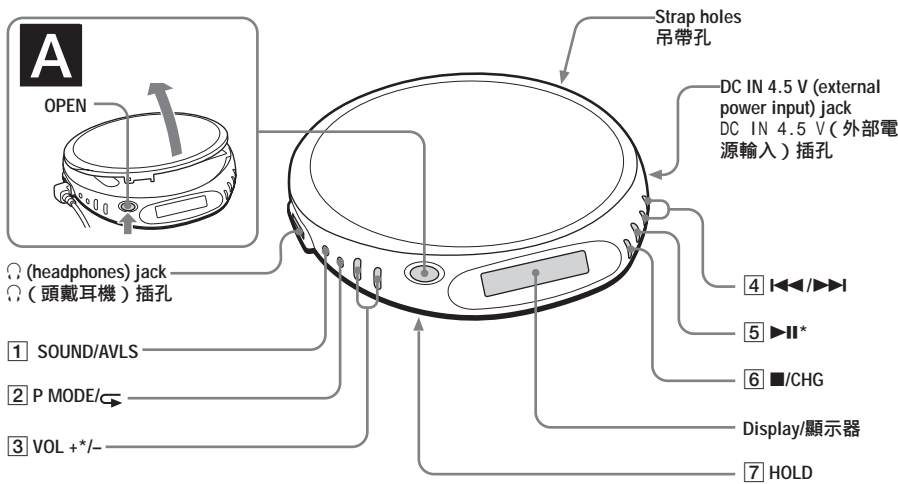


*The button has a tactile dot.
* 按鈕帶有觸感圓點。

 CD player (inside)/CD唱機（裡面）

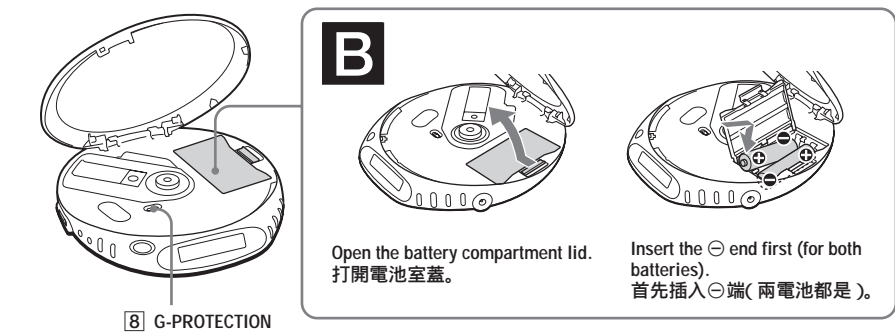

Remote control/遙控器

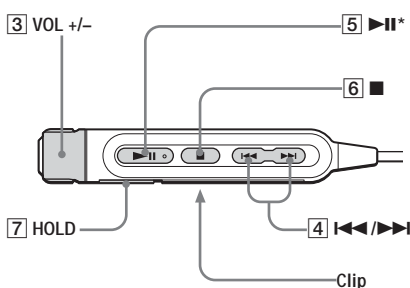 


*The button has a tactile dot.
* 按鈕帶有觸感圓點。

Note

Use only the supplied remote control. You cannot operate this CD player with the remote control supplied with other CD players.

Display on the CD player

 
CD 唱機上的顯示

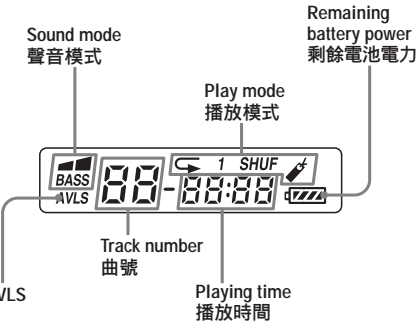


註

限使用附帶的遙控器。不能用其他 CD 唱機所附帶的遙控器去控制操作本 CD 唱機。

 
C

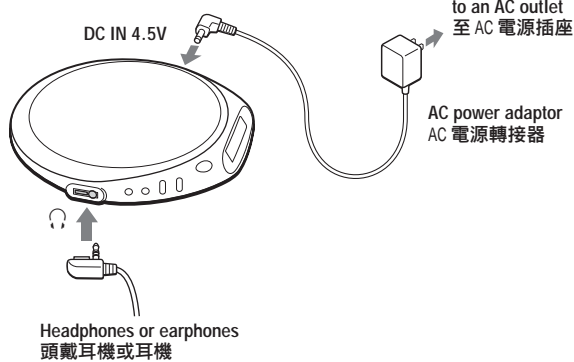

D

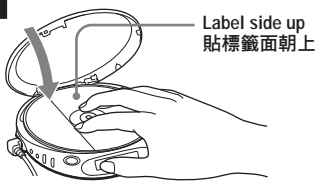 

E

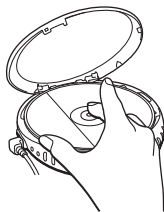 

English

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

To prevent fire, do not cover the ventilation of the apparatus with newspapers, tablecloths, curtains, etc. And don't place lighted candles on the apparatus.

To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus.

Certain countries may regulate disposal of the battery used to power this product. Please consult with your local authority.

CAUTION

- INVISIBLE LASER RADIATION WHEN OPEN
- DO NOT STARE INTO BEAM OR VIEW DIRECTLY WITH OPTICAL INSTRUMENT

The validity of the CE marking is restricted to only those countries where it is legally enforced, mainly in the countries EEA (European Economic Area).

Power Sources

To use the AC power adaptor (C)

- 1 Connect the AC power adaptor to an AC outlet.

To use the batteries (E)

Use only the following batteries for your CD player:

Rechargeable batteries

Charge the rechargeable batteries before using them for the first time.

- NH-7WMAA
- NH-WM2AA (NH-WMAA × 2)

Dry batteries

- LR6 (size AA) alkaline batteries

To insert the batteries

- 1 Open the battery compartment lid inside your CD player.
- 2 Insert two batteries by matching the ⊕ to the diagram in the battery compartment and close the lid until it clicks into place.
- 3 When using the rechargeable batteries, connect the AC power adaptor to the DC IN 4.5 V jack of your CD player and an AC outlet, then press ■/CHG to start charging. The CD player charges the batteries. The indicator sections of light up in succession and “CHG” appears in the display. When the batteries are completely charged, the indicator gets turned off. If you press ■/CHG after the charge has already been completed, the indicator flashes and “Full” appears in the display.
- 4 Disconnect the AC power adaptor.

Battery life* (approx. hours)

(When the CD player is used on a flat and stable place.)
Playing time varies depending on how the CD player is used.


	G-PROTECTION	
	ON	OFF
Two NH-7WMAA (charged for about 2 hours**)	15	12
NH-WM2AA (charged for about 4 hours**)	30	24
Two Sony alkaline batteries LR6 (SG) (produced in Japan)	40	36

* Measured value by the standard of JEITA (Japan Electronics and Information Technology Industries Association).

** Charging time varies depending on how the rechargeable battery is used.

To check the remaining power of the batteries

 You can check it in the display. Replace the batteries when “Lo batt*” flashes.



*Beep sounds.

Notes

- The indicator sections of roughly shows the remaining battery power. One section does not always indicate one-fourth of the battery power.
- Depending on operating conditions, the indicator sections of may increase or decrease.

When to replace the rechargeable batteries

If the battery life becomes shorter by about half, replace the batteries with new rechargeable batteries.

Notes on the rechargeable batteries

- To keep the original battery capacity for a long time, charge the batteries only when they are completely depleted.
- If the battery is new or has not been used for a long time, it may not be charged completely until you charge and discharge it several times.
- When carrying the rechargeable batteries, use the supplied battery carrying case to prevent unexpected heat. If the rechargeable batteries and the metallic objects get contacted, heat or fire may occur due to a short circuit.

Notes on using the dry batteries

- Be sure to remove the AC power adaptor.
- When the batteries are depleted, replace both batteries with new ones.

Playing a CD

To insert a CD

- 1 Press OPEN to open the lid (A).
- 2 Fit the CD to the pivot, then close the lid (D).

Notes

- This CD player can play CD-Rs/CD-RWs recorded in the Compact Disc Digital Audio (Audio CD) format, but playback capability may vary depending on the quality of the disc and the condition of the recording device.
- This product is designed to play back discs that conform to the Compact Disc (CD) standard. Recently, various music discs encoded with copyright protection technologies are marketed by some record companies. Please be aware that among those discs, there are some that do not conform to the CD standard and may not be playable by this product.

To operate the CD player

Button/Switch	Function/Operation
1 SOUND/AVLS* ¹	• Use to emphasize the bass-boosted sound. Press repeatedly to select BASS or BASS. BASS enhances more than BASS. ^{*2} • Also use to keep down the maximum volume to protect your hearing. Press and hold until “AVLS” appears in the display. The AVLS function is turned on. To turn off the AVLS function, press and hold again until “AVLS” disappears.
2 P MODE/ (play mode/repeat)	Press repeatedly until the play mode you want appears in the display. No indication: Normal play “I”: Single track play “SHUF”: Shuffle play “”: Bookmark track play To repeat the play mode you selected, press and hold until “” appears.
3 VOL +/-	Press (turn for the remote control) to adjust the volume.
4 (AMS* ³ /search)	Press or once to find the beginning of the current/next track. Press or repeatedly to find the beginning of the previous/succeeding tracks. Press and hold or to go backward/forward quickly.
5 (play/pause)	Press to start play. Press again to pause play. To play from the first track, press for 2 seconds or more while the CD player is stopped.
6 ■/CHG (■) (stop)	Press to stop playing.
7 HOLD	Use to lock the controls on your CD player or remote control to prevent accidental button presses. HOLD on the CD player works only for the player, while HOLD on the remote control works only for the remote control.
8 G-PROTECTION	Set it to ON to protect against sound skipping. ^{*4}

*¹AVLS = Automatic Volume Limiter System

*²If the sound is distorted when using the SOUND function, turn down the volume.

*³AMS = Automatic Music Sensor

*⁴Sound may skip:

- if the CD player receives stronger continuous shock than expected.
- if a dirty or scratched CD is played or
- when using poor-quality CD-Rs/CD-RWs or if there is a problem with the recording device or application software.

To remove the CD

Remove the CD while pressing the pivot (E).

(Continue to the reverse side)

中文

警告

為防火災或觸電危險，切勿讓機器暴露於雨中或潮濕處。

別把機器安裝在諸如書櫥或壁櫥等密封處。

為防火災，請勿讓裝置的通風孔蓋住報紙，桌布，窗簾等。也不可在裝置上點放蠟燭。

為防火災或觸電危險，不可在裝置上擺飾花瓶等裝滿液體的物體。

一部分國家對於本產品的電源用電池可能規定有處置的標準。請洽詢當地有關當局。

注意

- 開著時，將有看不見的雷射線
- 別凝視射線或直接觀看裡面的光學元件

CE 標誌的有效性，僅限於那些有法律限制的國家，主要在 EEA (歐洲經濟區) 國家。

連接電源

使用 AC 電源轉接器 (C)

- 1 將 AC 電源轉接器連接到 AC 電源插座。

使用電池 (E)

本 CD 唱機限使用下列電池：

充電式電池

初次使用充電式電池時，必須進行充電。

- NH-7WMAA
- NH-WM2AA (NH-WMAA × 2)

乾電池

- LR6 (AA, 3 號) 鹼性電池

插入電池

- 1 打開 CD 唱機裡面的電池室蓋。
- 2 裝入 2 個電池使 ⊕ 對準電池室中的圖示，然後關上蓋子至卡搭定位。
- 3 當使用充電式電池時，將 AC 電源轉接器連接到您的 CD 唱機上的 DC IN 4.5 V 插孔和 AC 電源插座，然後按 ■/CHG 以開始充電。CD 唱機給電池充電。指示燈各段陸續點亮，“CHG”出現在顯示器上。當充電完成時，指示燈熄滅。
- 4 斷開 AC 電源轉接器。

電池使用時間* (大約時數)

(在平穩表面使用 CD 唱機時)
播放時間因 CD 唱機的使用狀況而異。

	G-PROTECTION 設定	
	ON	OFF
兩 NH-7WMAA (充電大約 2 小時**)	15	12
NH-WM2AA (充電大約 4 小時**)	30	24
兩 Sony 鹼性電池 LR6 (SG) (日本製)	40	36

 
* JEITA (Japan Electronics and Information Technology Industries Association) 日本電子和資訊技術產業協會) 的標準測值。

** 充電時間，隨充電式電池的使用狀況而異。

檢查電池剩餘電力

可以在顯示器上檢查。

當 “Lo batt*” 閃爍時請更換電池。



→ Lo batt*

* 嗶聲。

註

- 的指示段節指示剩餘電池電力。其一個段節不一定正確代表電池電力的四分之一。
- 根據操作條件，的使用時間可能增加或減少。

何時更換充電式電池

當電池使用時間縮短到大約一半時，即請更換新的充電式電池。

充電式電池須知

- 為保持充電式電池原有容量維持長時間的電池使用時間，請在完全耗盡電力時才給電池充電。
- 新充電式電池或擱置長時間沒用的充電式電池，可能不能完全充滿電，須等充電使用過數次之後才能達到完全充滿電。
- 請利用附帶的電池攜帶盒以防意外生熱。讓充電式電池和金屬小件物品混合放置，可能因發生短路而生熱，甚至有起火危險。

使用乾電池的注意事項

- 務必卸下 AC 電源轉接器。
- 當電池用完時，同時更換兩節新電池。

播放 CD

插入 CD

- 1 滑動 OPEN 打開頂蓋 (A)。
- 2 把 CD 接入中心軸，然後蓋上頂蓋 (D)。

註

- 本 CD 唱機可以播放以雷射光碟數位音訊 (音訊 CD) 格式錄製的 CD-R/CD-RW。但播放能力取決於光碟質量和錄音設備的狀況。
- 本產品設計用於播放符合 Compact Disc (CD) 標準的光碟。近來，許多錄製公司都出售各種版權保護技術編碼的音樂光碟。請注意，這些光碟中可能會有不符合 CD 標準的光碟，且可能無法用本產品播放。

操作 CD 唱機

按鈕 / 開關	功能 / 操作
1 SOUND/AVLS* ¹	• 用來加強低音。反復按此鈕以選擇 BASS 或 BASS。BASS 的作用強於 BASS。 ^{*2} • 也用來限制最大音量以保護聽力。按住此鈕直到 “AVLS” 出現在顯示器上。AVLS 功能開啟。要關閉 AVLS 功能，再次按住此鈕直到 “AVLS” 消失。
2 P MODE/ (播放模式 / 重現)	反復按直到所要的播放模式出現在顯示器上。 無顯示：正常播放 “1”：單首曲子播放 “SHUF”：隨機播放 “”：書籤軌跡播放 要重現選定的播放模式，按住此鈕直到 “” 出現。
3 VOL +/-	按此鈕 (在遙控器上轉動此鈕) 調節音量。
4 (AMS* ³ / 搜索)	按或一次查找當前 / 下一曲子的開頭。反復按或或查找前面 / 後面的曲子的開頭。按住或快速 / 快速。
5 (播放 / 暫停)	按此鈕開始播放。再按一次暫停播放。 要從第一個曲子開始播放，當 CD 唱機停止時，按住此鈕 2 秒以上。
6 ■/CHG (■) (停止)	按此鈕停止播放。
7 HOLD	用於鎖定 CD 唱機或遙控器上的控制鈕，以防意外按鈕。CD 唱機上的 HOLD 鈕只對唱機上的按鈕有效，而遙控器上的 HOLD 鈕只對遙控器上的按鈕有效。
8 G-PROTECTION	設為 ON 以防聲音跳躍。 ^{*4}

*¹AVLS= 自動音量控制系統

*²當使用 SOUND 功能時，如果聲音失真，請降低音量。

*³AMS= 自動音樂感應器

*⁴聲音可能跳動：

- 如果 CD 唱機受到比預計更強的連續震動，
- 如果播放碟的或劃傷的 CD 或
- 當使用低劣的 CD-R/CD-RW 時或錄製設備或應用軟體有問題。

要取出 CD

按住中心軸 (E)，取下 CD。

(續背面)

English

To turn off the operation beep sound

You can turn off the beep sound that is heard from your headphones/earphones when you operate your CD player.

- Remove the power source (AC power adaptor, rechargeable batteries or dry batteries) from the CD player.
- Connect the power source while pressing ■/CHG on the CD player or ■ on the remote control.

To turn on the beep sound

Remove the power source and then connect the power source without pressing ■/CHG or ■.

Playing your favorite tracks by adding Bookmarks (Bookmark track play)

You can add Bookmarks to up to 99 tracks for each CD. You can use this function for up to 5 CDs.

To add Bookmarks

- During playback of the track where you want to add a Bookmark, press and hold ▶|| until “”(Bookmark)” flashes in the display.
 - When the Bookmark has been added successfully, flashing of “” becomes slow.
- Repeat step 1 to add Bookmarks to the tracks you want.

To listen to the tracks with Bookmarks

- Press P MODE/ repeatedly until “” flashes.
- Press ▶||.
 - “” lights up in the display and the playback of the tracks with Bookmarks starts.

To remove the Bookmarks

During playback of the track with a Bookmark, press and hold ▶|| until “” disappears from the display.

To check the tracks with Bookmarks

During playback of the tracks with Bookmarks, “” keeps flashing slowly in the display.

Notes

- During playback of the tracks with Bookmarks, tracks are played in order of track number, and not in the order you added the Bookmarks.
- If you try to add Bookmarks to the tracks on the 6th CD, the Bookmarks of the CD you played back first will be erased.
- If you remove all power sources, all Bookmarks stored in memory will be erased.
- If you continue playing the CD player on the rechargeable batteries without charging the batteries even though “Lo batt” is displayed, all Bookmarks stored in memory will be erased.

Precautions

On safety

 
- Should any solid objects or liquid fall into the CD player, unplug it and have it checked by qualified personnel before operating it any further.
- Do not put any foreign objects in the DC IN 4.5 V (external power input) jack.

On power sources

- When you are not using the CD player for a long time, disconnect all power sources from the CD player.

On AC power adaptor

- Use only the AC power adaptor supplied. If your CD player is not supplied with the one, use the AC-E45HG AC power adaptor. Do not use any other AC power adaptor. It may cause a malfunction.



- Do not touch the AC power adaptor with wet hands.
- Connect the AC power adaptor to an easily accessible AC outlet. Should you notice an abnormality in the AC power adaptor, disconnect it from the AC outlet immediately.

On rechargeable batteries and dry batteries

- Do not charge the dry batteries.
- Do not throw the batteries into fire.
- Do not carry the batteries with coins or other metallic objects. It can generate heat if the positive and negative terminals of the battery are accidentally contacted by a metallic object.
- Do not mix rechargeable batteries with dry batteries.
- Do not mix new batteries with old ones.
- Do not use different types of batteries together.
- When the batteries are not to be used for a long time, remove them.
- If battery leakage occurs, wipe off any deposit in the battery compartment, and install new batteries. In case the deposit adheres to you, wash it off thoroughly.

On the CD player

- Keep the lens on the CD player clean and do not touch it. If you do so, the lens may be damaged and the CD player will not operate properly.
- Do not put any heavy object on top of the CD player. The CD player and the CD may be damaged.

- Do not leave the CD player in a location near heat sources, or in a place subject to direct sunlight, excessive dust or sand, moisture, rain, mechanical shock, unlevelled surface, or in a car with its windows closed.
- If the CD player causes interference to the radio or television reception, turn off the CD player or move it away from the radio or television.
- Discs with non-standard shapes (e.g., heart, square, star) cannot be played on this CD player. Attempting to do so may damage the CD player. Do not use such discs.

On headphones/earphones

Road safety

Do not use headphones/earphones while driving, cycling, or operating any motorized vehicle. It may create a traffic hazard and is illegal in some areas. It can also be potentially dangerous to play your headsets at high volume while walking, especially at pedestrian crossings. You should exercise extreme caution or discontinue use in potentially hazardous situations.

Preventing hearing damage

Avoid using headphones/earphones at high volume. Hearing experts advise against continuous, loud and extended play. If you experience a ringing in your ears, reduce volume or discontinue use.

Consideration for others

Keep the volume at a moderate level. This will allow you to hear outside sounds and to be considerate to the people around you.

Maintenance

To clean the casing

Use a soft cloth slightly moistened in water or a mild detergent solution. Do not use alcohol, benzine or thinner.

To clean the plugs

If the plugs become dirty, there is no audio or noise is heard. Clean them with a dry soft cloth periodically.

Troubleshooting

Should any problem persist after you have made these checks, consult your nearest Sony dealer.

“Hold” appears in the display when you press a button, and the CD does not play.

→The buttons are locked. Slide HOLD back.

The CD player does not start charging.

→During stop, press ■/CHG.

 
→You press ■ on the remote control. Press ■/CHG on the CD player.

The volume does not increase even if you press VOL + repeatedly.

→Press and hold SOUND until “AVLS” disappears from the display.

The battery compartment lid is detached by an accidental drop, excessive force, etc.

→Attach it as illustrated below.

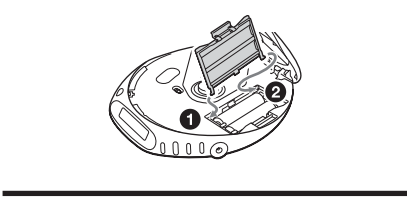

Specifications

System

Compact disc digital audio system

Laser diode properties

Material: GaAlAs
Wavelength: λ = 780 nm
Emission duration: Continuous
Laser output: Less than 44.6 μW (This output is the value measured at a distance of 200 mm from the objective lens surface on the optical pick-up block with 7 mm aperture.)

Power requirements

For the area code of the model you purchased, check the upper left side of the bar code on the package.

- Two Sony NH-7WMAA rechargeable batteries: 2.4 V DC
- Sony NH-WM2AA rechargeable batteries: 2.4 V DC
- Two LR6 (size AA) batteries: 3 V DC
- AC power adaptor (DC IN 4.5 V jack):
 - U, U2, CA, CA2, E92, MX2, TW2 and CA2/C models: 120 V, 60 Hz
 - CED, CED/4, CE7, CE7/C, EE, EE1, E, E13 and E13/2 models: 220 - 230 V, 50/60 Hz
 - CEK model: 230 V, 50 Hz
 - AU2 model: 240 V, 50 Hz
 - EU8, EU8/C, JE.W, E18, KR4 and EE8 models: 100 - 240 V, 50/60 Hz
 - HK4 model: 230 V, 50 Hz
 - CNA model: 220 V, 50 Hz

Dimensions (w/h/d) (without projecting parts and controls)

Approx. 136 × 26 × 150 mm (5 ⅜ × 1 ⅙ × 6 in.)

Mass (excluding accessories)

Approx. 185 g (6.6 oz)

Operating temperature

5°C - 35°C (41°F - 95°F)

Design and specifications are subject to change without notice.

Supplied Accessories

AC power adaptor (1)
Headphones/earphones with remote control (1)
Rechargeable batteries (2)
Battery carrying case (1)

中文

關掉操作嗶聲

可以關掉當操作 CD 唱機時在頭戴耳機 / 耳機上可聽到的嗶聲。

- 從 CD 唱機上卸下電源 (AC 電源轉接器，充電式電池或乾電池)。
- 按著 CD 唱機上的 ■/CHG 或遙控器上的 ■同時連接到電源。

要打開嗶聲時

卸下電源，然後不必按 ■/CHG 或 ■而再連接到電源。

給喜歡的曲子加記Bookmark 以便選擇播（播放加記書籤曲子）

每張 CD 最多能給 99 首曲子加記書籤。最多能為 5 張 CD 使用此功能。

要加記Bookmark 時

- 播放曲子當中，在所要加記書籤處按住 ▶||至顯示器中閃爍著 “”(Bookmark)”。
- 當成功地加記完書籤時，“”閃爍即變慢。
- 反復步驟 1 給所有喜歡的曲子加記書籤。

要利用Bookmark 聽曲子時

- 請反復按 P MODE/ 至閃爍著 “”。
- 按 ▶||。
 - 顯示器中即點亮 “”而開始播放帶有 Bookmark（書籤）的曲子。

要去除Bookmark 時

請在播放帶有 Bookmark（書籤）的曲子當中，按住 ▶||至顯示器中的 “”消失了顯示。

要檢查帶有Bookmark 的曲子時

在播放帶有 Bookmark（書籤）的曲子當中，顯示器中的 “”將閃爍得較慢。

註

- 在播放帶有 Bookmark（書籤）的曲子時，是以曲號順序播放曲子的，而不是以您加記書籤的順序播放的。
- 您如果試圖給第 6 張 CD 加記書籤，則第 1 張播放的 CD 其所加記的書籤，即被擦去。
- 您如果拆開了所有的電源，則儲存在存儲器中的所有 Bookmark 都將被擦去。
- 如果連續用充電式電池操作 CD 唱機而在顯示了 “Lo batt”(電池電力弱)也不進行充電時，儲存在存儲器中的所有 Bookmark 也都將被擦去。

使用前須注意

安全須知

 
- 萬一有任何異物或液體掉進 CD 唱機內時，即請立刻卸下電源並找有資格的人檢查過以後才可再操作使用。
- 別試圖用任何物體塞入 DC IN 4.5 V（外部電源輸入）插孔。

電源須知

- 當長期不使用 CD 唱機時，請卸下所有的電源。

AC 電源轉接器須知

- 限使用附帶的 AC 電源轉接器。如果 CD 唱機沒有附帶 AC 電源轉接器，使用 AC-E45HG AC 電源轉接器。請別使用任何其他 AC 電源轉接器。因為可能造成故障。



- 潮濕著手不要去碰 AC 電源轉接器。
- 將 AC 電源轉接器接插到方便的 AC 電源插座。萬一發現 AC 電源轉接器有異常時，請立即從 AC 電源插座上拔下 AC 電源轉接器。

充電式電池和乾電池須知

- 別試圖給乾電池充電。
- 別把電池投入火中。
- 電池不要和硬幣等別的金屬小件混在一起攜帶。因為電池的 +、- 極若與金屬件接觸，將會生熱造成危險。
- 別混用充電式電池和乾電池。
- 別混用新、舊電池。
- 別混用不同類型的電池。
- 長時間不用電池時，請把它卸下保存。
- 電池發生漏液時，須即擦拭乾淨電池室裡沾染的電解液，然後裝用新電池。萬一皮膚上沾染了漏液時，必須趕快洗淨。

CD 唱機須知

- 須保持 CD 唱機上的透鏡乾淨清潔，不要用手觸摸。否則，透鏡可能受損而 CD 唱機將不能操作正常。
- 別在 CD 唱機上堆置重物以免壓壞 CD 唱機或 CD 光碟。
- 別把 CD 唱機放置靠近熱源或可直接照射到陽光，或多沙塵、潮濕、淋到雨、有機械衝擊、不平坦的地方，或緊閉著窗門的汽車裡面。
- 如果 CD 唱機給附近的收音機或電視接收造成干擾，即請關掉 CD 唱機或把它移離開收音機或電視機這些使用。
- 本 CD 唱機不能用於播放不規則形（例如心形，方形，星形）的光碟。若試圖那樣做，將可能損壞您的 CD 唱機。切勿使用該類光碟。

頭戴耳機 / 耳機須知

路上安全

開車、騎車、或在操作任何機動車輛時，請勿使用頭戴耳機 / 耳機。因為可能有造成交通事故的危險。有些地區是禁止使用的。步行中如果用太大聲聽耳機也會有潛在危險的，尤其是在橫越馬路時。在有潛在危險的地方，必須特別注意或暫停使用。

防止損傷聽覺

避免用大音量聽頭戴耳機 / 耳機。最好也不要長時間連續使用。如有耳鳴經歷，更應降低音量和避免連續用耳機聽。

顧慮他人

請用適當的音量聽。如此則仍可聽到周圍的聲音並且不至於騷擾到旁邊的人。

保養

清潔機殼

用清水或溫和的洗滌劑溶液蘸濕軟布擦拭清潔，不可使用酒精、汽油或稀釋劑。

清潔端子

如果端子髒了，可能聽不到聲音或聽到噪音。定期用乾的軟布清潔它們。

故障檢修

雖經檢查過這些徵候而問題仍未獲解決時，即請洽詢附近的 Sony 銷售店。

當按按鈕時，“HOLD”出現在顯示器上，不能播放 CD。

→按鈕被鎖定。把 HOLD 滑回原位。

CD 唱機不能充電。

→停止期間按了 ■/CHG。

 
→按了遙控器上的 ■。請按 CD 唱機上的 ■/CHG。

即使反復按 VOL +，音量也不提高。

→按住 SOUND 直到 “AVLS”從顯示器上消失。

電池室蓋由於意外掉落、過大的力等而脫落。

→如下圖所示把它裝上。

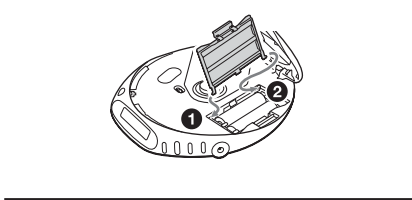

規格

系統

CD 數位聲頻系統

雷射二極管性質

材料：GaAlAs
波長：λ=780 nm
發射持久性：連續
雷射輸出：小於 44.6 μ W（本輸出值是在距離 7 mm 光圈的光學拾音元件的物鏡鏡面 200 mm 處測得。）

電源

您購入型號的區域碼，請查看包裝上的條型碼的左上角。

- 用兩 Sony NH-7WMAA 充電式電池：2.4 V DC
- Sony NH-WM2AA 充電式電池：2.4 V DC
- 兩 LR6（AA，3 號）電池：3 V DC
- AC 電源轉接器（DC IN 4.5 V 插孔）：
 - U，U2，CA，CA2，E92，MX2，TW2 和 CA2/C 型號：120 V，60 Hz
 - CED，CED/4，CE7，CE7/C，EE，EE1，E，E13 和 E13/2 型號：220 230 V，50/60 Hz
 - CEK 型號：230 V，50 Hz
 - AU2 型號：240 V，50 Hz
 - EU8，EU8/C，JE.W，E18，KR4 和 EE8 型號：100 240 V，50/60 Hz
 - HK4 型號：230 V，50 Hz
 - CNA 型號：220 V，50 Hz

尺寸（寬 / 高 / 縱深）(不含突起部分和控制器)

大約 136 × 26 × 150 mm

質量（不含附件）

大約 185 g

操作溫度

5 35

設計和規格有所變更時，恕不另行奉告。

附帶的附件

AC 電源轉接器（1）

帶遙控器的頭戴耳機 / 耳機（1）

充電式電池（2）

電池攜帶盒（1）