

Compact Disc Compact Player

Operating Instructions

About area code

The area code of the Discman you purchased is shown on upper left of the bar code label on the package. For accessories supplied with your Discman, check the area code of your model and refer to "Supplied accessories" toward the end of this manual.



D-465

Sony Corporation ©1996 Printed in Malaysia

Welcome!

Thank you for purchasing the Sony Compact Disc Compact Player. Before operating your Discman, please read this manual and retain it for future reference. For the accessories supplied with your Discman, refer to "Supplied accessories" towards the end of this manual.

Owner's Record

The model and the serial numbers are located at the bottom. Record the serial number in the space provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

Model No. D-465 Serial No. _____

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

CAUTION

The use of optical instruments with this product will increase eye hazard.

INFORMATION

For the customers in the USA

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.


For the customers in Australia

The supply cord of the AC power adaptor cannot be replaced; if the cord is damaged, the AC power adaptor should be discarded.

For the customers not in Poland

The  mark on the unit is valid only for products marketed in Poland.


For the customers not in Europe

 The CE mark on the unit is valid only for products marketed in the European Union.

Playing a CD right away!

If you want to play a CD right now, choose to use your Discman on house current. Other choices are the following three: rechargeable battery, dry batteries (see "Power Sources" on the reverse side) and car battery.

1 Connect

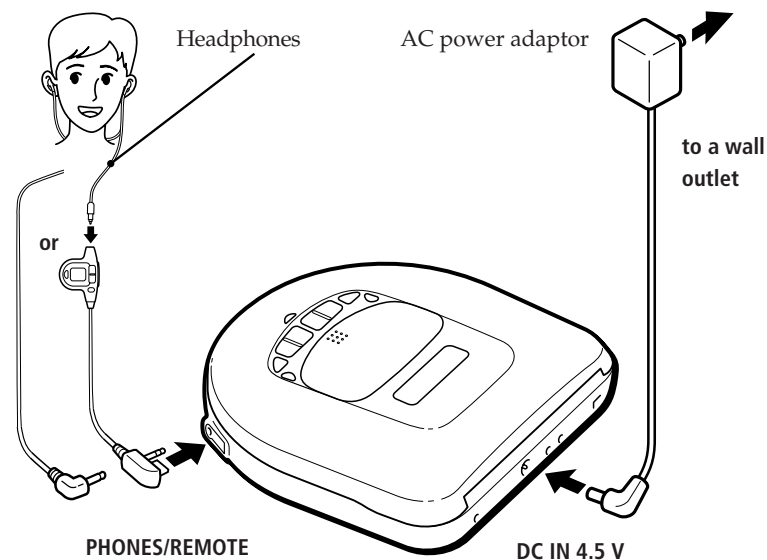


For models supplied with the AC plug adaptor

If the AC power adaptor does not fit the wall outlet, use the AC plug adaptor.


For models supplied with the remote control

- Connect the microplug of the headphones to the remote control, not to the PHONES/REMOTE jack of the Discman.
- Connect the headphones to the remote control firmly. A loose connection may cause noise during playback.

2 Place a CD

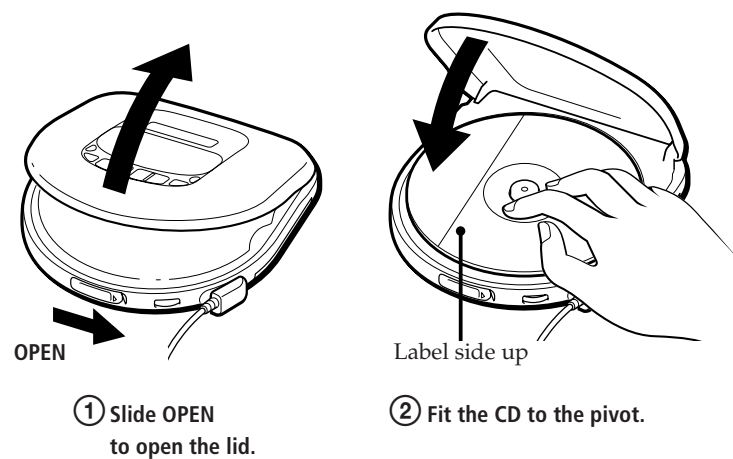

3 Play

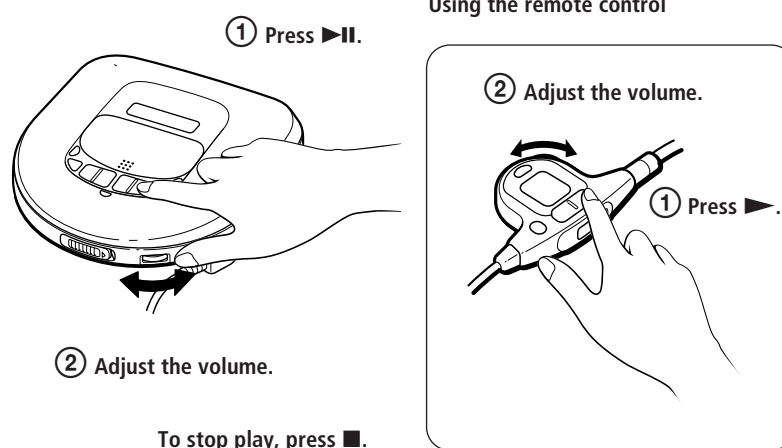


To	Press
Pause (main unit only)	▶
Resume play after pause (main unit only)	▶
Find the beginning of the current track (AMS*)	◀◀ (◀◀ side of ▶▶ on the remote control) once**
Find the beginning of previous tracks (AMS)	◀◀ (◀◀ side of ▶▶) repeatedly**
Find the beginning of the next track (AMS)	▶▶ (▶▶ side of ▶▶) once**
Find the beginning of succeeding tracks (AMS)	▶▶ (▶▶ side of ▶▶) repeatedly**
Go forward quickly	Hold down ▶▶ (▶▶ side of ▶▶)**
Go backwards quickly	Hold down ◀◀ (◀◀ side of ▶▶)**

*AMS = Automatic Music Sensor

**These operations are possible during both play and pause.

To remove the CD

Remove the CD while pressing the pivot.

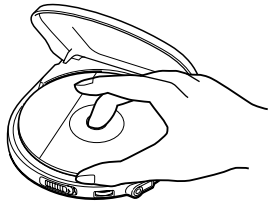

Notes on controlling the volume with the remote control

Set the VOL (volume) control on the remote control to MAX. Then adjust the volume on the Discman to the level that you want to be the maximum volume of the remote control.

Notes on display


- When you press ▶|| or ▶▶ (when RESUME is set to OFF), the total number of tracks in the CD and the total playing time appear for about 2 seconds.
- During play, the track number and the elapsed playing time of the current track appear.
- During pause, the elapsed playing time flashes in the display.
- Between tracks, the time to the beginning of the next track will appear with the “-” indication.

Illumination of the display (main unit and remote control)

When using the unit on the AC power adaptor or car battery, the display is always illuminated. (Light of the display goes out when you press ■ and the CD stops.) When you use the unit on the rechargeable battery or alkaline batteries, the display is illuminated for about 5 seconds when you press any operation button.

Notes on handling CDs

- To keep the CD clean, handle it by its edge. Do not touch the surface.
- Do not stick paper or tape onto the CD.
- Do not expose the CD to direct sunlight or heat sources such as hot air ducts. Do not leave the CD in a car parked under direct sunlight.

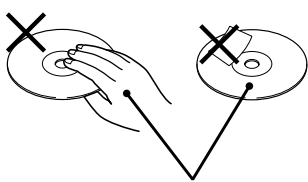


Not these ways

►Other Operations


Playing tracks repeatedly (Repeat Play)

You can play tracks repeatedly in normal, INTRO PGM, shuffle or RMS (Random Music Sensor) play modes. Repeat all the tracks or only one track.

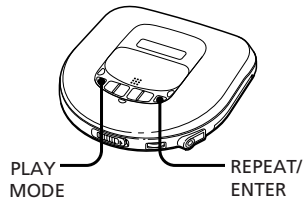

To repeat all the tracks

 Press REPEAT/ENTER during play. The “◁” indication appears.




To cancel repeat play, press REPEAT/ENTER again.


To repeat a single track

1 Press REPEAT/ENTER while the track you want to repeat is playing.

 The “◁” indication appears.



 2 Press PLAY MODE repeatedly until “1” appears.




To repeat another track, press ◀◀ or ▶▶.


To cancel repeat play, press REPEAT/ENTER again.

Playing only the tracks you want (INTRO PGM Play)

You can choose and play your favorite tracks by scanning through the beginning of each track in a CD.

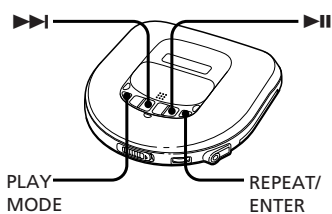

1 During play, press PLAY MODE repeatedly until “INTRO PGM” flashes.

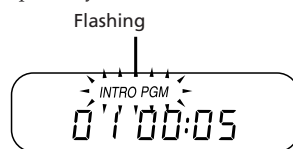

2 Press ▶|| to start scanning. The Discman plays the first 15 seconds of each track and “INTRO PGM” flashes faster.

3 Press REPEAT/ENTER while the track you want is playing. To skip the track, press ▶▶ or just wait for the next track.


After you have gone through the CD, “INTRO PGM” stops flashing and the tracks you have chosen play automatically.

To finish programming before going through the whole CD, press ▶||. The selected tracks will be played.


To cancel INTRO PGM play, press PLAY MODE repeatedly until no play mode is indicated in the display.

Playing tracks in random order (Shuffle Play)

You can play the tracks in a CD in random order.

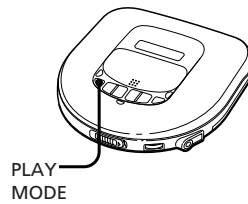

 During play, press PLAY MODE repeatedly until “SHUF” appears. The tracks play in random order.




To cancel shuffle play, press PLAY MODE repeatedly until no play mode is indicated in the display.

Note

- During shuffle play, you cannot return to previous tracks by pressing ◀◀.

Playing tracks in the order you want (RMS play)


You can program up to 22 tracks to play in any order you choose.

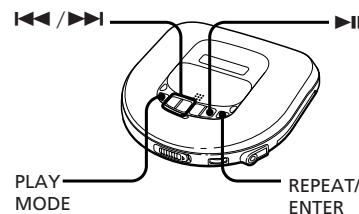

1 During play, press PLAY MODE repeatedly until “RMS” flashes.



2 Press ◀◀ or ▶▶ to choose a track. The track number and the playing order appear.

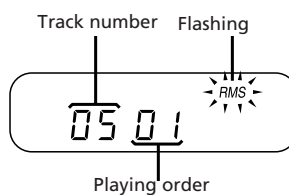

3 Press REPEAT/ENTER to program the track.

4 Repeat steps 2 and 3 to program the remaining tracks.

5 Press ▶||. “RMS” stops flashing and the tracks you have chosen play in the order you specified.

To cancel RMS play, press PLAY MODE until “RMS” disappears.

To check the program

During programming:

Press REPEAT/ENTER before step 5.

During RMS play:

Press PLAY MODE repeatedly until “RMS” flashes, then press REPEAT/ENTER. Each time you press REPEAT/ENTER, the track number and the playing order appear in the order you specified.


Note

- If you program another track after the 22nd track, the first track programmed is cleared and the new track is programmed instead.

Using other functions

To enjoy more powerful bass sound

You can enjoy a powerful bass-boosted sound.

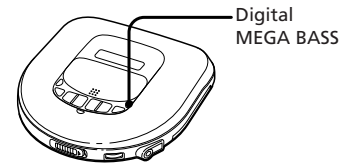


Press Digital MEGA BASS to select BASS ◀ or BASS ▶. BASS ▶ is more effective.

Note


- If the sound is distorted when emphasizing bass, turn down the volume.

To prevent sound from skipping (ESP)

The ESP (Electronic Shock Protection) function prevents the sound from skipping by using a buffer memory that stores music data for about 20 seconds. Use this function when listening in a car or during a walk.

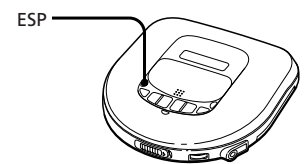

Press ESP. The ESP indication appears.

 


Notes

- Playing may stop when the Discman gets a strong shock even with the ESP function on.
- You may hear a noise or sound skip when:
 - listening to a dirty or scratched CD,
 - listening to an audio test CD or,
 - the Discman receives continuous shock.
- Sound may drop for a while if you press ESP during play.
- When you use an optical digital connecting cord, the ESP function will be disabled.



To lock the buttons

Close the hold cover to avoid accidental operation of the main unit. Slide the HOLD switch in the direction of the arrow to avoid accidental operation of the remote control.

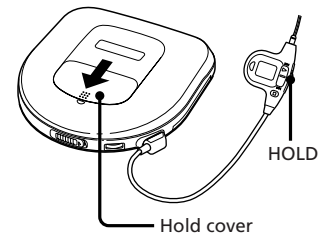

To protect your hearing (AVLS)

 The AVLS (Automatic Volume Limiter System) function keeps down the maximum volume to protect your ears.

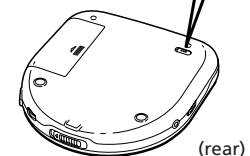

Set AVLS to LIMIT.

The AVLS indication appears.




Note

- If the sound is distorted when you listen to the bass-boosted sound with the AVLS function, turn down the volume.

Continue to the reverse side →

To resume playing from the point you stopped the CD (Resume Play)

Normally, every time you stop and play, playing starts from the beginning of the CD. The resume play function, however, let you listen to from the point at which you last turned off the Discman.

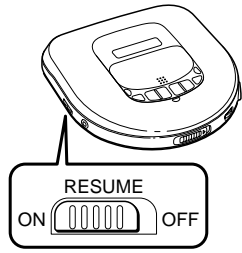

Set RESUME to ON.

To cancel resume play, set RESUME to OFF.

Notes

- Even if RESUME is set to ON, playing starts from the beginning when you open the lid.
- The resume point may be inaccurate by about 30 seconds.

To turn off the beep

You can turn off the beep that sounds as you operate your Discman.

Disconnect the power source (AC power adaptor, rechargeable battery or alkaline batteries). While you press and hold down ■, connect the power source again. To make the beep sound again, disconnect the power source, and then connect it without pressing ■.

To put off the illumination of the display


When you operate your Discman with a rechargeable battery or alkaline batteries, you can put off the illumination of the display on the main unit and the remote control.

While you press and hold down PLAY MODE, insert a rechargeable battery or alkaline batteries.

Connecting to other stereo equipment

You can listen to the CD through other stereo equipment or record a CD on a cassette tape or a MiniDisc. Refer to the instruction manual of the other equipment for details. Before making connections, turn off each piece of equipment.


Using the connecting cord

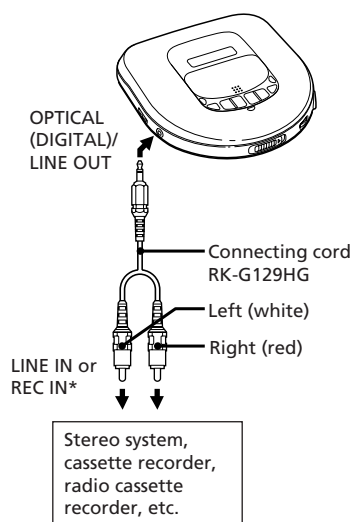

Note

- When you use a connecting cord, the Digital MEGA BASS function will be disabled.

Using the optical digital connecting cord

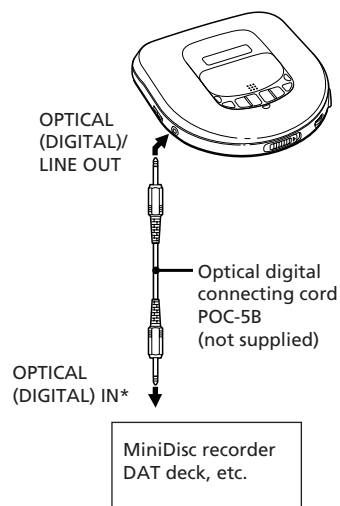

*If the OPTICAL (DIGITAL) IN jack is square-shaped, use the POC-5AB optical digital connecting cord instead.

Notes


- When you use digital equipment with your Discman, use the AC power adaptor. If you use a rechargeable battery or alkaline batteries, the optical digital signal will not be output from the Discman. (Unexpected phenomena may occur, for instance, you cannot record a CD on connected equipment.)
- Digital MEGA BASS can be output from the PHONES/REMOTE jack, but not from the OPTICAL (DIGITAL)/LINE OUT jack.
- When you use an optical digital connecting cord, the ESP function will be disabled.

Notes

- Before you play the CD, turn down the volume of the connected equipment so as not to damage the connected speakers.
- The beep sound is not output from the OPTICAL (DIGITAL)/LINE OUT jack.
- When you connect other equipment to the OPTICAL (DIGITAL)/LINE OUT jack, you cannot adjust the volume by this unit.
- When you record a CD on a cassette tape using a tape recorder that has the blank search function, release the ESP function. If the ESP function is on, the blank search function does not work.

Playing a CD in a car

You can use your Discman in a car as illustrated below.

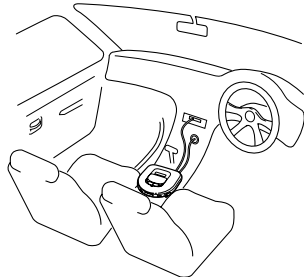

To connect your Discman to a car cassette deck, you need the following accessories:

- Car connecting pack CPA-9
- Car battery cord DCC-E245 or,
- Mount kit CPM-300PC (Mount plate + Car connecting pack + Car battery cord)
- Car battery cord with car connecting pack DCC-E26CP

Refer to the instruction manual of each accessory for details.

When you use the CPM-300PC mount kit/CPM-300P mount plate

Attach the car mount adaptor supplied to the CPM-300PC/300P before installing the Discman.

Notes

- Do not put the Discman on the dashboard.
- Do not leave the Discman in a car parked under sunlight.
- Use a Sony car connecting pack for reducing noise.


Switched ignition function

With this feature, your Discman stops automatically when you turn off the engine of the car. (This function is not possible with some cars depending on the model).

Using the remote control

For the customers supplied with the remote control

You can use the remote control as the wired remote control.

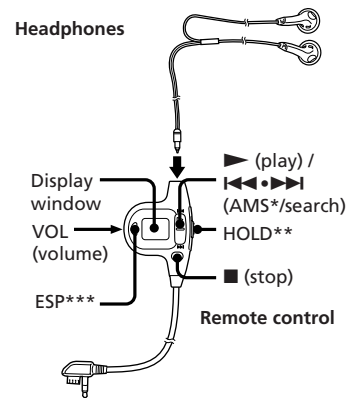


* Automatic Music Sensor

**When you are not using the remote control, slide HOLD in the direction of the arrow. To unlock, slide HOLD back.

***Electronic Shock Protection

Display window

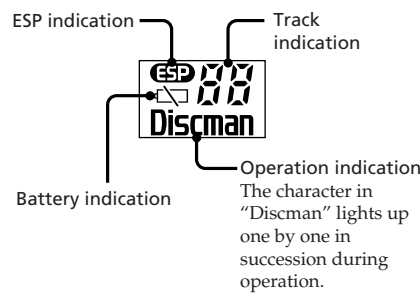

Note

- Use only the supplied remote control. You cannot operate this unit with the remote control supplied with other models.


Power Sources

Using rechargeable battery


Charge the rechargeable battery before using it for the first time.

You can use either BP-DM10 or BP-DM20 rechargeable battery for this unit. You can use them in the same way, but their charging time and battery life are different. Check the model number of your rechargeable battery, and use it.


- 1 Open the lid of the battery compartment.

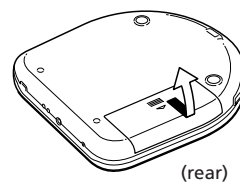

- 2 Insert the rechargeable battery so that the word "SONY" is facing the same direction as illustrated inside the lid, and close the lid.

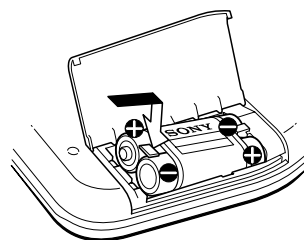

- 3 Connect the AC power adaptor. The indication "CHG" lights up. Charge for about 2 hours (for BP-DM10) or 3 hours (for BP-DM20). (If the battery has been already charged, "CHG" and flash.)

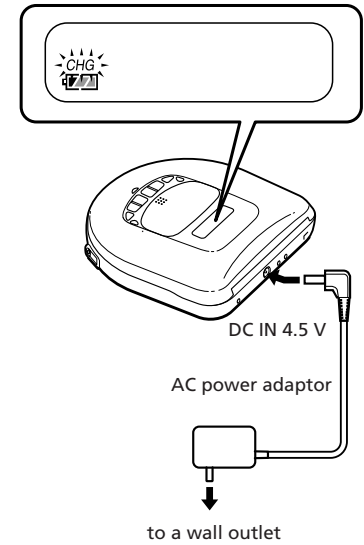

- 4 When fully charged, "CHG" disappears. Disconnect the AC power adaptor.

When to charge the battery


When the battery becomes weak, indication appears in the display. If the battery is used up, "Lo bāt+" appears in the display. Charge the rechargeable battery. To keep the original battery capacity for a long time, recharge the battery when the battery is used up (discharged).

Notes


- Charging time varies depending on how the rechargeable battery is used.
- If the battery is new or has not been used for a long time, it may not be charged completely until you charge and discharge it several times.
- If the battery life becomes shorter by about half, replace it with Sony BP-DM10 or BP-DM20 rechargeable battery. Do not use any other rechargeable battery (R6 type rechargeable battery, etc.).

Using dry batteries

- 1 Open the lid of the battery compartment.

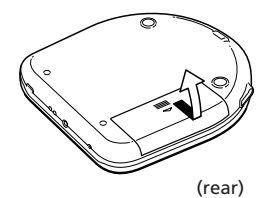

- 2 Insert two LR6 (size AA) alkaline batteries by matching the ⊕ and ⊖ to the diagram inside the battery compartment and close the lid.

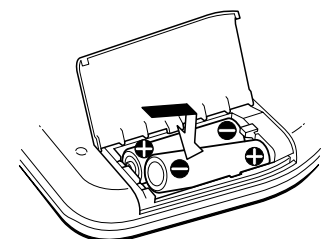

When to replace the dry batteries

When the batteries become weak, indication appears in the display. If the batteries are used up, "Lo bāt+" appears in the display. Replace all the batteries with new ones.


Notes

- Do not charge the dry batteries.
- Do not mix new batteries with old ones.
- Do not use different types of batteries together.
- Do not use manganese batteries for this unit.


Using the battery case

You can use the unit for longer time by using the battery case, in addition to the rechargeable battery or batteries in the battery compartment of the unit. Batteries in the battery case and the rechargeable battery or batteries in the battery compartment are consumed together.


- Hook the battery case onto the Discman and fasten the screw.

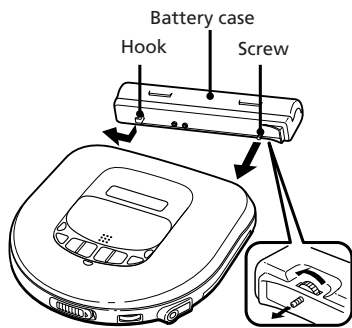

- Open the lid of the battery case.

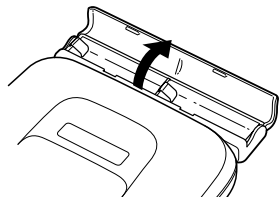

- Insert two LR6 (size AA) alkaline batteries by matching the ⊕ and ⊖ to the diagram inside the battery case and close the lid.

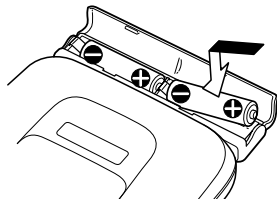

Battery life (approx. hours)

When using	ESP function	
	off	on
BP-DM20 (charged for 3 hours maximum*)	10	7
Two alkaline batteries	18	13
BP-DM10 (charged for 2 hours maximum*)	5	3,5
BP-DM20 + Battery case (two alkaline batteries)	28	22
Two alkaline batteries + Battery case (two alkaline batteries)	40	30
BP-DM10 + Battery case (two alkaline batteries)	23	18

(When the unit is used on a flat and stable place)
*Charging time varies depending on how the rechargeable battery is used.

Additional Information

Precautions

On safety

- Should any solid objects or liquid fall into the unit, unplug it and have it checked by qualified personnel before operating it any further.
- Do not put any foreign objects in the DC IN 4.5 V (external power input) jack.

On power sources

- When you are not using the unit for a long time, disconnect all power sources from the unit.
- The nameplate indicating operating voltage, power consumption, etc. is located at the bottom of the AC power adaptor (for Middle East only.)

On the AC power adaptor

- Use only the supplied AC power adaptor. If your unit is not supplied with it, use AC-E45HG AC power adaptor. Do not use any other AC power adaptor.

Polarity of the plug



- To unplug the AC power adaptor from the wall outlet, grasp the adaptor itself, do not pull its cord.

On dry and rechargeable batteries

- Do not throw the batteries into fire.
- Do not carry the rechargeable battery with coins or other metallic objects. It can generate heat if the positive and negative terminals of the battery are accidentally contacted by a metallic object.

On the unit

- Keep the lens on the unit clean and do not touch it. If you do so, the lens may be damaged and the unit will not operate properly.
- Do not put any heavy object on top of the unit. The unit and the CD may be damaged.
- Do not leave the unit in a location near heat sources, or in a place subject to direct sunlight, excessive dust or sand, moisture, rain, mechanical shock, unlevelled surface, or in a car with its windows closed.
- If the unit causes interference to the radio or television reception, turn off the unit or move it away from the radio or television.
- Do not wrap the unit in a cloth or blanket during use as it may cause malfunction or serious accidents.

On headphones

Road safety

Do not use headphones while driving, cycling, or operating any motorized vehicle. It may create a traffic hazard and is illegal in some areas. It can also be potentially dangerous to play your headsets at high volume while walking, especially at pedestrian crossings. You should exercise extreme caution or discontinue use in potentially hazardous situations.

Preventing hearing damage

Avoid using headphones at high volume. Hearing experts advise against continuous, loud and extended play. If you experience a ringing in your ears, reduce volume or discontinue use.


Caring for others

Keep the volume at a moderate level. This will allow you to hear outside sounds and to be considerate to the people around you.

Maintenance

To clean the lens

Clean the lens with a lens cleaning kit KK-DM1.

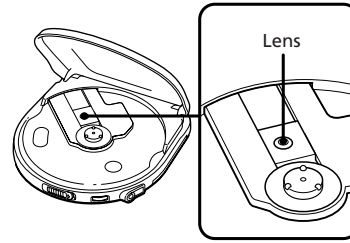

To clean the casing

Use a soft cloth slightly moistened in water or a mild detergent solution. Do not use alcohol, benzene or thinner.

Troubleshooting

Should any problem persist after you have made these checks, consult your nearest Sony dealer.

The CD does not play or "no disc" appears in the display though a CD is placed in the unit.

- The CD is dirty or defective.
- Insert the CD with the label side up.
- Moisture condensation has occurred. Leave the unit aside for several hours until the moisture evaporates.
- The lens is dirty.
- Close the lid of the unit and the battery compartment firmly.
- Make sure the batteries are inserted correctly.
- Connect the AC power adaptor to a wall outlet securely.

When you press ►II, "00" appears in the display for a moment, and disappears. The CD does not play.

- Rechargeable battery or dry batteries are used up. Charge the rechargeable battery or replace dry batteries with new ones.

No sound, or noise is heard.

- Connect the plugs firmly.
- Plugs are dirty. Clean the plugs with a dry soft cloth periodically.

"Hi disc" appears in the display.

- Use only the supplied AC power adaptor or recommended AC power adaptor AC-E45HG (not supplied).

You cannot operate the unit when you press a button on the remote control.

- The buttons are locked. Slide HOLD back in the direction of the arrow.

"Low battery" appears in the display when you press a button.

- The rechargeable battery is used up completely. Connect the AC power adaptor and charge the battery.
- The dry batteries are used up. Replace them with new ones.

The battery life is short.

- Manganese batteries are used. Use alkaline batteries.
- Replace the batteries with new ones.

The volume is limited to a certain level even if you attempt to turn it up.

- AVLS selector is set to LIMIT. Set it to NORM.

Specifications

System

Compact disc digital audio system

Laser diode properties

Material: GaAlAs
Wavelength: $\lambda = 780 \text{ nm}$
Emission duration: Continuous
Laser output: Less than $44.6 \mu\text{W}$ (measured at 200 mm away from the objective lens surface)

Error correction

Sony Super Strategy Cross Interleave Reed Solomon Code

D-A conversion

1-bit quartz time-axis control

Frequency response

20 - 20,000 Hz $\pm 1 \text{ dB}$ (measured by ELAJ CP-307)

Output (at 4.5 V input level)

Headphones (stereo minijack)
15 mW + 15 mW at 16 ohms
Line output (stereo minijack)
Output level 0.6 V rms at 50 kilohms
Recommended load impedance over 10 kilohms
Optical digital output (optical output connector)
Output level: -21 - -15 dBm
Wavelength: 630 - 690 nm at peak level

General

Power requirements

- Sony BP-DM10 Rechargeable battery: 2.4 V DC, Ni-Cd, 650 mAh
- Sony BP-DM20 Rechargeable battery: 2.4 V DC, Ni-MH, 1,200 mAh
- Two LR6 (size AA) batteries: 3 V DC
- AC power adaptor (DC IN 4.5 V jack):
U2.CA2.E92: 120 V, 60 Hz
CED.E13.CN1: 220 - 230 V, 50 Hz
CEK: 230 - 240 V, 50 Hz
EA3: 110 - 240 V, 50/60 Hz
AU2: 240 V, 50 Hz
JEW.E33: 100 - 240 V, 50/60 Hz
- Sony CPM-300P mount plate for use on car battery: 4.5 V DC

Dimensions (w/h/d) (without projecting parts and controls)

Approx. 132 × 29.9 × 135.6 mm
(5 1/4 × 1 1/16 × 5 3/8 in.)

Mass (without rechargeable battery)

Approx. 260 g (9.2 oz)

Operating temperature

5°C - 35°C (41°F - 95°F)

Supplied accessories

- AC power adaptor (1)
- Stereo headphones with remote control (1)*
- Stereo headphones (1)**
- Rechargeable battery (1)
- Battery case (1)*
- Connecting cord (Phono plug × 2 ↔ stereo miniplug) (1)***
- Carrying case (1)
- *Not supplied with U2 model
- **Supplied with U2 model
- ***Not supplied with JEW, CED and CEK model

Design and specifications are subject to change without notice.

Recommended accessories

- Mount plate CPM-300P
- Mount kit CPM-450PC*
- Mount kit CPM-300PC
- Car connecting pack CPA-9
- Car battery cord with car connecting pack DCC-E26CP
- Car battery cord DCC-E245
- Active speaker system SRS-A21, SRS-A41, SRS-A71
- Rechargeable battery BP-DM10, BP-DM20
- Connecting cord RK-G129HG
- Optical digital connecting cord POC-5B, POC-10B, POC-15B, POC-5AB, POC-10AB, POC-15AB
- AC power adaptor AC-E45HG
- Stereo headphones MDR-35, MDR-E848
- *Sold in Japan only

Your dealer may not handle some of the above listed accessories. Please ask the dealer for detailed information about the accessories in your country.