

Please refer to the illustrations in the Japanese instruction manual as indicated in each section.

Table of Contents

Index to Parts and Controls 3

Getting Started

Step 1: Installing the Battery 4

Step 2: Setting the Clock 5

Basic Operations

Recording Messages 6

Playing Back Messages 7

Erasing Messages 9

Organizing the Files

Renumbering the Messages according to their Priority — Priority Marks 10

Moving Messages to a Different File — Move Function 11

Dividing a Message into Two — Index Function 12

Other Functions

Adjusting the Playback Speed 14

Adding a Recording to a

Previously Recorded Message 14

Playing Back a Message at a

Desired Time with an Alarm 15

Preventing Accidental Operation

— HOLD function 17

Selecting the Recording Mode 17

Turning off the Beep Sound 18

Selecting the Microphone

Sensitivity 18

Playing Back All Messages in a File

Continuously 19

Selecting the Illumination Mode of

LCD Back Light 19

Additional Information

Precautions 20

Specifications 21

Troubleshooting 22

Menu map 62

Index to Parts and Controls

The numbers are keyed to the illustrations on pages 42 and 43 in the Japanese instruction manual.

Main unit

- 1 VOL (volume) control
- 2 PRIORITY button
- 3 FILE button
- 4 ►■PLAY/STOP (Play/stop•enter) button
- 5 INDEX button
- 6 -I◀◀/▶▶I+ (fast forward/fast backward•Selection of menu mode) button
- 7 STOP button
- 8 HOLD switch
- 9 PLAY SPEED selector
- 10 MENU button
- 11 MIC (built-in microphone)
- 12 Display window
- 13 OPR (operation) indicator
- 14 ERASE button
- 15 REC (record) START/STOP button
- 16 Speaker
- 17 EAR (earphone) jack
- 18 Hand strap

Display window

- 1 Total number of messages in a file
Mode indication of the menu (On, OFF, etc.)
- 2 File indication
- 3 Current message number
- 4 Priority marks

- 5 Remaining recording time indication
Recording date indication
Current time/day indication (15:30 TUE, etc.)
Menu indication (ALARM, etc.)
Messages (ERASE, SCAN, etc.)
- 6 Alarm indicator
- 7 Recording mode indication
- 8 Battery exhausted indicator
- 9 Repeat play indicator
- 10 REMAIN indication
- 11 REC DATE indication

▶ Getting Started

Step 1: Installing the Battery

See the illustrations on page 8 in the Japanese instruction manual.

- 1 Slide and lift the battery compartment lid.
- 2 Insert a size AAA (LR03) alkaline battery with correct polarity, and close the lid.


To take out the battery

Take out the battery by pushing the ⊖ side of it as illustrated on page 8 in the Japanese instruction manual.

If the battery compartment lid is accidentally detached, attach it as illustrated on page 8 in the Japanese instruction manual.

Clock setting display appears when you insert battery for the first time, or when you insert battery after the unit has been without battery for a certain period of time. Please refer to Steps 2 to 4 in “Step 2: Setting the Clock” on page 5 to set the date and time.

Replacing the battery

“” appears on the display when the battery becomes weak and it flashes when the battery is exhausted. Replace the battery with a new one.

Battery life*

With continuous use, approx. 10 hours recording/5 hours playback

- * Using Sony alkaline battery LR03 (SG)
- * Using in LIGHT OP mode, playing back through the internal speaker with VOL control at around 3

The battery life may shorten depending on the operation of the unit.

Notes

- Do not use manganese batteries for this unit.
- When you replace the battery, insert the new one within 3 minutes after you removed the exhausted one. Otherwise, the display may show the clock setting display or incorrect date and time when you reinsert the battery. In this case, set the date and time again. The recorded messages, however, will remain.
- Do not charge a dry battery.
- When you are not going to use the unit for a long time, remove the battery to prevent damage from battery leakage and corrosion.

Step 2: Setting the Clock

Clock setting display appears when you insert battery for the first time, or when you insert battery after the unit has been without battery for a certain period of time. In this case, proceed from step 2.

See the illustrations on pages 10 and 11 in the Japanese instruction manual.

- 1** Display the clock setting display.
 - ① Press MENU to enter the menu mode.
 - ② Press **←←** once to display "SET DATE".
 - ③ Press **▶■**PLAY/STOP.
The year digits will flash.

- 2** Set the date.
 - ① Press **←←** or **▶▶+** to select the digits of the year.
 - ② Press **▶■**PLAY/STOP.
The month digits will flash.
 - ③ Set the month and day in sequence, then press **▶■**PLAY/STOP.
The hour digits will flash.

- 3** Set the time.
 - ① Press **←←** or **▶▶+** to select the digits of the hour.
 - ② Press **▶■**PLAY/STOP.
The minute digits will flash.
 - ③ Set the minute.

- ④ Press **▶■**PLAY/STOP at the time signal.
The display will return to "SET DATE".

- 4** Press MENU to exit from the menu mode.

► Basic Operations

Recording Messages


You can record up to 99 messages in each file (A, B and C).

Since a newly recorded message is automatically added behind the last recorded message, you can start recording quickly without searching for the end of the last recording.

See the illustrations on pages 12 and 13 in the Japanese instruction manual.

- 1 Press FILE repeatedly until the the desired file is displayed.

Current file

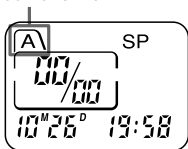

- 2 Start recording.
 - ① Press REC START/STOP.
 - ② Speak to the built-in microphone.

During recording, the OPR indicator lights up in red. You do not need to keep pressing REC START/STOP while recording.

- 3 Press REC START/STOP again to stop recording. The unit stops at the beginning of the current recording.

If you do not change the file after you stop recording, the next time you record you will record in the same file.

To listen to the current recording

Press REC START/STOP to stop recording, then press ► ■PLAY/STOP.

To review the current recording instantly

Press ► ■PLAY/STOP during recording.

To stop recording

You can also stop recording by pressing STOP instead of REC START/STOP.

To display the remaining recording time

During recording, the remaining recording time is displayed under REMAIN.

To display it during stop, press STOP for more than one second.

Tips

- You can record for up to 32 minutes in SP (standard play) mode and 64 minutes in LP (long play) mode. If you record messages in a mixture of SP and LP modes, the recordable time varies from 32 to 64 minutes. To change the recording mode, see page 17.
- You can select the microphone sensitivity. See page 18.

Notes

- When the remaining time of recording reaches 1 minute, the remaining time and "END" will flash one after the other in the display window. When the display is full, recording automatically stops and "FULL" will flash in the display window with an alarm sound. To continue recording, first erase some of the messages. (Page 9)
- If you press REC START/STOP when the memory is full, "FULL" will flash with an alarm sound. Erase some of the messages before you start recording again. (Page 9)
- If you press REC START/STOP after you have recorded 99 messages, "FULL" will flash with an alarm sound. Select another file or erase some of the messages. (Page 9)

Note on recording

Noise may be recorded if an object, such as your finger, etc., accidentally rubs or scratches the unit during recording.

Playing Back Messages


When playing back a previously recorded message, start from Step 1.

When playing back a message you have just finished recording, start from Step 3.


See the illustrations on pages 15 and 16 in the Japanese instruction manual.

- Press FILE repeatedly until the desired file is displayed.

Current file

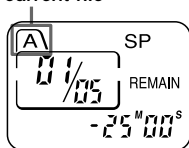

- Press \lll or \ggg to display the desired message number. Press \ggg for larger message number and press \lll for smaller message number. Selected message number

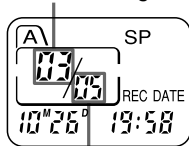

Total number of messages in the current file **Continued**

- 3** Press **▶■**PLAY/STOP to start playback.

During playback, the OPR indicator lights up in green.

After playing back one message, the unit stops at the beginning of the next message.

When the last message on a file has been played back, the unit stops at the beginning of the last message.

- 4** Turn VOL to adjust the volume.

To stop playback

To	Do this
stop at the beginning of the current message	Press STOP.
stop at the position	Press current ▶■ PLAY/STOP. To resume playback from that point, press ▶■ PLAY/STOP again.

Other operations

To	Do this
skip to the next message	Press ▶▶+ .
skip to the previous message	Press -◀◀ .
search forward during playback	Keep ▶▶+ pressed.
search backward during playback	Keep -◀◀ pressed.

Playing back a message repeatedly — Repeat Play

During playback, press **▶■**PLAY/STOP for more than one second.

“↺” will be displayed and the selected message will be played back repeatedly until you stop playback by pressing STOP.

Playing the beginning of each message — Scanning Play

During stop mode, press **▶■**PLAY/STOP for more than one second.

“SCAN” will be displayed in the display window and the first 5 seconds of each message in the selected file will be played back. When you find the desired message, press **▶■**PLAY/STOP.

The message will be played back until the end.

For private listening

Connect an earphone (not supplied) to the EAR jack. The built-in speaker will be automatically disconnected.

Erasing Messages

You can erase the recorded messages one by one or all messages in a file at a time. Note that once a recording has been erased, you cannot retrieve it. See the illustrations on pages 18 and 19 in the Japanese instruction manual.

Erasing messages one by one

When a message is erased, the remaining messages will advance and renumbered so that there will be no space between messages.

- 1** Press ERASE while playing back the message you want to erase or press ERASE for more than 1 second during stop mode.
A beep will sound and the message number and "ERASE" will flash while the first and last 5 seconds of the message is played back 10 times.

- 2** Press ERASE while the message is being played back.
The message is erased and the remaining messages will be renumbered.

To cancel erasing

Press STOP before step 2.

To erase other messages

Repeat steps 1 and 2.

Erasing all messages in a file

- 1** Press FILE to select the file you want to erase.
- 2** Press ERASE and STOP at the same time for more than 1 second.
The file, the message number and "ALL ERASE" will flash.
- 3** Press ERASE.

To cancel erasing

Press STOP before step 3.

► Organizing the Files

Renumbering the Messages according to their Priority — Priority Marks

Usually the recorded messages are lined up in the order of recording. By adding priority marks (★) to important messages, you can renumber the messages in the order of their priority. You can add up to three priority marks with “★★★” being the most important. See the illustrations on pages 20 and 21 in the Japanese instruction manual.

During stop mode

- 1 Press **◀◀** or **▶▶** select the desired message.
- 2 Press **PRIORITY** to display ★.
Every time you press **PRIORITY**, the display changes in the following order:
★ → ★★ → ★★★ → no mark.

During playback

- 1 Press **PRIORITY** so that ★ and **PRIORITY** flash.
The first and last 5 seconds of the message will be played back.
- 2 Press **PRIORITY** repeatedly to select the number of the

priority marks.

- 3 Press **▶** **■PLAY/STOP**.

How the messages are arranged

The messages with priority marks are rearranged according to the number of the marks.


Messages with no priority marks are placed after those with priority marks.

During stop mode, messages are rearranged every time a priority mark is added. During playback, messages are rearranged after you press **▶** **■PLAY/STOP**.


The messages with the same number of priority marks are arranged in the order of recording.

e.g. When there are 3 messages in a file, they are arranged as follows:


Message 1

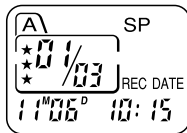

Message 2

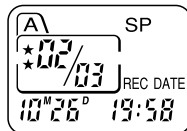

Message 3

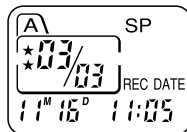

Notes

- While messages are being rearranged, "--" is displayed in the message number display.
- If you do not press ►■PLAY/STOP while the first and last 5 seconds of the message are played back, the display will return to the REMAIN display. In this case, start the procedure from the beginning.

Moving Messages to a Different File — Move Function

You can move recorded messages to a different file.

See the illustrations on pages 22 and 23 in the Japanese instruction manual.

e.g. To move the seventh message in the file A to the file C

- 1 Play back the message you want to move.
- 2 Press FILE during playback to select the file you want to move the message to. The file and "MOVE" will flash and the first and last 5 seconds of the message will be played back 10 times.
- 3 Press ►■PLAY/STOP.

To cancel moving the message(s)

Press STOP before step 3.

Notes

- The move function does not duplicate a message in another file. When you move a message to another file, the one in the previous file will be deleted.
- If you do not press ►■PLAY/STOP while the first and last 5 seconds of the message are played back, the display will return to the REMAIN display. In this case, start the procedure from the beginning.


Dividing a Message into Two — Index Function

You can divide a message by adding an index during recording or playback. By dividing a message, you can easily find the point you want to play back when you make long recording such as a meeting.

When you add an index, The message numbers will increase as follows.

See the illustrations on pages 24 and 25 in the Japanese instruction manual.

Before adding an index

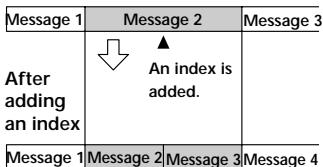

The first item on the agenda is...

 
The message numbers increase.

We now proceed to the next subject.

To mark an index during recording

While recording a message, press INDEX at the point you want to mark.

The new message number flashes three times at the point you pressed INDEX. The message will be divided in two messages, however, those messages will be recorded without a break.



To mark an index during playback

While playing back a message, press INDEX at the point you want to mark.

The message is divided in two and the new message number flashes three times.

An index mark is added and the following index numbers will increase by one.

To play the message you marked an index

Press -I◀◀ or ▶▶I+ to display the message number as the divided messages have each message numbers.

To play the divided message continuously

Select “On” for “CONT” as described in “Playing Back All Messages in a File Continuously” on page 19.

Note

When recording with an IC recorder, the following symptoms may occur because of the limitation of the system, however, they are not malfunctions.

- You cannot add an index in the first or the last 4 seconds (8 seconds in LP mode) of a message.
- If you add indexes frequently, the unit may become unable to add indexes.

► Other Functions

Adjusting the Playback Speed

You can adjust the speed of the playback with the use of the PLAY SPEED selector on the bottom. See the illustrations on page 26 in the Japanese instruction manual.

To play back rapidly

Set PLAY SPEED to FAST.

“FAST” will flash three times in the display window and the playback speed will increase about 30%.

To play back slowly

Set PLAY SPEED to SLOW.

“SLOW” will flash three times in the display window and the playback speed will decrease about 15%.

To play messages with normal speed


Set PLAY SPEED to NORMAL.

Adding a Recording to a Previously Recorded Message

You can add a recording to the message being played back. The added recording will be placed after the current message and counted as a part of the message.

See the illustrations on page 27 in the Japanese instruction manual.

During playback of Message 3

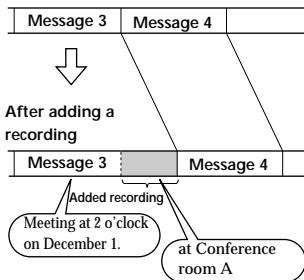

- 1 During playback, press REC START/STOP for more than 1 second.
The OPR indicator lights in red and “R-PLUS” flashes three times.
Speak into the built-in microphone.
The display will then change to the remaining recording time.
- 2 Press REC START/STOP again to stop the recording.

To stop recording

You can also stop recording by pressing STOP instead of REC START/STOP.

Playing Back a Message at a Desired Time with an Alarm

You can sound an alarm and start playback of a selected message at a desired time.

See the illustrations on pages 28, 29 and 30 in the Japanese instruction manual.

- 1 Use FILE and $\text{◀◀}/\text{▶▶}$ to select the file and the message you want to play back.
- 2 Enter the alarm setting mode.
 - ① Press MENU.

The unit enters the menu mode and "ALARM OFF" will be displayed. (If "ALARM On" is displayed, the alarm has been set. If you do not wish to change the setting, press MENU and exit the menu mode.)

Note

"ALARM OFF(On)" will not appear and the alarm cannot be set if the clock has not been set or no message has been recorded in the selected file.

- ② Press $\text{▶} \blacksquare \text{PLAY/STOP}$.
"OFF" starts to flash.
- ③ Press ◀◀ or ▶▶ to flash "On".
- ④ Press $\text{▶} \blacksquare \text{PLAY/STOP}$.
"DATE" will flash in the display window.

- 3 Set the alarm date.
 - to play back on a desired date

(the message will be played back at the same time on the same date every year until you erase the message)

- ① Press $\text{▶} \blacksquare \text{PLAY/STOP}$ when "DATE" flashes.
The month digits will flash.
- ② Press ◀◀ or ▶▶ to select the month digits and press $\text{▶} \blacksquare \text{PLAY/STOP}$.
The day digits will flash.
- ③ Press ◀◀ or ▶▶ to select the day digits.

- to play back once a week

Press ◀◀ or ▶▶ to select the day of the week.

- to play back at the same time every day

Press ◀◀ or ▶▶ to select "DAILY".

- 4 Press $\text{▶} \blacksquare \text{PLAY/STOP}$.
The hour digits will flash.
- 5 Set the alarm time.
 - ① Press ◀◀ or ▶▶ to select the hour digits and press $\text{▶} \blacksquare \text{PLAY/STOP}$.
The minute digits will flash.

- ② Press -◀◀ or ▶▶+ to select the minute digits and press ▶■PLAY/STOP.

“ALARM On” and “(●)” will be displayed to indicate that the setting has been completed.

- 6 Press MENU to exit the menu mode.

“(●)” is displayed when the number of the message with alarm setting is selected.

At the set time, the alarm will sound for about 10 seconds and the selected message will be played back.

During playback, “ALARM” will flash in the display window.

Playback will stop at the end of the message.

To cancel the alarm setting before the playback starts

Press STOP while the alarm sound is heard. You can stop even when the HOLD function is activated.

Notes

- You cannot set the alarm if you have not set the clock or there is no message in the selected file (the unit will not enter the alarm setting mode when you press MENU in Step 2 on page 15).
- If you try to set the alarm to play back a message at a previously set time on another message, “PRE SET” will be displayed, preventing new settings.
- If the alarm time comes while another message is being played back with an alarm, the playback stops and the new message will be played back.
- If the alarm time comes during recording, alarm will sound for 10 seconds after the recording is finished and playback begins. “(●)” will flash when the alarm time comes.
- If more than one alarm time comes during recording, only the first message will be played back.
- When the alarm time comes when the unit is in the menu mode, alarm will sound and the menu mode will be cancelled.
- If you erase the message you set the alarm to play back, the alarm setting will be cancelled.
- You can adjust the playback volume with the VOL control.
- If the alarm time comes during erasing, alarm will sound for 10 seconds after the erasing is finished and playback begins.
- Alarm setting will not be cancelled when the alarm playback finishes. To cancel alarm setting, see below.

To cancel the alarm setting or change the alarm time

- 1 Select the message you set the alarm to play back, and press MENU.
“ALARM On” will be displayed.
- 2 Press ►■PLAY/STOP to flash “On”.
- 3 To cancel the alarm setting: Press ►►I+ to flash “OFF” and press ►■PLAY/STOP. To change the alarm date and time: Press ►■PLAY/STOP. When the alarm date is displayed, follow the steps 3 to 5 on pages 15 and 16 to change the alarm date and time.
- 4 Press MENU to exit the menu mode.

Preventing Accidental Operation — HOLD function

See the illustrations on page 32 in the Japanese instruction manual. Slide the HOLD switch in the direction of the arrow. “HOLD” will flash three times, indicating that all the functions of the buttons are locked, except for STOP to stop an alarm.

To cancel the HOLD function, simply slide the HOLD switch in the opposite direction.

Note

When the HOLD function is activated during recording, cancel the HOLD function first to stop recording.

Selecting the Recording Mode

See the illustrations on page 33 in the Japanese instruction manual.

MODE SP: You can make up to 32 minutes of recording with better sound.

MODE LP: You can make up to 64 minutes of recording.

- 1 Press MENU to enter the menu mode.
- 2 Press -I◀◀ or ►►I+ to display “MODE” and press ►■PLAY/STOP.
“SP (or LP)” will flash.
- 3 Press -I◀◀ or ►►I+ to select “SP” or “LP” and press ►■PLAY/STOP. Now the setting is completed.
- 4 Press MENU to exit the menu mode.

Turning off the Beep Sound

See the illustrations on page 34 in the Japanese instruction manual.

BEEP On: A beep will sound to indicate that operation has been accepted.

BEEP OFF: No beep sound will be heard except for the alarm and timer.

- 1 Press MENU to enter the menu mode.
- 2 Press **←|←|←|** or **→|→|→|** to display “BEEP On (or OFF)” and press **▶■PLAY/STOP**. “On (or OFF)” will flash.
- 3 Press **←|←|←|** or **→|→|→|** to select “On” or “OFF” and press **▶■PLAY/STOP**.
The setting is completed.
- 4 Press MENU to exit the menu mode.

What beep sound means

Beep patterns	Meaning
- (single tone)	Usual mode
-- (double tone)	Enter/exit special mode
--- (triple tone)	Notice*
---- ----	Alarm set time
(continuous beep)	has come.

- * This pattern lets you know the procedure is wrong or informs you of some messages, such as:
- you are trying to record a message when you have already recorded up to the maximum recordable time or the maximum number of messages.
 - the unit has stopped functioning due to lack of battery power.

Selecting the Microphone Sensitivity

See the illustrations on page 36 in the Japanese instruction manual.

- SENS H (high):** To record at meetings or in a quiet and/or spacious place.
- SENS L (low):** To record for dictation or in a noisy place.

- 1 Press MENU to enter the menu mode.
- 2 Press **←|←|←|** or **→|→|→|** to display “SENS” and press **▶■PLAY/STOP**. “H (or L)” will flash.
- 3 Press **←|←|←|** or **→|→|→|** to select “H” or “L” and press **▶■PLAY/STOP**.
Now the setting is completed.
- 4 Press MENU to exit the menu mode.

Playing Back All Messages in a File Continuously

See the illustrations on page 37 in the Japanese instruction manual.

CONT On: You can play back all messages in a file continuously.

CONT OFF: Playback stops at the end of each message.

- 1 Press MENU to enter the menu mode.
- 2 Press **←|←|←|** or **▶|▶|▶|+** to display “CONT” and press **▶|■|PLAY/STOP**. “OFF (or On)” will flash.
- 3 Press **←|←|←|** or **▶|▶|▶|+** to select “On” or “OFF” and press **▶|■|PLAY/STOP**.
Now the setting is completed.
- 4 Press MENU to exit the menu mode.

Selecting the Illumination Mode of LCD Back Light

See the illustrations on page 38 in the Japanese instruction manual.

LIGHT OP: The display window is illuminated for 3 seconds after each operation.

LIGHT All: The display window is illuminated at all times during operation.

- 1 Press MENU to enter the menu mode.
- 2 Press **←|←|←|** or **▶|▶|▶|+** to display “LIGHT” and press **▶|■|PLAY/STOP**. “OP (or All)” will flash.
- 3 Press **←|←|←|** or **▶|▶|▶|+** to select “OP” or “All” and press **▶|■|PLAY/STOP**.
Now the setting is completed.
- 4 Press MENU to exit the menu mode.

When the unit is not being operated (when the display shows the current time), you can illuminate the display window by pressing STOP. This enables you to check the time even in a dark place.

Note

The effect of the illumination may be reduced in a bright location.

► **Additional Information**

Precautions

On power

- Operate the unit only on 1.5 V DC. Use one size AAA (LR03) alkaline battery.

On safety

- Do not operate the unit while driving, cycling or operating any motorized vehicle.

On handling

- Do not leave the unit in a location near heat sources, or in a place subject to direct sunlight, excessive dust or mechanical shock.
- Should any solid object or liquid fall into the unit, remove the batteries and have the unit checked by qualified personnel before operating it any further.

On noise

- Noise may be heard when the unit is placed near an AC power source, a fluorescent lamp or a mobile phone during recording or playback.
- Noise may be recorded when an object, such as your finger, etc., rubs or scratches the unit during recording.

On maintenance

- To clean the exterior, use a soft cloth slightly moistened in water. Do not use alcohol, benzine or thinner.

Keep personal credit cards using magnetic coding or spring-wound watches, etc., away from the unit to prevent possible damage from the magnet used in the speaker.

If you have any questions or problems concerning your unit, please consult your nearest Sony dealer.

Specifications

Recording media

Built-in flash memory,
Monaural recording

Recording time

SP: 32 minutes
LP: 64 minutes

Frequency response

SP: 250 Hz - 3,400 Hz
LP: 250 Hz - 2,500 Hz

Speaker approx. 3.6 cm dia.

Power output

80 mW

Output Earphone jack (mini
jack) for 8 - 300 ohms
earphone

Playback speed control

FAST: +30%
SLOW: -15%

Power requirements

One size AAA (LR03)
alkaline battery: 1.5 V
DC

Dimensions (w/h/d)

(not incl. projecting parts and controls)
58.0 × 83.5 × 14.7 mm

Mass (incl. a battery)

64 g

Supplied accessories

Size AAA (LR03)
alkaline battery × 1

Optional accessories

Active speakers SRS-T1

Design and specifications are subject
to change without notice.

Troubleshooting

Should any problem persist after you have made these checks, consult your nearest Sony dealer.

Symptom	Remedy
The unit does not operate.	<ul style="list-style-type: none">•The batteries have been inserted with incorrect polarity.•The batteries are weak.•The buttons are locked with the HOLD switch. (If you press any button, "HOLD" will flash three times.
No sound comes from the speaker.	<ul style="list-style-type: none">•The earphone is plugged in.•The volume is turned down completely.
"FULL" is displayed and you cannot start recording.	<ul style="list-style-type: none">•The memory is full. Erase some of the messages. See page 9.•99 messages has been recorded in the selected file. Select another file or erase some of the messages. See page 9.
Noise is heard.	<ul style="list-style-type: none">•An object, such as your finger, etc., accidentally rubbed or scratched the unit during recording so that noise was recorded.•The unit was placed near an AC power source, a fluorescent lamp or a mobile phone during recording or playback.•Earphone plug is dirty. Clean the plug.
Recording level is low.	<ul style="list-style-type: none">•Microphone sensitivity is set to "SENS L". Set it to "SENS H" (see page 18).
Playback speed is too fast or too slow.	<ul style="list-style-type: none">•Set the PLAY SPEED switch to "NORMAL." See page 14.
"--M--D --:--" is displayed.	<ul style="list-style-type: none">•You have not set the clock (see page 5).

Symptom	Remedy
“--M--D” is displayed on the REC DATE display.	•The date of recording will not be displayed if you recorded the message when the clock was not set.
You cannot add an index while recording/playing a message.	•You cannot add an index in the first or the last 4 seconds (8 seconds in LP mode) of a message. •If you add indexes frequently, the unit may become unable to add indexes.
The unit does not operate correctly.	•Take out the battery and insert it again.