

Trinitron Color TV

Operating Instructions _____ **GB**

- Before operating the unit, please read this manual thoroughly and retain it for future reference.

使用說明書 _____ **CT**

- 使用本電視機之前請先詳細閱讀此手冊，並妥善保存以備日後用作參考。

Panduan Pengendalian _____ **MY**

- Sebelum mengendalikan unit, sila baca buku panduan ini dengan teliti dan simpan untuk rujukan masa depan.

FD Trinitron
WEGA


KV-AR34

KV-AR29

KV-AR25

WARNING


- Dangerously high voltages are present inside the TV.
- TV operating voltage: 110 – 240 V AC.
- Do not plug in the power cord until you have completed making all other connections; otherwise a minimum leakage current might flow through the antenna and other terminals to ground.
- To avoid battery leakage and damage to the remote, remove the batteries from the remote if you are not going to use it for several days. If any liquid leaks from the batteries and touches your skin, immediately wash it away with water.

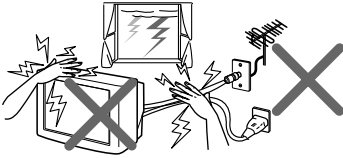


For your own safety, do not touch any part of the TV, the power cord and the antenna cable during lightning storms.




For children's safety, do not leave children alone with the TV. Do not allow children to climb onto it.

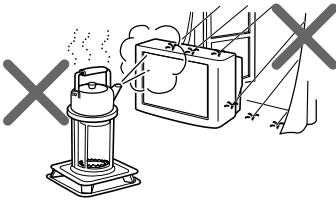


To prevent fire or shock hazard, do not expose the TV to rain or moisture.

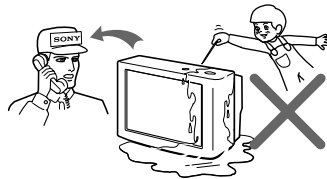


Do not operate the TV if any liquid or solid object falls into it. Have it checked immediately by qualified personnel only.

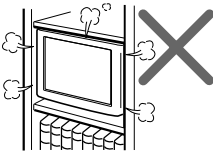


Do not block the ventilation openings of the TV. Do not install the TV in a confined space, such as a bookcase or built-in cabinet.

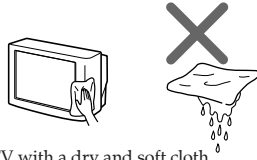


Clean the TV with a dry and soft cloth. Do not use benzine, thinner, or any other chemicals to clean the TV. Do not attach anything (e.g., adhesive tape, cellophane tape, glue) on the painted cabinet of the TV. Do not scratch the picture tube.

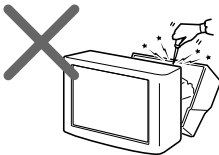


Do not open the cabinet and the rear cover of the TV as high voltages and other hazards are present inside the TV. Refer servicing and disposal of the TV to qualified personnel.

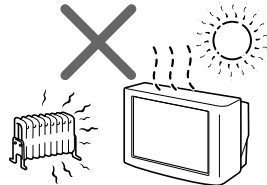


Your TV is recommended for home use only. Do not use the TV in any vehicle or where it may be subject to excessive dust, heat, moisture or vibrations.

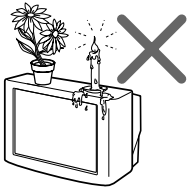


Do not place any objects on the TV.

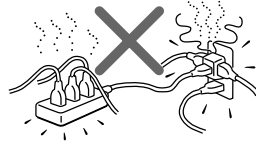

Do not plug in too many appliances to the same power socket. Do not damage the power cord.

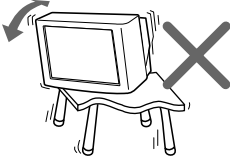

 
Install the TV on a stable TV stand and floor which can support the TV set weight. Ensure that the TV stand surface is flat and its area is larger than the bottom area of the TV.



Pull the power cord out by the plug. Do not pull the power cord itself. Even if your TV is turned off, it is still connected to the AC power source (mains) as long as the power cord is plugged in. Unplug the TV before moving it or if you are not going to use it for several days.

■ Securing the TV

 
To prevent the TV from falling, use the supplied screws, clamps and band to secure the TV.




screws



 clamps




band

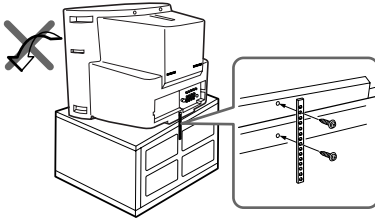


Screw the band to the TV stand and to the provided hole at the rear of your TV.

or

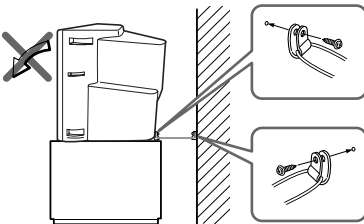

- (1) Put a cord or chain through the clamps.
- (2) Screw one clamp to a wall or pillar and the other clamp to the provided hole at the rear of your TV.

or

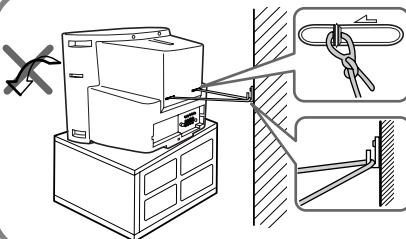

- (1) Attach each end of a cord or chain to the provided holders at the rear of your TV.
- (2) Securely fix the attached cord or chain to a wall or pillar using an attachment which can support the TV set weight.

Note

- Use only the supplied screws. Use of other screws may damage the TV.

Table of Contents

Installation

Getting Started	6
Setting up your TV ("INITIAL SETUP")	7

Overview of Controls

TV front and rear panels	8
Remote control	9

Advanced Operations

Selecting the picture and sound modes	11
Viewing the picture with DTE	12
Viewing the picture in wide mode ..	12
Watching Picture-in-Picture (PIP) ...	13
Selecting a TV program using PIP ..	14
Listening with surround sound	14
Setting the timers	15
Enjoying stereo or bilingual programs	16
Viewing Teletext	17

Menu Adjustment


Introducing the menu system	18
Changing the "PICTURE" setting ...	21
Changing the "SOUND" setting	23
Changing the Picture-in-Picture ("PIP") setting	25
Changing the "SETUP" setting	26
Changing the Channel Preset ("CH PRESET") setting	28

Additional Information

Connecting optional components ...	31
Troubleshooting	33
Specifications	Back cover

GB

■ Getting Started

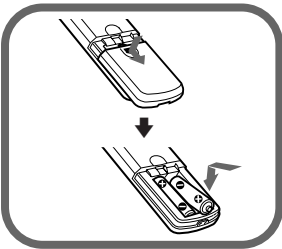


Step 1

Insert the batteries (supplied) into the remote.

Note

- Do not use old or different types of batteries together.

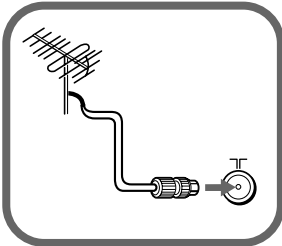


Step 2

Connect the antenna cable (not supplied) to Υ (antenna input) at the rear of the TV.


Tip

- You can also connect your TV to other optional components (see page 31).

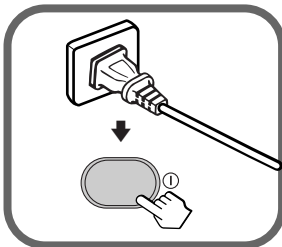

Step 3

Plug in the power cord, then press ⏻ on the TV to turn it on.

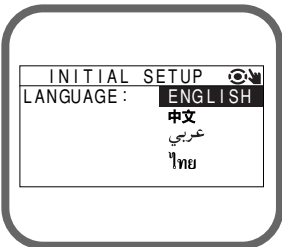


Step 4

Set up the TV by following the instructions of the "INITIAL SETUP" menu (see page 7).


■ Setting up your TV (“INITIAL SETUP”)

When you turn on your TV for the first time, the “INITIAL SETUP” menu will appear. This menu allows you to change the menu language, adjust the picture position and preset the TV channels automatically.

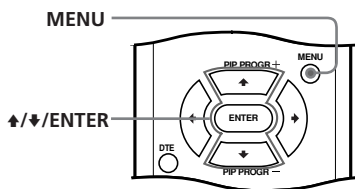

- 1 Press **↑** or **↓** to select the desired menu language (e.g., “ENGLISH”), then press ENTER.


The selected menu language appears.

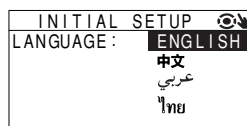

- 2 If the “PIC ROTATION” bar is slanted, press **↑** or **↓** to adjust it, then press ENTER.

If no adjustment is necessary, then press ENTER.



The or icon on the screen flashes while adjusting.

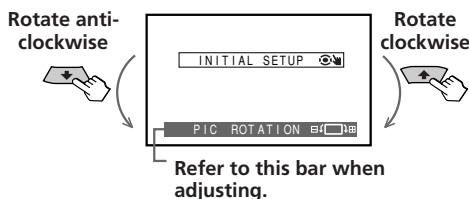

- 3 Press **↑** or **↓** to select “YES”, then press ENTER to preset the channels automatically (see page 28).


The screen will indicate automatic presetting is in progress.

To skip automatic channel presetting, select “NO”, then press ENTER.

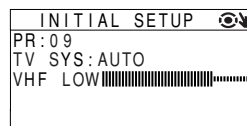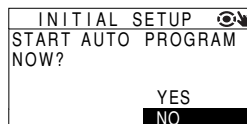

- 4 Press **↑** or **↓** to select “NO”, then press ENTER. The “INITIAL SETUP” menu will not appear again the next time you turn on the TV by pressing .


To allow this menu to appear again, select “YES”, then press ENTER.

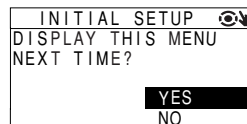

Tips


- You can immediately go to the end of the “INITIAL SETUP” menu by pressing MENU.
- You can also set up your TV using the menu system (see page 18).

TV front and rear panels

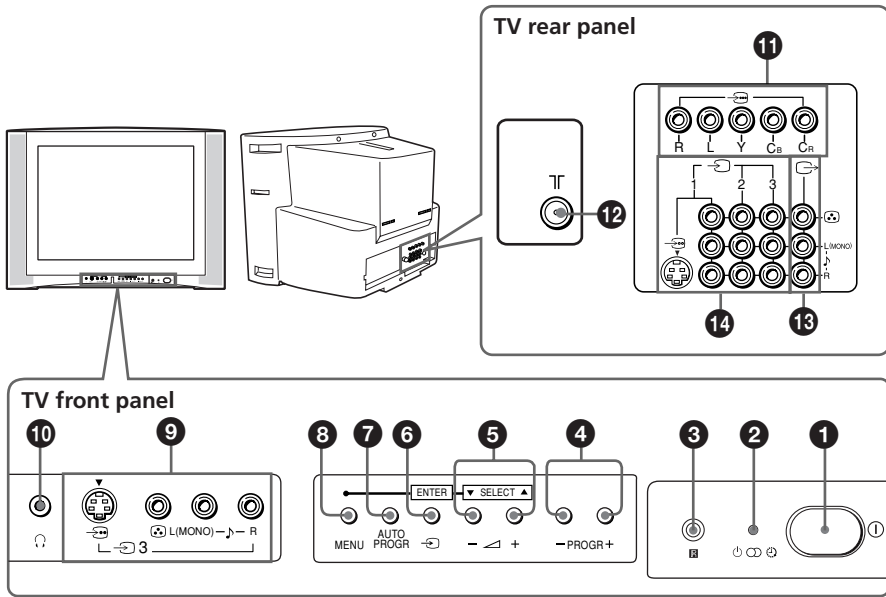

Button/Terminal	Function	Page
① ①	Turn off or turn on the TV.	6
② ⏻	Standby indicator.	–
② ⌚	Wake Up indicator.	15
② 🔊	Stereo/bilingual indicator.	16
③ 📡	Remote control sensor.	–
④ PROGR +/-	Select program number.	–
⑤ 🔊 +/-	Adjust volume.	–
⑥ 📺	Select TV or video input.	–
⑦ AUTO PROGR	Preset channels automatically.	–
Menu operations		
⑤ SELECT ▼/▲	Select and adjust items.	20
⑥ ENTER	Confirm selected items.	20
⑧ MENU	Display or cancel the menu.	20
⑨ 📺 3	Video input terminal 3.	31
⑩ 🎧	Headphone jack.	–
⑪ 📺	Component video input terminal.	32
⑫ 📡	Antenna input terminal.	31
⑬ 📺	Monitor output terminal.	31
⑭ 📺 1, 2, 3	Video input terminal 1, 2, 3.	31


Remote control

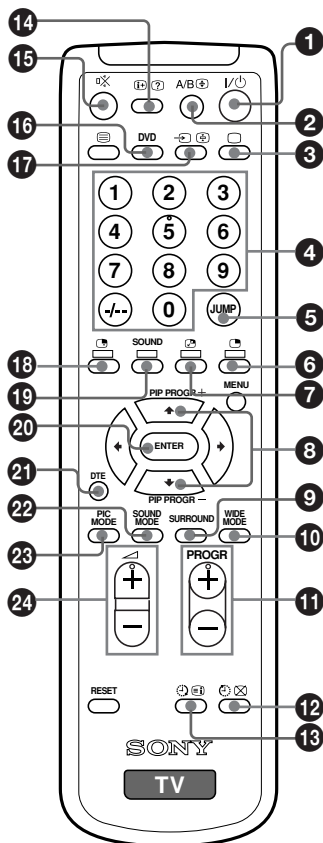

Button	Function	Page
1 I/⏻	Turn off temporarily or turn on the TV.	–
3 □	Display the TV input.	–
4 0 – 9, +/-	Input numbers.	–
5 JUMP	Jump to previous program number.	–
9 SURROUND	Select surround mode.	14
10 WIDE MODE	Select wide-mode (16:9).	12
11 PROGR +/-	Select program number.	–
14 i+	Display on-screen information.	–
15 ⊘	Mute the sound.	–
16 DVD	Select component video input.	32
17 □	Select TV or video input.	31
21 DTE	Select DTE mode.	12
22 SOUND MODE	Select sound mode.	11
23 PIC MODE	Select picture mode.	11
24 ▲ +/-	Adjust volume.	–
Timer operations		
12 ⌚	Set TV to turn off automatically.	15
13 ⌚	Set TV to turn on automatically.	15
PIP operations (yellow label)		
6 □	Display a sub screen.	13
7 □	Swap main and sub screens.	13
8 PIP PROGR +/-	Display and change programs in the sub screen.	13,14
18 □	Select a video input in the sub screen.	13
19 SOUND	Swap sound between main and sub screen.	13
20 ENTER	Change sub screen to main screen.	14
Stereo/bilingual operations		
2 A/B	Select stereo/bilingual mode.	16

continue


continued

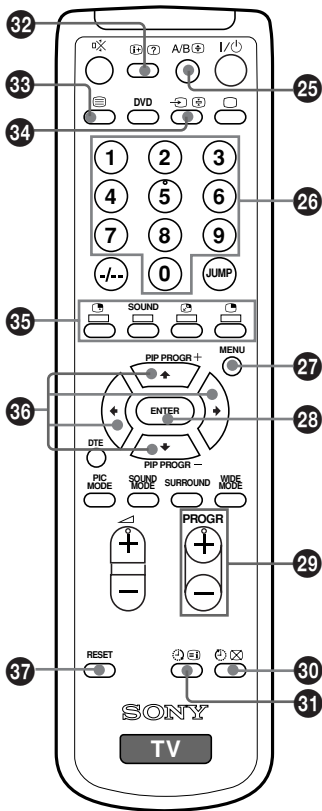

Button	Function	Page
Menu operations		
27 MENU	Display or cancel the menu.	20
28 ENTER	Confirm selected items.	20
36 ↑, ↓, ←, →	Select and adjust items.	20
Teletext operations (green label)		
25 ⏏	Enlarge the Teletext display.	17
26 0 - 9	Input Teletext page number.	17
29 PROGR +/-	Display the next or previous page.	17
30 ⊗	Show TV screen while waiting for Teletext page.	17
31 ≡	Display Teletext service contents.	17
32 ?	Reveal concealed information.	17
33 ≡	Display Teletext broadcast.	17
34 ⏏	Stop Teletext display from scrolling.	17
35 ■ (red, green, yellow, blue)	Access a FASTEXT menu.	17
37 RESET	Set TV to factory setting.	33

Selecting the picture and sound modes

You can select picture and sound modes and adjust the setting to your preference in the "PERSONAL" option.

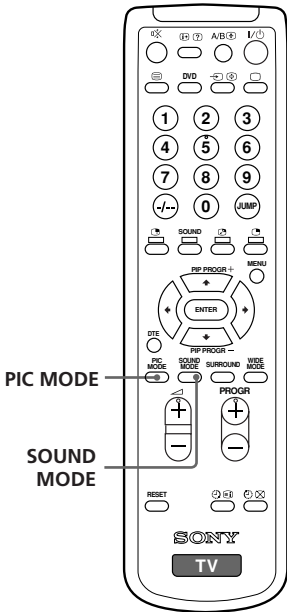





Selecting the picture mode

Press PIC MODE to select the desired picture mode.

Select	To
"DYNAMIC"	view high contrast pictures.
"STANDARD"	view normal pictures.
"SOFT"	view mild pictures.
"PERSONAL"	receive the last adjusted picture setting from the "ADJUST" option in the "PICTURE" menu (see page 22).


Selecting the sound mode

Press SOUND MODE to select the desired sound mode.

Select	To
"  DYNAMIC"	listen to dynamic and clear sound that emphasizes both the low and high tones.
"  DRAMA"	listen to sound that emphasizes voice and high tones.
"  SOFT"	listen to soft sound.
"  PERSONAL"	receive the last adjusted sound setting from the "ADJUST" option in the "SOUND" menu (see page 24).

Viewing the picture with DTE

The Digital Texture Enhancer (DTE) feature allows you to enjoy a more natural and vivid picture by optimizing the contrast of each object in the picture. You can use the DTE button to select "ON" or "OFF".

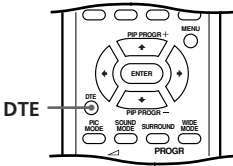

Select	To
"ON"	enhance each object's details and contours with optimum contrast.
"OFF"	cancel DTE.


Note

- The DTE mode is not selectable when the "GAME MODE" is turned "ON".

The DTE logo (**DTE**) and "DTE" are trademarks of Sony Corporation.
Digital Texture Enhancer


Viewing the picture in wide mode


When receiving a wide-mode (16:9) signal, the picture will appear "squeezed" (compressed) on your screen. Use the WIDE MODE button to view the picture with the optimal effect.

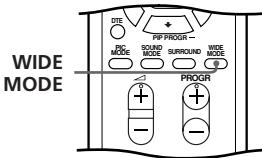




 
Select	To
"ON"	view the picture in wide-mode (16:9).
"OFF"	cancel wide-mode (16:9).

■ Watching Picture-in-Picture (PIP)

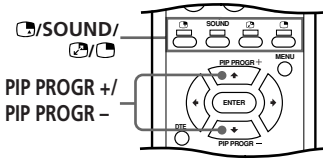
With the PIP feature, you can display two different TV programs or video input at the same time by using the  button.



To	Press
Display a sub screen	 To cancel the sub screen, press the button again.
Change a program number in the sub screen	PIP PROGR + or PIP PROGR -.
Select a video input in the sub screen	 .
Swap pictures between the main and sub screens	 .
Swap sound between the main and sub screens	SOUND.


A “” symbol will appear next to the program number or video input display to indicate which screen you are hearing.

 Note



- The picture and sound from the  (monitor output) terminals will always be from the main screen, even when you select the sub screen sound by pressing SOUND (see page 31).

■ Selecting a TV program using PIP

You can select your desired TV program directly from the PIP sub screen by using PIP PROGR +/- buttons.

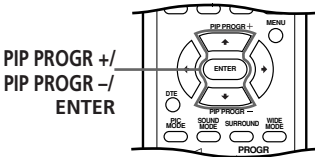


- 1 Press PIP PROGR +/- until the desired program appears in the sub screen.
- 2 Press ENTER to change the sub screen program to the main screen.

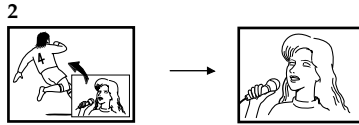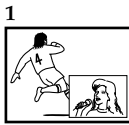

■ Listening with surround sound

You can use the SURROUND button to listen to the sound effects of a concert hall or movie theater.

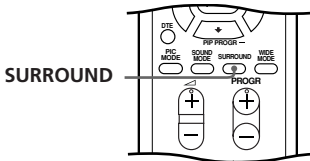


Select	To
"TruSurround"	listen to the surround sound that spreads out to the rear of a room.
"SIMULATED"	listen to monaural sound with a stereo-like effect.
"OFF"	cancel surround sound.

The surround of your TV is categorized as TruSurround.

TruSurround™ is a trademark of SRS Labs, Inc. SRS and the SRS symbol are registered trademarks of SRS Labs, Inc. in the United States and selected foreign countries. SRS and TruSurround are incorporated under license from SRS Labs, Inc. and are protected under United States Patent Nos. 4,748,669 and 4,841,572 with numerous additional issued and pending foreign patents.


Setting the timers

You can set your TV to turn on and off automatically by using the WAKE UP and SLEEP timers respectively.

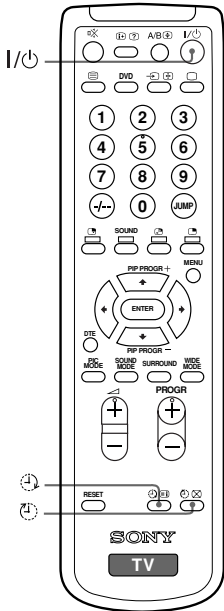

Setting the Wake Up timer

- 1 Press until the desired period of time appears on the screen.

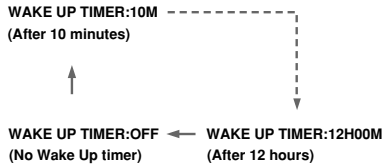

The Wake Up timer starts immediately after you have set it.


- 2 Select the program number or video input you want to wake up to.

- 3 Press I/O, or set the Sleep timer if you want the TV to turn off automatically.

The indicator on the TV lights up orange when the TV goes into standby mode.

Setting the Sleep timer

Press until the desired period of time appears on the screen.

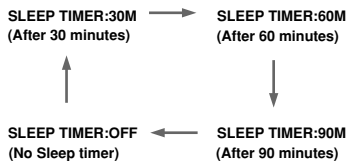


The Sleep timer starts immediately after you have set it.

Notes

- You can also cancel the Wake Up and Sleep timers by pressing on the TV to turn off the TV.
- If no buttons are pressed for more than two hours after the TV is turned on using the Wake Up timer, the TV automatically goes into standby mode.

Enjoying stereo or bilingual programs

You can enjoy stereo sound or bilingual programs of NICAM and A2 stereo systems by using the A/B button.

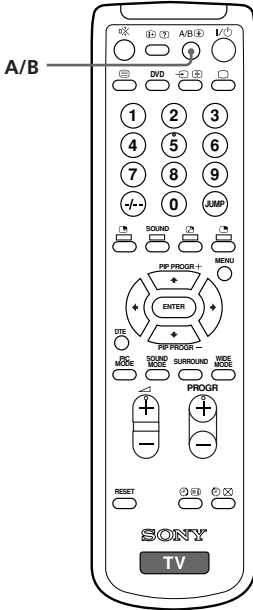

When receiving a NICAM program

Broadcasting	On-screen display (Selected sound)
NICAM stereo	NICAM (Stereo sound) → MONO (Regular sound)
NICAM bilingual	NICAM MAIN (Main sound) → NICAM SUB (Sub sound) → MONO (Regular sound)
NICAM monaural	NICAM MAIN (Main sound) → MONO (Regular sound)

When receiving an A2 program

Broadcasting	On-screen display (Selected sound)
A2 stereo	STEREO (Stereo sound) → MONO (Regular sound)
A2 bilingual	MAIN (Main sound) → SUB (Sub sound)


Notes

- If the stereo sound is noisy when receiving a stereo program, select "MONO". The sound becomes monaural, but the noise is reduced.
- If the sound is distorted when receiving a monaural program through ㊦ (antenna input), press A/B repeatedly until "MONO" appears on the screen. To cancel the monaural sound setting, press A/B again until "AUTO" appears on the screen.
- Your TV can only receive monaural sound when you select the PIP sub screen sound by pressing SOUND (see page 13).

Viewing Teletext

Some TV stations broadcast an information service called Teletext which allows you to receive various information, such as stock market reports and news.

You can use the buttons on the remote to view Teletext.

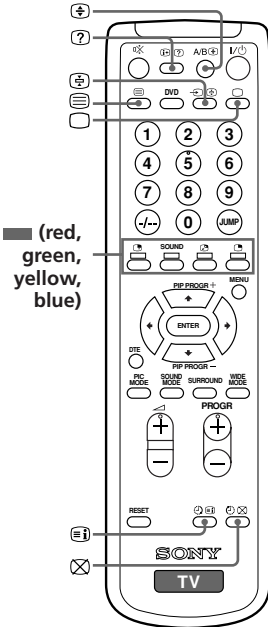


To	Do this
display a Teletext page on the TV picture	Press 100 . Each time you press 100 , the screen changes as follows: Teletext → Teletext and TV → TV. If there is no Teletext broadcast, "100" is displayed at the top left corner of the screen.
check the contents of a Teletext service	Press 100 . An overview of the Teletext contents, including page numbers, appears on the screen.
select a Teletext page	Press the number buttons to enter the three-digit page number of the desired Teletext page. If you make a mistake, reenter the correct page number. To access the next or previous page, press PROG +/- .
hold (pause) a Teletext display	Press MUTE to display the symbol "⊞" at the top left corner of the screen. To resume normal Teletext viewing, press MUTE or 100 .
reveal concealed information (e.g., an answer to a quiz)	Press ? . To conceal the information, press the button again.
enlarge the Teletext display	Press PROG +/- . Each time you press PROG +/- , the Teletext display changes as follows: Enlarge upper half → Enlarge lower half → Normal size.
stand by for a Teletext page while watching a TV program	1 Enter the Teletext page number that you want to refer to, then press TV . 2 When the page number is displayed, press 100 to show the text.
select a FASTEXT menu or the colored boxes	Press PIP PROC. (red, green, yellow and blue) that corresponds to the desired menu or page number.
turn off Teletext	Press 100 .




Note



- The FASTEXT feature can be used only when the FASTEXT broadcast is available.

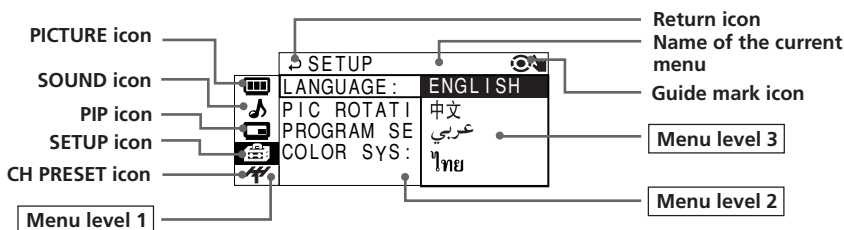Introducing the menu system

The MENU button lets you open a menu and change the settings of your TV. The following is an overview of the menu system.



Level 1	Level 2	Level 3/Function	Page
"PICTURE" 	"PICTURE MODE"	Select the picture mode: "DYNAMIC" → "STANDARD" → "SOFT" → "PERSONAL" → "ADJUST"	21
	"ADJUST"	Adjust the "PERSONAL" option: "PICTURE" → "COLOR" → "BRIGHT" → "HUE" → "SHARP"	
	"DTE"	Optimize the picture contrast: "ON" → "OFF"	
	"WIDE MODE"	Change the picture size: "ON" → "OFF"	
	"GAME MODE"	Adjust the picture settings for video games: "ON" → "OFF"	
"SOUND" 	"SOUND MODE"	Select the sound mode: "DYNAMIC" → "DRAMA" → "SOFT" → "PERSONAL" → "ADJUST"	23
	"ADJUST"	Adjust the "PERSONAL" option: "BASS" → "TREBLE" → "BALANCE" → "BBE"*	
	"SURROUND"	Select the "SURROUND" mode: "TruSurround" → "SIMULATED" → "OFF"	
	"INTELLIGENT VOL"	Adjust volume automatically: "ON" → "OFF"	
"PIP" 	"POSITION"	Change the position of the sub screen.	25
	"PIP"	Display a sub screen within the main picture: "ON" → "OFF"	
	"SWAP"	Exchange pictures between main screen and sub screen.	


Level 1	Level 2	Level 3/Function	Page
"SETUP" 	"LANGUAGE"	Change the menu language: "ENGLISH" → "中文"(Chinese) → "عربي"(Arabic) → "ไทย"(Thai)	26
	"PIC ROTATION"	Adjust the picture position.	
	"PROGRAM SETUP"	Adjust each program number settings.	
	"COLOR SYS"	Select the color system: "AUTO" → "PAL" → "SECAM" → "NTSC3.58" → "NTSC4.43"	
"CH PRESET" 	"AUTO PROGRAM"	Preset channels automatically.	28
	"MANUAL PROGRAM"	Preset channels manually.	
	"TV SYS"	Select the TV system: "B/G" → "I" → "D/K" → "M"	

* The BBE is manufactured by Sony Corporation under license from BBE Sound, Inc. It is covered by U.S. Patent No. 4,638,258 and No. 4,482,866. The word "BBE" and the BBE symbol are the trademarks of BBE Sound, Inc.

continue

continued

How to use the menu

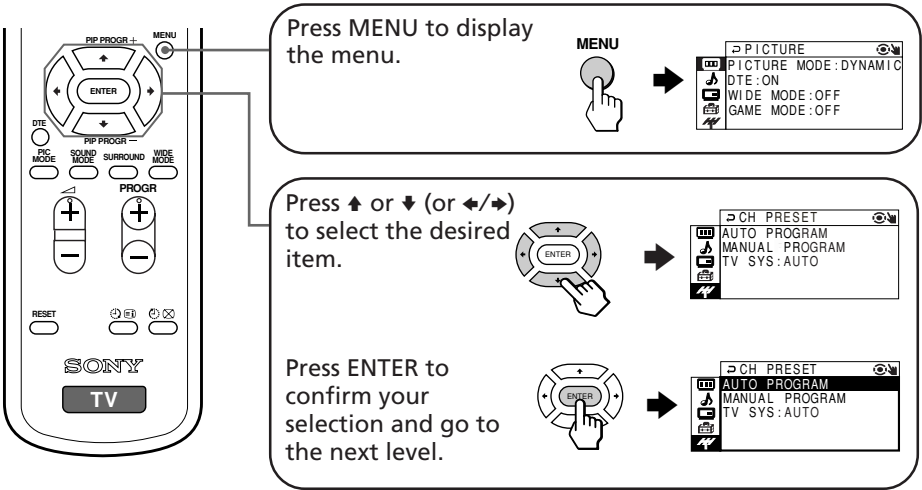


Other menu operations

To	Press
Adjust the setting value	\uparrow , \downarrow , \leftarrow or \rightarrow .
Move to the next/previous menu level	\leftarrow or \rightarrow .
Cancel the menu	MENU.

Tips

- If you want to exit from Menu level 2 to Menu level 1, press \uparrow or \downarrow until the return icon (↶) is highlighted, then press ENTER.
- Some of the menu items can be operated directly using the remote buttons.
- The MENU, ENTER, and SELECT ∇/\blacktriangle buttons on the TV can also be used for the operations above.


Front of TV

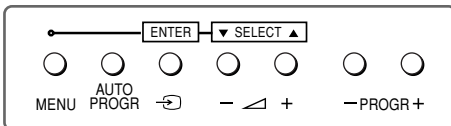


Changing the "PICTURE" setting


The "PICTURE" menu allows you to adjust the picture settings.

1 Press MENU.

2 Make sure the "PICTURE" icon () is selected, then press ENTER.

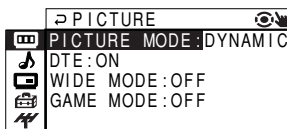

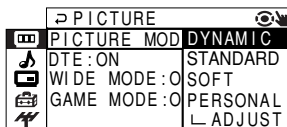


3 Press \uparrow or \downarrow to select the desired item (e.g., "PICTURE MODE"), then press ENTER.



Select	To
"PICTURE MODE"	choose either "DYNAMIC", "STANDARD", "SOFT", "PERSONAL"* , or "ADJUST" (see page 11).
"DTE"	optimize the picture contrast. Press \uparrow or \downarrow to select "ON", then press ENTER. To cancel, select "OFF", then press ENTER.
"WIDE MODE"	choose either "ON" or "OFF" (see page 12).
"GAME MODE"	adjust the picture setting that is suitable to view video games. Press \uparrow or \downarrow to select "ON", then press ENTER. To cancel, select "OFF", then press ENTER.

 * When the "PERSONAL" mode is selected, you can receive the last adjusted picture settings from the "ADJUST" option (see page 22).

Notes

- "GAME MODE" is available only when receiving signals through  (video input),  (S video input), or  (component video input).
- The DTE mode is not selectable when "GAME MODE" is turned "ON".

continued

Adjusting the "ADJUST" items under "PICTURE MODE"

1 Press **↑** or **↓** to select the desired item (e.g., "COLOR"), then press ENTER.

COLOR ▒▒▒▒▒▒▒▒▒▒▒▒▒▒▒▒ 80

2 Adjust the value according to the following table, then press ENTER.

For	Press ↓ or ← to	Press ↑ or → to
"PICTURE"	decrease picture contrast.	increase picture contrast.
"COLOR"	decrease color intensity.	increase color intensity.
"BRIGHT"	darken the picture.	brighten the picture.
"HUE"	increase red picture tones.	increase green picture tones.
"SHARP"	soften the picture.	sharpen the picture.

3 Repeat the above steps to adjust other items. The adjusted settings will be received when you select "PERSONAL".

Notes


- "HUE" can be adjusted for the NTSC color system only.
- Reducing sharpness ("SHARP") can also reduce picture noise.

■ Changing the “SOUND” setting


The “SOUND” menu allows you to adjust the sound settings.

1 Press MENU.

2 Press **▲** or **▼** to select the “SOUND” icon (🔊), then press ENTER.

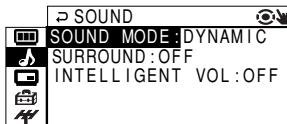

3 Press **▲** or **▼** to select the desired item (e.g., “SOUND MODE”), then press ENTER.

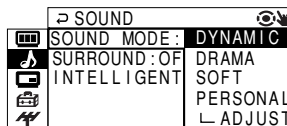

Select	To
“SOUND MODE”	choose either “DYNAMIC”, “DRAMA”, “SOFT”, “PERSONAL”*, or “ADJUST” (see page 11).
“SURROUND”	choose either “TruSurround”, “SIMULATED” or “OFF” (see page 14).
“INTELLIGENT VOL”	adjust the volume of all program numbers and video inputs automatically. Press ▲ or ▼ to select “ON”, then press ENTER. To cancel, select “OFF”, then press ENTER.

* When the “PERSONAL” mode is selected, you can receive the last adjusted sound settings from the “ADJUST” option (see page 24).

continue

continued

Adjusting the "ADJUST" items under "SOUND MODE"

- 1** Press **↑** or **↓** to select the desired item (e.g., "BALANCE"), then press ENTER.



BALANCE  00

- 2** Adjust the value according to the following table, then press ENTER .


For	Press ↓ or ← to	Press ↑ or → to
"BASS"	decrease the bass.	increase the bass.
"TREBLE"	decrease the treble.	increase the treble.
"BALANCE"	increase the left speaker's volume.	increase the right speaker's volume.
"BBE"	select "HIGH" for higher enhancement of sound clarity; select "LOW" for lower enhancement of sound clarity; select "OFF" to cancel BBE sound.	


- 3** Repeat the above steps to adjust other items.
The adjusted settings will be received when you select "PERSONAL".
-

■ Changing the Picture-in-Picture (“PIP”) setting


The “PIP” menu allows you to display a sub screen, change the sub screen position and exchange pictures between the main and sub screens.



1 Press MENU.

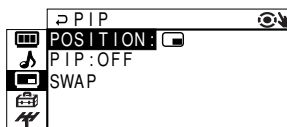2 Press \uparrow or \downarrow to select the “PIP” icon (), then press ENTER.

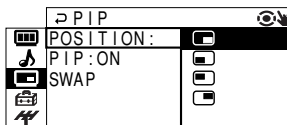

3 Press \uparrow or \downarrow to select the desired item (e.g., “POSITION”), then press ENTER.




Select	To
“POSITION”	change the position of the sub screen. Press \uparrow or \downarrow to select the desired position, then press ENTER . 
“PIP”	display a sub screen. Press \uparrow or \downarrow to select “ON”, then press ENTER . To cancel, press  or select “OFF”, then press ENTER .
“SWAP”	exchange pictures between the main screen and sub screen.

■ Changing the “SETUP” setting


The “SETUP” menu allows you to change the menu language, adjust the picture position, set up your program numbers and select the color system.

1 Press MENU.

2 Press **↑** or **↓** to select the “SETUP” icon (📺), then press ENTER.

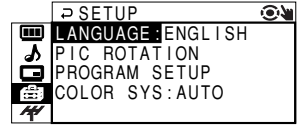

3 Press **↑** or **↓** to select the desired item (e.g., “COLOR SYS”), then press ENTER.

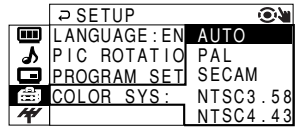


Select	To
“LANGUAGE”	<p>change the menu language.</p> <p>Press ↑ or ↓ to select either “ENGLISH”, “中文” (Chinese), “عربي” (Arabic), or “ไทย” (Thai), then press ENTER.</p> <p>The selected menu language appears.</p>
“PIC ROTATION”	<p>adjust the picture position when it is not aligned with the TV screen.</p> <p>Press ↑, →, ↓ or ← to adjust the picture position, then press ENTER.</p> <div style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p>PIC ROTATION 📺</p> </div>
“PROGRAM SETUP”	<p>adjust each channel settings (see Adjusting each program number settings (“PROGRAM SETUP”) on page 27).</p>
“COLOR SYS”	<p>select the color system. Normally, set this to “AUTO”.</p>


Adjusting each program number settings (“PROGRAM SETUP”)

1 Select “PROGRAM SETUP” from the “SETUP” menu.

2 Select “PR” and press ENTER. Press **▲** or **▼** to select the desired program number you want to adjust, then press ENTER.

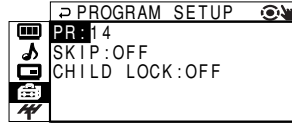

3 Press **▲** or **▼** to select the desired item (e.g., “SKIP”), then press ENTER.

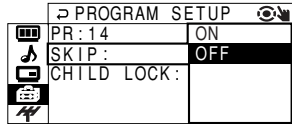


Select	To
“PR”	select the desired program number.
“SKIP”	skip unwanted or unused program number. Press ▲ or ▼ to select “ON”, then press ENTER. To cancel, select “OFF”, then press ENTER.
“CHILD LOCK”	prevent children from watching this selected program number. Press ▲ or ▼ to select “ON”, then press ENTER. The lock symbol (🔒) appears on the screen. To cancel, select “OFF”, then press ENTER. If you preset a locked program number, that program number will be unlocked automatically.


4 To continue adjusting other program numbers, press **▲** or **▼** to select “PR”, then repeat step 2 and 3.

■ Changing the Channel Preset (“CH PRESET”) setting


The “CH PRESET” menu allows you to preset channels automatically, manually preset channels and select the TV system.

1 Press MENU.

2 Press **▲** or **▼** to select the “CH PRESET” icon () , then press ENTER.

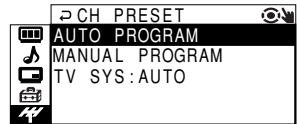

3 Press **▲** or **▼** to select the desired item (e.g., “AUTO PROGRAM”), then press ENTER.


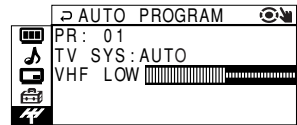


Select	To
“AUTO PROGRAM”	preset channels automatically.
“MANUAL PROGRAM”	manually preset desired channels and channels that cannot be preset automatically (see Presetting channels manually on page 29).
“TV SYS”	select the TV system. Press ▲ or ▼ to select either “B/G”, “I”, “D/K” or “M”, then press ENTER.

Presetting channels manually



1 After selecting “MANUAL PROGRAM”, select the program number to which you want to preset a channel.

- (1) Make sure “PR” is selected, then press ENTER.
- (2) Press \uparrow or \downarrow until the program number you want to preset (e.g., program number “10”) appears on the menu, then press ENTER.

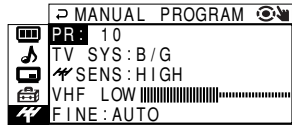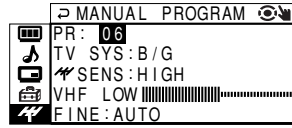



2 Select the desired channel.

- (1) Make sure either “VHF LOW”, “VHF HIGH”, or “UHF” is selected, then press ENTER.
- (2) Press \uparrow or \downarrow until the desired channel’s broadcast appears on the TV screen, then press ENTER.

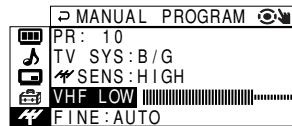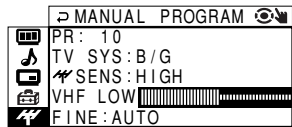

3 If the sound of the desired channel is abnormal, select the appropriate TV system.

- (1) Press \uparrow or \downarrow to select “TV SYS”, then press ENTER.
- (2) Press \uparrow or \downarrow until the sound becomes normal, then press ENTER.

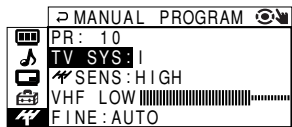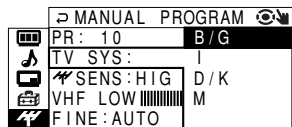

Tip


- You can also select the program number with the PROGR +/- or number buttons.

continue


continued

4 If you are not satisfied with the picture and sound quality, you may be able to improve them by using the "FINE" tuning feature.


(1) Press **▲** or **▼** to select "FINE", then press ENTER.

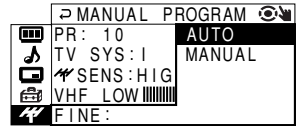

(2) Press **▲** or **▼** to select "MANUAL", then press ENTER.

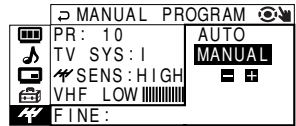


(3) Press **▲**, **▼**, **◀** or **▶** until the picture and sound quality are optimal, then press ENTER.
The + or - icon on the menu flashes while tuning.

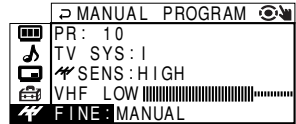


5 If the TV signal is too strong and the picture is distorted, you can adjust the TV reception sensitivity.

(1) Press **▲** or **▼** to select "SENS", then press ENTER.

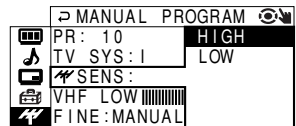

(2) Press **▲** or **▼** to select "LOW", then press ENTER.

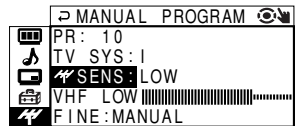


Note


- If you connect a VCR to **㊦** (antenna input), preset the signal output from the VCR to the program number 0 on the TV.

■ Connecting optional components

Connecting to the video input terminal (⇨)

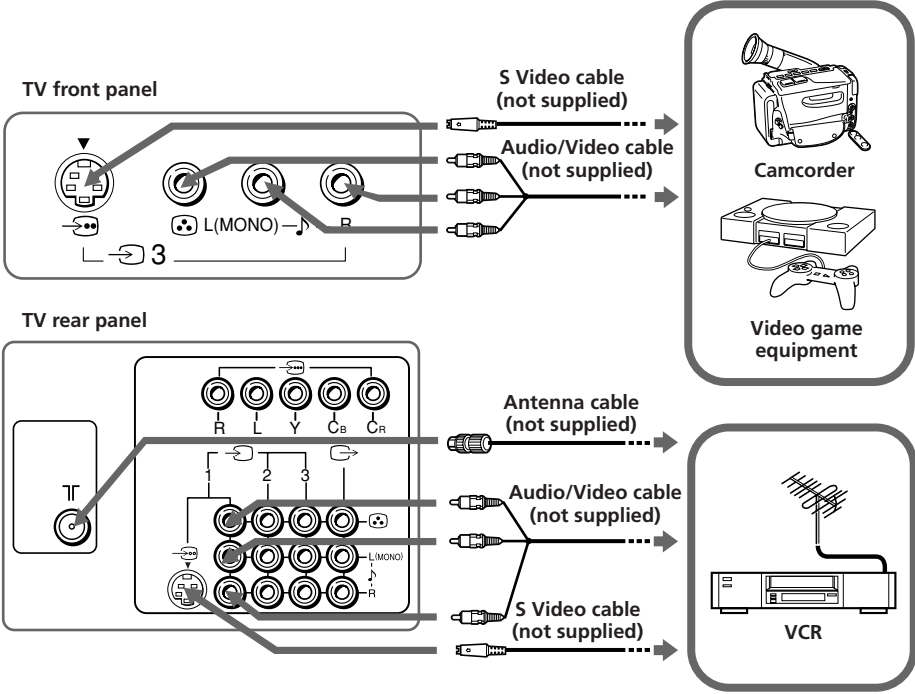

Connecting to the monitor output terminal (⇨)

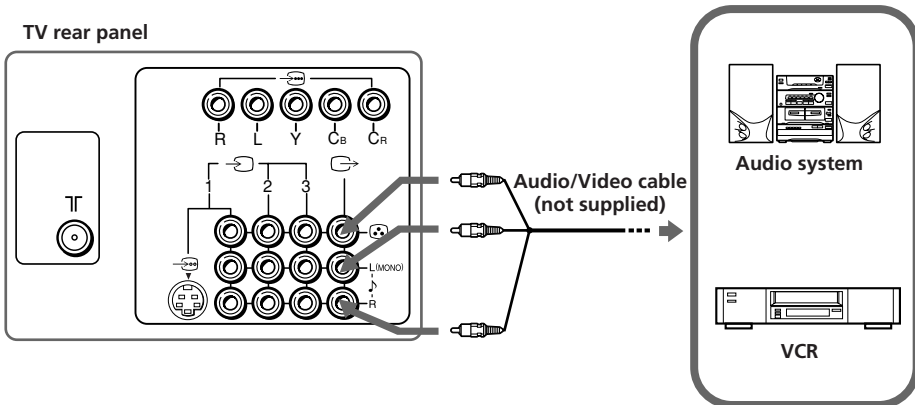


continue

continued

Connecting a DVD player to the component video input terminal ()

- 1 Using an audio cable, connect R and L under () (component video input) on your TV to the LINE OUT, AUDIO R and L output connectors on your DVD player.
- 2 Using a component video cable, connect Y, C_B, and C_R under () (component video input) on your TV to the COMPONENT VIDEO OUT Y, C_B, and C_R output connectors on your DVD player.
- 3 Press DVD on the remote to watch the () (component video input) and “DVD” will appear on your screen.

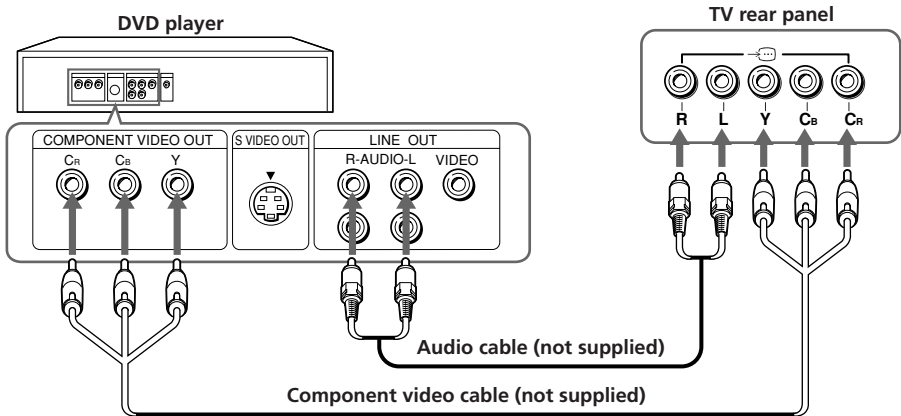

Notes


- If your DVD player can output interlace and progressive mode signals, select the interlace output when connecting to () (component video input) on your TV. Your TV can receive either 525i/60Hz or 625i/50Hz interlace signals.
- Some DVD player terminals may be labeled differently:

Connect	To (on the DVD player)
Y (green)	Y
C _B (blue)	C _B , P _B , C _b or B-Y
C _R (red)	C _R , P _R , C _r or R-Y

- When both () (S video) and () (video) for 1 or 3 are connected at the same time, () (S video) is automatically selected. To view () (video), disconnect the S video cable.
- If you select “DVD” on your TV screen, the signal from the () (monitor output) jacks will not be output properly. This does not indicate a malfunction.

Troubleshooting

If you have any problem while viewing your TV, you can either use the Reset function or check the Troubleshooting guide below. If the problem persists, contact your Sony dealer.

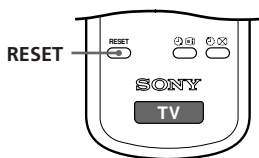








Reset function

 Press the RESET button on your remote control. Your TV will go blank for about half a second then the picture will reappear with "RESET" displayed on your TV screen for about 10 seconds.








Pressing RESET will set your TV to the factory setting, but certain problems may be solved.



Troubleshooting guide

Symptom	Possible cause	Solutions	Page
Snowy picture 	<ul style="list-style-type: none"> The connection is loose or the cable is damaged. 	<ul style="list-style-type: none"> Check the antenna cable and connection on the TV, VCR and at the wall. 	31
	<ul style="list-style-type: none"> The antenna setup is inappropriate. 	<ul style="list-style-type: none"> Check the antenna setup. Contact a Sony dealer for advice. 	–
Noisy sound 	<ul style="list-style-type: none"> Channel presetting is inappropriate or incomplete. 	<ul style="list-style-type: none"> Display the "CH PRESET" menu and select "MANUAL PROGRAM" to preset the channel again. 	29
	<ul style="list-style-type: none"> Signal transmission is low. 	<ul style="list-style-type: none"> Try using a booster. 	–
Distorted picture 	<ul style="list-style-type: none"> Broadcast signals are too strong. 	<ul style="list-style-type: none"> Display the "CH PRESET" menu and select "MANUAL PROGRAM". Then, select "SENS: LOW". 	30
		<ul style="list-style-type: none"> Turn off or disconnect the booster if it is in use. 	–
Noisy sound 			
Good picture 	<ul style="list-style-type: none"> The TV system setting is inappropriate. 	<ul style="list-style-type: none"> Display the "CH PRESET" menu and select the appropriate TV system ("TV SYS"). 	29
	<ul style="list-style-type: none"> PIP sound is selected when PIP is displayed. 	<ul style="list-style-type: none"> Press SOUND or . 	13
Noisy sound 			

continue

continued

Symptom	Possible cause	Solutions	Page
<p>No picture</p> 	<ul style="list-style-type: none"> The power cord, antenna or VCR is not connected. 	<ul style="list-style-type: none"> Check the power cord, antenna and VCR connections. 	31
<p>No sound</p> 	<ul style="list-style-type: none"> The TV is not turned on. 	<ul style="list-style-type: none"> Press I/⏻ (power). Press ⏻ (main power) on the TV to turn off the TV for about five seconds, then turn it on again. 	9 8
<p>Good picture</p> 	<ul style="list-style-type: none"> The volume level is too low. 	<ul style="list-style-type: none"> Press ▲ + to increase the volume level. 	9
<p>No sound</p> 	<ul style="list-style-type: none"> The sound is muted. PIP sound is selected when PIP is displayed. 	<ul style="list-style-type: none"> Press ⏻ to cancel the muting. Press SOUND or 🗨️. 	9 13
<p>Dotted lines or stripes</p> 	<ul style="list-style-type: none"> There is local interference from cars, neon signs, hair dryers, power generators, etc. 	<ul style="list-style-type: none"> Do not use a hair dryer or other equipment near the TV. Check the antenna setup. Contact a Sony dealer for advice. 	- -
<p>Double images or "ghosts"</p> 	<ul style="list-style-type: none"> Broadcast signals are reflected by nearby mountains or buildings. The antenna setup is inappropriate. Use of a booster is inappropriate. 	<ul style="list-style-type: none"> Use a highly directional antenna. Use the fine tuning ("FINE") function. Check the antenna setup. Contact a Sony dealer for advice. Turn off or disconnect the booster if it is in use. 	- 30 -
<p>No color</p> 	<ul style="list-style-type: none"> The color level setting is too low. The color system setting is inappropriate. The antenna setup is inappropriate. 	<ul style="list-style-type: none"> Display the "PICTURE" menu and select "ADJUST" of "PICTURE MODE", then adjust the "COLOR" level. Display the "SETUP" menu and check the color system ("COLOR SYS") setting (usually set this to "AUTO"). Check the antenna setup. Contact a Sony dealer for advice. 	22 26 -

 Symptom	Possible cause	Solutions	Page
Picture slant 	<ul style="list-style-type: none"> The magnetic disturbance from external speakers or other equipment, or the direction of the earth's magnetic field may affect the TV. 	<ul style="list-style-type: none"> Keep external speakers or other electrical equipment away from the TV. Display the "SETUP" menu and adjust "PIC ROTATION" so that the picture position is optimal. 	<p>–</p> <p>26</p>
Abnormal color patches 	<ul style="list-style-type: none"> The magnetic disturbance from external speakers or other equipment, or the direction of the earth's magnetic field may affect the TV. 	<ul style="list-style-type: none"> Keep external speakers or other equipment away from the TV. Do not move the TV while the TV is turned on. Press Ⓚ (main power) on the TV to turn off the TV for about 15 minutes, then turn it on again to demagnetize the TV. 	–
TV cannot receive stereo broadcast sound.	<ul style="list-style-type: none"> The stereo reception setting is inappropriate. 	<ul style="list-style-type: none"> Press A/B until "AUTO" appears on the screen. 	16
OR	<ul style="list-style-type: none"> The connection is loose or the cable is damaged. 	<ul style="list-style-type: none"> Check the antenna cable and connection on the TV, VCR and on the wall. 	31
Stereo broadcast sound switches on and off or is distorted.	<ul style="list-style-type: none"> The antenna setup is inappropriate. 	<ul style="list-style-type: none"> Check the antenna setup. Contact a Sony dealer for advice. 	–
"100" appears at the top of the screen and there is no Teletext display.	<ul style="list-style-type: none"> The channel carries no Teletext broadcast. 	—	17
Teletext display is incomplete (snowy picture or double images).	<ul style="list-style-type: none"> Connection is loose or the cable is damaged. 	<ul style="list-style-type: none"> Check the antenna cable and connection on the TV, VCR, and at the wall. 	31
	<ul style="list-style-type: none"> The antenna setup is inappropriate. 	<ul style="list-style-type: none"> Check the antenna setup. Contact a Sony dealer for advice. 	–
	<ul style="list-style-type: none"> Signal transmission is too low. 	<ul style="list-style-type: none"> Try using a booster. Use the fine tuning ("FINE") function. 	– 30
The Ⓚ (standby) indicator on your TV flashes red several times between three-second intervals.	<ul style="list-style-type: none"> Your TV's self-diagnosis function indicates the possible problems. 	<ul style="list-style-type: none"> Count the number of times the Ⓚ (standby) indicator flashes. Press Ⓚ (main power) to turn off your TV. Contact your nearest Sony service center. 	–

continue

continued

Symptom	Possible cause	Solutions	Page
Cannot play shooting games.	<ul style="list-style-type: none">Some shooting games which involve pointing a light beam at the TV screen with an electronic gun or rifle cannot be used with your TV. For detail, see the instruction manual supplied with the video game software.	—	—
TV cabinet creaks.	<ul style="list-style-type: none">Changes in room temperature sometimes make the TV cabinet expand or contract, causing a noise. This does not indicate a malfunction.	—	—
A small “boom” sound is heard when the TV is turned on.	<ul style="list-style-type: none">The TV’s demagnetizing function is working. This does not indicate a malfunction.	—	—

Specifications

	KV-AR34M66	KV-AR29M66	KV-AR25M66	Note
Power requirements	110 – 240 V AC, 50/60 Hz			
Power consumption (W)	Indicated on the rear of the TV			
Television system	B/G, I, D/K, M			
Color system	PAL, PAL 60, SECAM, NTSC3.58, NTSC4.43			
Stereo/Bilingual system	NICAM Stereo/Bilingual B/G, I; A2 Stereo/Bilingual B/G			
Teletext language	English, Arabic, French			
Channel coverage	VHF : E2 to E12 UHF : E21 to E69 CATV : S01 to S03, S1 to S41			
B/G				
I	UHF : B21 to B68 CATV : S01 to S03, S1 to S41			
D/K	VHF : C1 to C12, R1 to R12 UHF : C13 to C57, R21 to R60 CATV : S01 to S03, S1 to S41, Z1 to Z39			
M	VHF : A2 to A13 UHF : A14 to A79 CATV : A-8 to A-2, A to W+4, W+6 to W+84			
⏏ (Antenna)	75-ohm external terminal			
Audio output (Speaker)	8W + 8W			
Number of terminal				
📺 (Video)	Input: 4*	Output: 1	Phono jacks; 1 Vp-p, 75 ohms	* Three input lines available
🎵 (Audio)	Input: 4*	Output: 1	Phono jacks; 500 mVrms	* Three input lines available
📺 (S Video)	Input: 2		Y: 1 Vp-p, 75 ohms, unbalanced, sync negative C: 0.286 Vp-p, 75 ohms	
📺 (Component Video)	Input: 1		Phono jacks; Y: 1 Vp-p, 75 ohms, sync negative Cb: 0.7 Vp-p, 75 ohms Cr: 0.7 Vp-p, 75 ohms Audio: 500 mVrms	
🎧 (Headphone)	Output: 1		Stereo minijack	
Picture tube	34 in.	29 in.	25 in.	
Tube size (cm)	86	72	64	Measured diagonally
Screen size (cm)	80	68	60	Measured diagonally
Dimensions (w/h/d, mm)	896 × 686 × 569	765 × 578 × 502	650 × 517 × 496	
Mass (kg)	79	49	39	

Design and specifications are subject to change without notice.