

**WARNING**

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

To reduce the risk of fire, do not cover the ventilation of the apparatus with newspapers, tablecloths, curtains, etc. And do not place lighted candles on the apparatus.

To reduce the risk of fire or electric shock, do not expose this apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on the apparatus.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

Do not expose the batteries (battery pack or batteries installed) to excessive heat such as sunshine, fire or the like for a long time.

As the main plug is used to disconnect the unit from the mains, connect the unit to an easily accessible AC outlet. Should you notice an abnormality in the unit, disconnect the main plug from the AC outlet immediately.

The unit is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the unit itself has been turned off.

**CAUTION**

Danger of explosion if battery is incorrectly replaced. Replace only with the same type.

**Notice for customers: the following information is only applicable to equipment sold in countries applying EU directives**  
The manufacturer of this product is Sony Corporation, 1-7-1 Konan, Minato-ku, Tokyo, 108-0075 Japan. The Authorized Representative for EMC and product safety is Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Germany. For any service or guarantee matters, please refer to the addresses given in separate service or guarantee documents.

**Precautions**

- Operate the unit on the power source specified in "Specifications."
- To disconnect the AC power cord (mains lead), pull it out by the plug, not the cord.
- Since a strong magnet is used for the speaker, keep personal credit cards using magnetic coding or spring-wound watches away from the unit to prevent possible damage from the magnet.
- Do not leave the unit in a location near a heat source such as a radiator or airduct, or in a place subject to direct sunlight, excessive dust, mechanical vibration, or shock.
- Allow adequate air circulation to prevent internal heat build-up. Do not place the unit on a surface (a rug, a blanket, etc.) or near materials (a curtain) which might block the ventilation holes.
- Should any solid object or liquid fall into the unit, unplug the unit and have it checked by qualified personnel before operating it any further.
- To clean the casing, use a soft cloth dampened with a mild detergent solution.
- Never touch the wire of the external FM aerial during a thunderstorm. Furthermore, immediately disconnect the AC power cord from the radio.

**NOTES ON LITHIUM BATTERY**

- Wipe the battery with a dry cloth to assure a good contact.
- Be sure to observe the correct polarity when installing the battery.
- Do not hold the battery with metallic tweezers, otherwise a short-circuit may occur.



**Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)**

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product. Applicable accessory: Remote Commander.



**Disposal of waste batteries (applicable in the European Union and other European countries with separate collection systems)**

This symbol on the battery or on the packaging indicates that the battery provided with this product shall not be treated as household waste. On certain batteries this symbol might be used in combination with a chemical symbol. The chemical symbols for mercury (Hg) or lead (Pb) are added if the battery contains more than 0.0005% mercury or 0.004% lead. By ensuring these batteries are disposed of correctly, you will help prevent potentially negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling of the battery. The recycling of the materials will help to conserve natural resources.

In case of products that for safety, performance or data integrity reasons require a permanent connection with an incorporated battery, this battery should be replaced by qualified service staff only.

To ensure that the battery will be treated properly, hand over the product at end-of-life to the applicable collection point for the recycling of electrical and electronic equipment.

For all other batteries, please view the section on how to remove the battery from the product safely. Hand the battery over to the applicable collection point for the recycling of waste batteries.

For more detailed information about recycling of this product or battery, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

If you have any questions or problems concerning your unit, please consult your nearest Sony dealer.

**Features**

- Clock Radio with "WALKMAN" / Sony Ericsson Phone compatible
- Wake or Sleep to "WALKMAN" / Sony Ericsson Phone / Radio
- Easy to set A-B alarm
- 2.5-7 day alarm
- LCD Brightness control
- Wireless Remote commander

**Troubleshooting**

Should any problem persist after you have made the following checks, consult your nearest Sony dealer.

**The clock flashes "AM 12:00" due to a power interruption.**

- The battery is low. Replace the battery. Remove the old battery and install a new one.

**The radio, "WALKMAN" / Sony Ericsson Phone or buzzer alarm does not sound at the preset alarm time.**

- Check that alarm "A" or alarm "B" is properly displayed.
- The radio or "WALKMAN" / Sony Ericsson Phone alarm is activated but no sound comes on at the preset alarm time.
- Check the alarm volume setting.

**There is no sound from the "WALKMAN" / Sony Ericsson Phone.**

- Make sure the "WALKMAN" or Sony Ericsson Phone is securely connected.
- Select music library on your "WALKMAN" / Sony Ericsson Phone.

**There is no sound from the Sony Ericsson Phone.**

- Make sure the Sony Ericsson Phone is listed in "Compatible Sony Ericsson Phone models" **1** or **2**.
- Power on the Sony Ericsson Phone.
- Adjust the volume of the Sony Ericsson Phone.
- Set Bluetooth function to off on the Sony Ericsson Phone.

**The "WALKMAN" / Sony Ericsson Phone cannot be operated with this unit.**

- Make sure the "WALKMAN" or Sony Ericsson Phone is securely connected.
- Make sure the Sony Ericsson Phone is listed in "Compatible Sony Ericsson Phone models" **1**.

**The "WALKMAN" / Sony Ericsson Phone cannot be charged.**

- Make sure the "WALKMAN" or Sony Ericsson Phone is securely connected.

**The indicator turns red when a compatible Sony Ericsson Phone (listed in "Compatible Sony Ericsson Phone models" **1** or **2**) is set in the unit.**

- Make sure the Sony Ericsson Phone is on.

**The indicator turns on (green), but the Sony Ericsson Phone does not operate.**

- Make sure the Sony Ericsson Phone is a compatible model (listed in "Compatible Sony Ericsson Phone models" **1** or **2**).

**When Daylight Saving Time (summer time) begins, the clock does not employ the Daylight Saving Time automatically.**

- Make sure the clock is set correctly.

- Press and hold **CLOCK** and **SNOOZE/DATE/SLEEP OFF** simultaneously for at least 2 seconds to activate the Automatic DST/Summer Time adjustment function.

**Specifications****Time display**

12-hour system

**"WALKMAN" / Sony Ericsson Phone section**

**"WALKMAN":**

DC out: 5V

MAX: 500mA

**Sony Ericsson Phone:**

DC out: 5V

MAX: 600mA

**Radio section****Frequency range**

Band	Frequency	Channel step
FM	87.5 MHz – 108 MHz	0.05 MHz
AM	531 kHz – 1 602 kHz	9 kHz

**General****Speaker**

Approx. 3.8 cm (1 1/2 inches) dia. 8 Ω

**Input**

AUDIO IN jack (ø 3.5 mm stereo minijack)

**Power output**

0.8 W (at 10% harmonic distortion)

**Power requirements**

230 V AC, 50 Hz

For clock back up: 3V DC, CR2032 battery (1)

**Dimensions**

Approx. 167 mm × 124.7 mm × 97.1 mm (w/h/d)  
(6 7/8 inches × 4 13/16 inches × 3 7/8 inches)  
including projecting parts and controls

**Mass**

Approx. 974 g (2 lb 2.4 oz) including power supply unit

**Supplied accessories**

Remote commander (1)

AM loop aerial (1)

Audio connecting cable (1)


Attachment for "WALKMAN" (2)

Design and specifications are subject to change without notice.

**Connecting the aerial****To connect the AM loop aerial**

The shape and the length of the aerial is designed to receive AM signals. Do not dismantle or roll up the aerial.

- Remove only the loop part from the plastic stand.
- Set up the AM loop aerial.

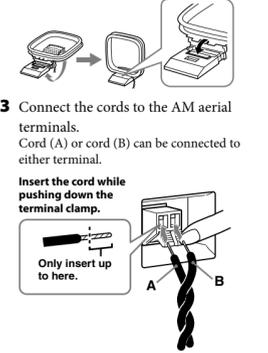

- Connect the cords to the AM aerial terminals. Cord (A) or cord (B) can be connected to either terminal.

**Insert the cord while pushing down the terminal clamp.**

**Only insert up to here.**

**4** Make sure the AM loop aerial is connected firmly by pulling softly.

**Adjusting the AM loop aerial**

Find a place and an orientation that provide good reception.


- Do not place the AM loop aerial near the unit or other AV equipment, as noise may result.

**Tip**

Adjust the direction of the AM loop aerial for best AM broadcast sound.

**Preparing the remote commander**

Before using the card remote commander for the first time, remove the insulation film.

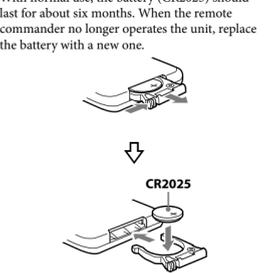**Notes**

- Do not attempt to charge the battery.
- If you are not going to use the remote commander for a long time, remove the battery to avoid any damage that may be caused by leakage and corrosion.

**About the backup battery**

To keep accurate time, this unit contains a CR2032 battery as a backup power source. The battery keeps the clock and the alarm operating in the event of a power interruption.

**Note for customers in the UK**

The clock is preset at the factory, and its memory is powered by the preinstalled Sony CR2032 battery. If the "AM 12:00" appears in the display when the unit is connected to AC outlet for the first time, the battery may be weak. In this case, consult a Sony dealer. The preinstalled CR2032 battery is considered part of the product, and is covered by the warranty. You are required to show "Note for customers in the UK" (in this instruction) to a Sony dealer in order to validate the warranty for this product.

**Knowing when to replace the battery**

When the battery becomes weak, "⏻" appears in the display.

If a power interruption occurs while the battery is weak, the current time and alarm will be initialized.


Replace the battery with a Sony CR2032 lithium battery. Use of another battery may cause a fire or explosion.

**Replacing the battery**

- Keep the AC plug connected to the AC outlet, remove the screw that secures the battery holder at the bottom of the unit using a screwdriver, and remove the battery holder (see Fig.①).
- Replace a new battery in the battery holder with the **+** side facing up (see Fig.②).
- Insert the battery holder back into the unit and secure it with the screw (see Fig.③).
- Press **▶** (play), **RADIO BAND, AUDIO IN** or **SNOOZE/DATE/SLEEP OFF** to turn "⏻" off in the display.

**Note**

When you replace the battery, do not disconnect the plug from the AC outlet. Otherwise, the calendar, current time, alarm and station presets will be initialized.

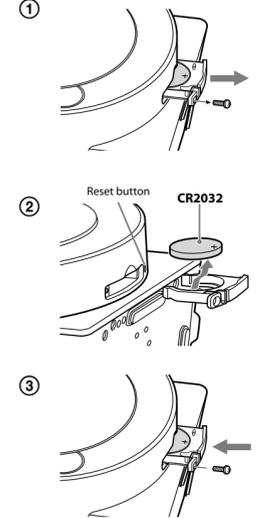**Compatible Sony Ericsson Phone models**

Compatible Sony Ericsson Phone models are as follows.

Model(s)	Available function(s)
<b>1</b> C510/C510a/C702/C702a/C902/C903 G700/G700Busitr/G900 K530i/K550i/K550im/ K610i/K610im/K618i/ K770i/K790a/K800i/ K810i S500i T650i/T700/T707/TM506 V630i W508/W580i/W595/ W610i/W660i/W710i/ W760a/W760i/W850i/ W880i/W980/W995/ W995a Z610i/Z710i	Alarm/ Music playback/ Battery charge
<b>2</b> C901/C905 G502/G705/G705u K310i/K320i/K510i/K630i/ K660i/K750i/K850i M600i P1i/P990i V640i W200i/W300i/W700i/ W705/W810i/W890i/ W902/W910i/W950i/ W960i Z530i/Z550a/Z550i/Z558i Z750i/Z770i	Music playback/ Battery charge
<b>3</b> F305 J110i/J120i K200i/K330 R300 S302/S312 T250i/T280i/T303 W302/W350i/W380i/W395 Z310a/Z310i/Z555i	Battery charge

**If the time in the display is incorrect after the battery is changed (Reset)**

Press the Reset button with a pointed instrument. The Reset button is in the small hole located near the battery holder.

**Compatible "WALKMAN" models**

Use the Oval attachment (supplied with your "WALKMAN") when you connect it to this unit. If the Oval attachment is not supplied with your "WALKMAN," use one of the attachments supplied with this unit. "WALKMAN" models compatible with this unit are as follows.

**Models using the Oval attachment (supplied with your "WALKMAN")**

NWZ-E440 series: NWZ-E443/E444/E445/  
E443K/E444K

NWZ-S540 series: NWZ-S544/S545

**Models using the Type A attachment (supplied with this unit)**

NWZ-E430 series: NWZ-E435F/E436F/E438F  
NWZ-S630 series: NWZ-S636F/S638F/S639F/  
S636FK

NWZ-S730 series: NWZ-S736F/S738F/S739F  
NWZ-A720 series: NWZ-A726/A728/A729

NW-A800 series: NW-A808/A806/A805

NWZ-A810 series: NWZ-A815/A816/A818  
NWZ-A820 series: NWZ-A826/A828/A829/  
A826K/A828K/A829K



**Models using the Type B attachment (supplied with this unit)**

NWZ-S510 series: NWZ-S515/S516

NWZ-S610 series: NWZ-S615F/S616F/S618F

NWZ-S710 series: NWZ-S715F/S716F/S718F


NWZ-X1000 series: NWZ-X1050/X1060

**Tip**


The type of attachment is located on the bottom.

**On copyrights**

- "WALKMAN" and ~~WALKMAN~~ are registered trademarks of Sony Corporation.
- All other trademarks and registered trademarks are trademarks or registered trademarks of their respective holders. In this manual, "™" and "®" marks are not specified.

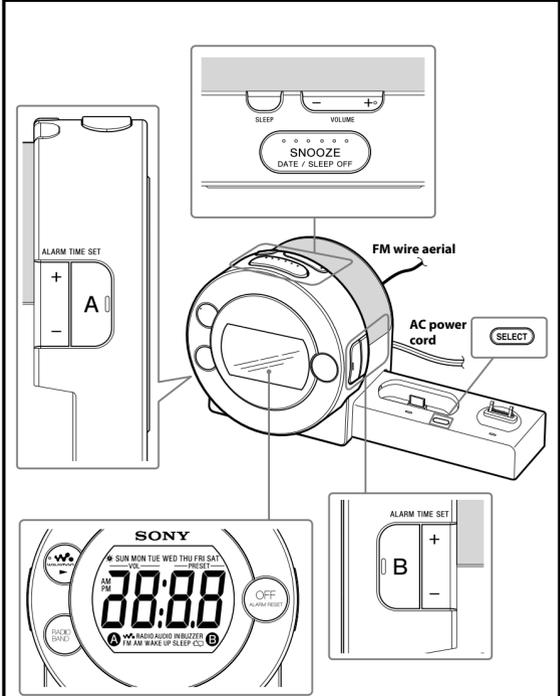

The ► (play) and VOLUME + buttons have a tactile dot. The "WALKMAN" mark in the display indicates that the "WALKMAN" or Sony Ericsson Phone function is activated.

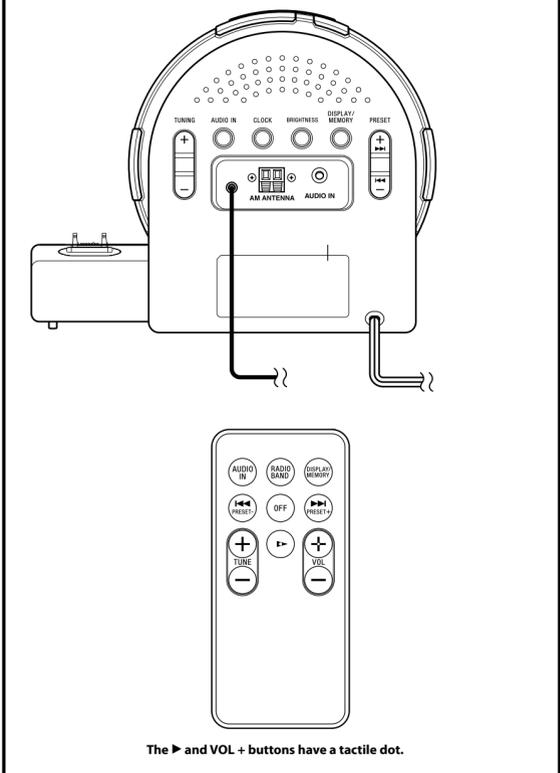

The ► and VOL + buttons have a tactile dot.

## Setting the clock for the first time

This unit is preset to the current date and time at the factory, and is powered by the backup battery. All you need to do the first time is just plug it in.

**Note**  
Though the clock is correctly set at the factory, discrepancies may arise during transport or storage. If necessary, set the clock to the correct time by referring to "Setting the clock manually."

## When Daylight Saving Time (summer time) begins

This model automatically adjusts for Daylight Saving Time (summer time). "★" is displayed from the beginning of Daylight Saving Time (summer time) and disappears at the end of Daylight Saving Time (summer time) automatically.

Automatic DST/Summer Time adjustment is based on GMT (Greenwich Mean Time).

- Daylight Saving Time (summer time) begins at: 1:00 AM on the final Sunday of March.
- Standard time begins at: 2:00 AM on the final Sunday of October.

## To cancel Automatic DST/Summer Time adjustment during the Daylight Saving Time (summer time) period

The Automatic DST/Summer Time adjustment can be canceled. Press and hold **CLOCK** and **SNOOZE/DATE/SLEEP OFF** at the same time at least 2 seconds while the clock is displayed.

"★" and "OFF" appear in the display to show that Automatic DST/Summer Time adjustment has been canceled. The display returns to the clock.

- Notes**
- Changes to Automatic DST/Summer Time adjustment by the unit (see above) are subject to circumstances and laws in each country/region. Should this interfere with desired adjustment, cancel the Automatic DST/Summer Time adjustment and set the DST display manually as necessary. Customers living in a country/region that does not use Daylight Saving Time (summer time) must cancel Automatic DST/Summer Time adjustment before using the unit.

- To activate Automatic DST/Summer Time adjustment again, press and hold **CLOCK** and **SNOOZE/DATE/SLEEP OFF** at the same time at least 2 seconds. "★" and "On" appear in the display to show that Automatic DST/Summer Time adjustment has been activated. The display returns to the clock.

## Setting the clock manually

- Plug in the unit.
- Press and hold **CLOCK** for at least 2 seconds. The year starts to flash in the display.
- Press **ALARM TIME SET +** or **-** repeatedly to set the year.
- Press **CLOCK**.
- Repeat steps 3 and 4 to set the month, day, hour and minute, and then press **CLOCK**. The seconds start incrementing from zero.

- Notes**
- If you do not press any button for about 1 minute while setting the clock, the clock setting will be canceled.
  - A calendar is installed in this unit. When the date is set, the day of the week is automatically displayed. SUN = Sunday, MON = Monday, TUE = Tuesday, WED = Wednesday, THU = Thursday, FRI = Friday, SAT = Saturday

## To display the year and date

Press **SNOOZE/DATE/SLEEP OFF** once for the date, and press it again for the year. After a while, the display will change back to the current time automatically.

## Setting the brightness of the display

Three levels of brightness are available by pressing **BRIGHTNESS**.



## Operating the radio

### -Manual tuning

- Press **RADIO BAND** to turn on the radio and select the AM or FM band.
- Press **TUNING +** or **-** (**TUNE +** or **-** on the remote) to tune in to a desired frequency.
- Adjust the volume using **VOLUME +** or **-** (**VOL +** or **-** on the remote).

**Note**  
The FM frequency display is accurate to within 0.1 MHz. For example, frequency 88.00 and 88.05 MHz will be displayed as "88.0 MHz."

### Tuning in to a station

The unit automatically scans AM or FM stations.

- Press **RADIO BAND** to turn on the radio and select the AM or FM band.
- Press and hold **TUNING +** or **-** (**TUNE +** or **-** on the remote).  
+ : scans upward through the frequency bands.  
- : scans downwards through the frequency bands.  
Scanning starts from the currently-tuned frequency. When a station is received, scanning stops.
- Adjust the volume using **VOLUME +** or **-** (**VOL +** or **-** on the remote).


### -Preset tuning

You can preset 20 stations for FM and 10 stations for AM.

### Presetting a station

- Follow steps 1 and 2 in "Manual tuning" to tune the frequency you wish to preset.
- Press and hold **DISPLAY/MEMORY** for at least 2 seconds.
- Press **PRESET +** or **-** to select the preset number, then press **DISPLAY/MEMORY**. The frequency is stored with the selected preset number.

**Example:** The following display appears when you preset FM 105.8 MHz to preset number 1 for FM.

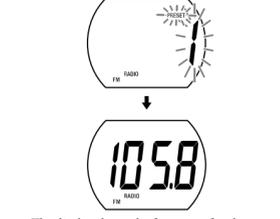

The display shows the frequency for about 10 seconds, and then returns to the current time.

To preset another station, repeat these steps.

**Note**  
If you try to store another station with the same preset number, the previously stored station will be replaced.

### Tuning in to a preset station

- Press **RADIO BAND** to turn on the radio and select the AM or FM band.
- Press **PRESET +** or **-** to select the desired preset number.
- Adjust the volume using **VOLUME +** or **-** (**VOL +** or **-** on the remote).

### -Auto preset tuning

- Press **RADIO BAND** to turn on the radio and select the AM or FM band.
- Press and hold **RADIO BAND** until "AP" appears in the display.
- Press **DISPLAY/MEMORY**. The unit automatically presets the available channels in order.

## Improving the reception

**FM:**  
Extend the FM wire aerial fully to increase reception sensitivity.

**AM:**  
Connect the supplied AM loop aerial to the unit. Rotate the aerial horizontally for optimum reception.

### Notes on radio reception

- Keep digital music players or mobile phones away from the AM loop aerial or the FM aerial, as this may lead to reception interference.
- When you are listening to the radio with a Sony Ericsson Phone connected to the unit, interference with radio reception may occur.
- When you are listening to the radio while charging a "WALKMAN" / Sony Ericsson Phone, interference with radio reception may occur.

## Operating a "WALKMAN" / Sony Ericsson Phone


You can enjoy "WALKMAN" / Sony Ericsson Phone music by connecting to this unit. To use a "WALKMAN" / Sony Ericsson Phone, refer to the user's guide of your "WALKMAN" / Sony Ericsson Phone.

## To select the connector of the "WALKMAN" / Sony Ericsson Phone


This unit has two connectors for a "WALKMAN" and a Sony Ericsson Phone. Select the connector before using "WALKMAN" / Sony Ericsson Phone according to the following procedures.

**Note**  
A "WALKMAN" and Sony Ericsson Phone cannot be used at the same time.

- Pull the Docking Tray all the way out.

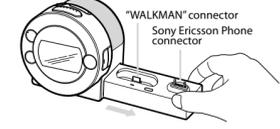


- Press **SELECT** to select the "WALKMAN" or Sony Ericsson Phone connector. The indicator turns on to indicate the "WALKMAN" or Sony Ericsson Phone connector is activated.

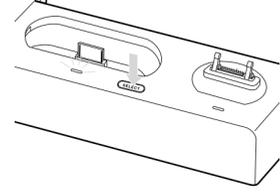

**Note**  
The Sony Ericsson Phone connector is selected by the default setting.

## To operate a "WALKMAN"

 - Choose the "WALKMAN" attachment that fits your "WALKMAN" (see "Compatible "WALKMAN" models").
- Insert the tab on the left side of the attachment (1) into the left slot in the "WALKMAN" connector, and then press down into the unit (2).



- Set your "WALKMAN" on the unit.




The connector indicator blinks for a few seconds and then stays lit.

- Notes**
- The unit cannot operate while the connector indicator is blinking.
  - If the indicator does not stay lit, remove the "WALKMAN" and set again.
  - When removing the "WALKMAN", hold the Docking Tray securely with one hand.

- Press ► (play). "WALKMAN" appears in the display. The "WALKMAN" begins to play automatically. You can operate the connected "WALKMAN" by this unit or the "WALKMAN" buttons.
- Adjust the volume using **VOLUME +** or **-** (**VOL +** or **-** on the remote).

To	Press
Stop playback	<b>OFF</b>
Go to the next track	►► (forward)
Go back to the previous track	◄◄ (backward)
Locate a point while listening to the sound	►► (forward) or ◄◄ (backward) while playing and hold it until you find the point.

 **Tip**  
To remove the "WALKMAN" attachment, press firmly down on the area marked (1), and remove (2), as shown in the illustration.



## To operate a Sony Ericsson Phone

- Set your Sony Ericsson Phone on the unit. The connector indicator blinks in a few seconds and then stays lit (green). When your Sony Ericsson Phone is off, or if it is listed in "Compatible Sony Ericsson Phone models" 1, the indicator will turn red. In this case, only battery charge function will be available (see "To use the unit as a battery charger").

 
- Notes**
- The unit cannot operate while the connector indicator is blinking.
  - If the indicator does not stay lit, remove the Sony Ericsson Phone and set again.
  - Set Bluetooth function to off on the Sony Ericsson Phone.
  - Press ► (play). "WALKMAN" appears in the display. The Sony Ericsson Phone begins to play automatically. You can operate the connected Sony Ericsson Phone by this unit or the Sony Ericsson Phone buttons.

- Adjust the volume using **VOLUME +** or **-** (**VOL +** or **-** on the remote).

To	Press
Stop playback	<b>OFF</b>
Go to the next track	►► (forward)
Go back to the previous track	◄◄ (backward)
Locate a point while listening to the sound*	►► (forward) or ◄◄ (backward) while playing and hold it until you find the point.

\* This function may not be available on some models. If the function does not work, press ► (play) to cancel.

- Notes**
- The volume may be low when the volume of Sony Ericsson Phone is set to low. In this case, adjust the volume of Sony Ericsson Phone.
  - When removing the Sony Ericsson Phone, hold the Docking Tray securely with one hand and tilt the phone forward.



## To use the unit as a battery charger

You can use the unit as a battery charger. Charging begins when the "WALKMAN" or Sony Ericsson Phone is connected to the unit. Charging status appears in the "WALKMAN" or Sony Ericsson Phone display. For details, see the user's guide of your "WALKMAN" or Sony Ericsson Phone.

**Note**  
A "WALKMAN" and Sony Ericsson Phone cannot be charged at the same time. Only the selected device (connector indicator on) can be charged.

## Setting the alarm

This clock radio is equipped with 3 alarm modes—"WALKMAN" / Sony Ericsson Phone, radio and buzzer. Before setting the alarm, make sure to set the clock (see "Setting the clock for the first time").

**Note**  
Alarm function is available only for the models listed in "Compatible Sony Ericsson Phone models" 1.

### To set the alarm

- Press and hold **ALARM TIME SET A** or **B** for at least 2 seconds. "WAKE UP" appears and the hour flashes in the display.
- Press **ALARM TIME SET +** or **-** repeatedly until the desired hour appears. To cycle the hour rapidly, press and hold **ALARM TIME SET +** or **-**.
- Press **ALARM TIME SET A** or **B**. The minute flashes.
- Repeat step 2 to set the minute.
- Press **ALARM TIME SET A** or **B**. The days of the week flash.
- Repeat step 2 to set the days of the week. You can select the days from the following three options:  
Every day: SUN MON TUE WED THU FRI SAT  
Week day: MON TUE WED THU FRI  
Week end: SUN SAT
- Press **ALARM TIME SET A** or **B**. The alarm mode setting is entered.
- Press **ALARM TIME SET +** or **-** repeatedly until the desired alarm mode flashes. You can choose one of 3 settings: "WALKMAN" "RADIO" or "BUZZER." Set the alarm mode as follows:  
- WALKMAN: see "[A] Setting the "WALKMAN" / Sony Ericsson Phone alarm."  
- RADIO: see "[B] Setting the radio alarm."  
- BUZZER: see "[C] Setting the buzzer alarm."

## [A] Setting the "WALKMAN" / Sony Ericsson Phone alarm

- Perform steps 1 to 8 in "To set the alarm."
- Press **SELECT** on the Docking Tray to select the "WALKMAN" or Sony Ericsson Phone connector.
- Press **ALARM TIME SET A** or **B** to select "WALKMAN" alarm mode. "VOL" flashes in the display.
- Press **ALARM TIME SET +** or **-** to adjust the volume.
- Press **ALARM TIME SET A** or **B**. The setting is entered.
- If "A" or "B" does not appear in the display, press **ALARM TIME SET A** or **B** again. The "WALKMAN" / Sony Ericsson Phone will sound at the set time. With the alarm mode set to "WALKMAN" / Sony Ericsson Phone, when the alarm time met, if "WALKMAN" or Sony Ericsson Phone is not attached to the unit, the alarm sound will be the buzzer.

- Notes**
- Select music library on your "WALKMAN" / Sony Ericsson Phone with it connected to this unit when you set the alarm mode to "WALKMAN" / Sony Ericsson Phone.
  - Power on the "WALKMAN" / Sony Ericsson Phone before connecting to this unit.

## [B] Setting the radio alarm

- Perform steps 1 to 8 in "To set the alarm."
- Press **ALARM TIME SET A** or **B** to select "RADIO" alarm mode. "VOL" appears in the display.
- Press **ALARM TIME SET +** or **-** to adjust the volume.
- Press **ALARM TIME SET A** or **B**. Band ("FM" or "AM") or "- -" flashes. "- -" is the last station received.
- Press **ALARM TIME SET +** or **-** to select the desired band or "- -". If you select "- -", jump to step 8.
- Press **ALARM TIME SET A** or **B**. The preset number flashes.
- Press **ALARM TIME SET +** or **-** to select the desired preset number. The setting is entered.
- If "A" or "B" does not appear in the display, press **ALARM TIME SET A** or **B** again. The radio will turn on at the set time.

## [C] Setting the buzzer alarm

- Perform steps 1 to 8 in "To set the alarm."
- Press **ALARM TIME SET A** or **B** to select "BUZZER" alarm mode. The setting is entered.
- If "A" or "B" does not appear in the display, press **ALARM TIME SET A** or **B** again. The buzzer will sound at the set time.

**Note**  
The volume cannot be set for the buzzer alarm.

**To confirm an alarm time setting**  
Press **ALARM TIME SET +** or **-**. The setting will be displayed for about 4 seconds.

**To change an alarm setting**  
Press and hold **ALARM TIME SET +** for at least 2 seconds to move the alarm time forwards. Press and hold **ALARM TIME SET -** for at least 2 seconds to move the alarm time back. When you release the button, the changed time will be displayed for about 2 seconds. To change the alarm time again, press **ALARM TIME SET +** or **-** within these 2 seconds, otherwise the setting change will be fixed as displayed.

**To doze for a few more minutes**  
Press **SNOOZE/DATE/SLEEP OFF**. The sound turns off but will automatically come on again after about 10 minutes. You can change the snooze time by pressing **SNOOZE/DATE/SLEEP OFF** repeatedly within 4 seconds. The maximum length of the snooze time is 60 minutes. To stop the snooze timer, press **OFF/ALARM RESET (OFF)** on the remote.

**To stop the alarm**  
Press **OFF/ALARM RESET (OFF)** on the remote to turn off the alarm. The alarm will sound again at the same time the next day.

**To deactivate the alarm**  
Press **ALARM TIME SET A** or **B** to turn off the alarm A or B indicator from the display.

**To activate the alarm**  
Press **ALARM TIME SET A** or **B** to turn on the alarm A or B indicator in the display.

- Notes**
- If the same alarm time is set for both alarm A and B, alarm A takes priority.
  - If there is no operation while the alarm is occurring, the alarm will stop after about 60 minutes.

 
**Note on the alarm in the event of a power interruption**  
In the event of a power interruption, the alarm will work until the battery is totally discharged. However, certain functions will be affected as follows:

- The backlight will not light up.
- If the alarm mode is set to "WALKMAN" / Sony Ericsson Phone or radio, it will change to buzzer automatically.
- If a power interruption occurs while the alarm is sounding, the alarm will stop.
- If **OFF/ALARM RESET** is not pressed, the alarm will sound for about 5 minutes.
- If "CO" appears in the display, the alarm will not sound in the event of a power interruption. Replace the battery if "CO" appears.
- The snooze function will not work.
- During a power interruption, each alarm will sound or the set time only once.

## Setting the sleep timer

You can fall asleep to music, etc., using the built-in sleep timer that turns off the unit automatically after a preset duration.

- Press **SLEEP** while the unit is turned on. "SLEEP" appears and the sleep time flashes in the display.
- Press **SLEEP** to set the sleep timer duration. Each time you press **SLEEP**, the duration (in minutes) changes as follows:



The display returns to clock mode for about 4 seconds after you have finished the duration setting and released **SLEEP**, and then the sleep timer starts. The unit will play for the duration you set, and then shut off.

**To turn off the unit before the preset time**  
Press **SNOOZE/DATE/SLEEP OFF** or **OFF/ALARM RESET (OFF)** on the remote.


**To change the sleep timer setting**  
You can press **SLEEP** repeatedly to select the desired sleep timer setting even after the sleep timer has been activated.

**To deactivate the sleep timer**  
Press **SLEEP** repeatedly to set the sleep timer to "OFF" in step 2.

## Connecting external equipment

 **To listen to sound**

- Connect the **AUDIO IN** jack of the unit to the line out jack or headphone jack of the external equipment using the audio connecting cable (supplied).



- Press **AUDIO IN** to display "AUDIO IN"
- Play the equipment connected to the **AUDIO IN** jack.
- Adjust the volume using **VOLUME +** or **-** (**VOL +** or **-** on the remote).

**To return to the radio**  
Press **RADIO BAND**. The frequency is shown in the display.

**To return to the "WALKMAN" / Sony Ericsson Phone**  
Press ► (play).

**To stop listening**  
Press **OFF/ALARM RESET (OFF)** on the remote, and stop playback on the connected unit.

- Notes**
- Refer also to the connected equipment's manual.
  - The supplied audio connecting cable may not be used with some external equipment. In this case, use a cord suitable for the external equipment you are using.
  - When you listen to the radio with external equipment connected, turn off the connected equipment to prevent noise. If noise occurs, even when the equipment is turned off, disconnect and place the external equipment away from the unit.