


Supplied Software
The software is stored in the built-in flash memory of the player, and includes the following items:
- Content Transfer
- WALKMAN Guide
- Operation Guide, etc.
For details on how to install, see "How to Install the Bundled Software (Operation Guide included)."
To view the Operating Guide (PDF file) on your computer, Adobe Acrobat Reader 5.0 or later, or Adobe Reader is required. You can download a free copy of Adobe Reader from the Internet.

How to Install the Bundled Software (Operation Guide included)

- Connect the player to the supplied stand.
- Connect the USB cable of the stand to a running computer.

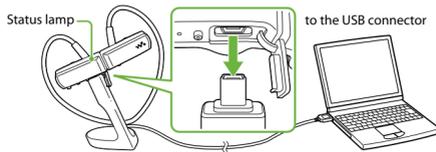

- Select the following order with the computer.
Select "start" - "My Computer" or "Computer" - "WALKMAN" - "Storage Media."

Note
• When you use the player for the first time, or if you have not used the player for a long time, the player may take some minutes to be recognized by the computer.

- Double-click "Setup.exe."
The install wizard appears.
• When you execute "Setup.exe," the "Setup.exe" file and "Install" folder stored in the "Storage Media" folder of the player are copied to your computer for backup, and WALKMAN Guide and Content Transfer are installed to your computer.
- Follow the on-screen instructions.
After executing "Setup.exe," the WALKMAN Guide shortcut appears on the desktop of your computer.
• With the player connected to your computer, when installation of bundled software is completed, Content Transfer starts automatically.
- Double-click (WALKMAN Guide) on the desktop to start the WALKMAN Guide.

- Hints**
- You can start the WALKMAN Guide and Content Transfer from the "start" menu (displayed by clicking "start").
 - If you delete the "Setup.exe" file and "Install" folder in the player by formatting the built-in flash memory of the player, copy this data from the "Backup" folder on the computer to your player. Then connecting the player to the computer to be installed, follow the above procedure from step ① to install. The backup data is preserved in the following "C:" drive on your computer by the default install setting. C:\Program Files\Sony\WALKMAN Guide\NWZ-W250\Backup

What can you do with the WALKMAN Guide ?

The WALKMAN Guide includes the following items:

- Operation Guide
- Customer Registration Link
- Customer Support Site Link
- Other useful Links
Includes link information, etc., on the download site.

The bundled items differ depending on the country/region of purchase.

Hint

- After executing "Setup.exe" you can use the free space in the "Storage Media" folder more effectively by formatting the built-in flash memory of the player. To format the built-in flash memory of the player, see "Formatting the player" on the reverse side.

What is ZAPPIN Playback?



ZAPPIN enables sequential playback of song clips at a preset duration.

Normal playback



Changes to ZAPPIN.

Zappin in!

ZAPPIN playback



Short recognizable clips of songs (such as the most melodic or rhythmical section)
The ZAPPIN playback time for song clips can be set to either "Short" or "Long."

Returns to normal playback and restarts playback of the current song from the beginning.

Zappin out!

Normal playback




See "3 Playing Music" for details on operations.

Checking Supplied Accessories

- This player (1)
- Stand with USB cable (1)
- Earbuds (Size S, L) (Supplied in pairs)
- Holder (1)
- Operation Guide (this manual) (1)
- Notes on Water Resistant Specifications (1)

How to install the earbuds


At purchase, M size earbuds are installed (S and L sizes are also supplied). To enjoy better sound quality, change the size of the earbuds or adjust the earbud position to fit in your ears comfortably and snugly. When you change the earbuds, twist while installing them firmly on the player to prevent the earbud from detaching and remaining in your ear. If an earbud becomes damaged, optional earbuds (EP-EX1) are available for purchase.

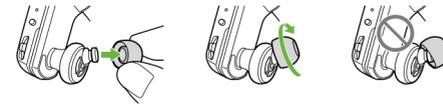

How to store the player into the holder


To prevent magnetic leakage, store the player in the supplied holder whenever carrying or when not using the player.

The magnet is on the right side. Do not place credit cards or ATM cards, etc. (magnetic coded cards) near the player when it is not stored in the holder to prevent damage to the magnetic coding on the cards.

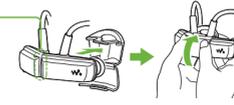


Hold the player by the holder and close the holder until it clicks.

Parts and Controls

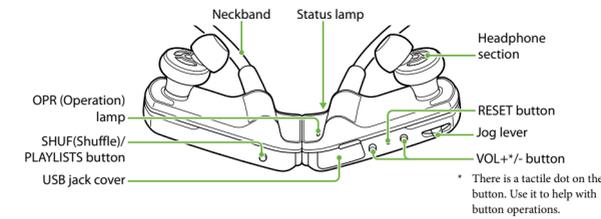

How to place the player on your ears

- Check the left (L) and right (R) parts of the player. These parts are magnetically coupled.
- Separate the left and right parts.
- Hang the neckband over the back of your neck and ears, and place the earbuds into your ears.

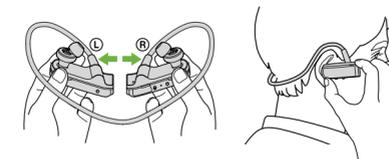


Three Ways to Transfer Music

- From CDs, etc., using Windows Media Player 11 or 12



- From iTunes[®], etc., using Content Transfer

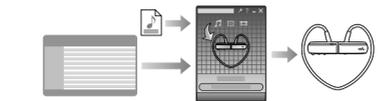

[®] Content Transfer supports data transfer from iTunes 9.0 to the player.

- By drag-and drop using Windows Explorer




To play back the most melodic and rhythmical song clips

When you transfer songs using Content Transfer software with the 12 TONE ANALYSIS set to "Automatic" or "Always ON," the information of the most recognizable sections based on melody and rhythm will be found and added to each song. Then, the most melodic and rhythmical clips from each song can be played back sequentially during ZAPPIN playback. Content Transfer is included with the player. For details on how to install Content Transfer, see "How to Install the Bundled Software."

1 Importing and Transferring Music


This section describes the procedure ① from "Three Ways to Transfer Music" above. For details on the procedures ② or ③, see the reverse side. You can transfer songs to the player using Windows Media Player on your computer. Here we describe how to import and transfer songs using Windows Media Player 11.

- Import songs from CDs, etc., to Windows Media Player on the computer.
For details on how to import songs from CDs, etc., refer to the Help of Windows Media Player. You do not need to re-import songs that have previously been imported to Windows Media Player.

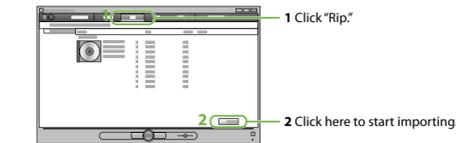

- Connect the player to the computer by using the stand.

- Transfer songs from Windows Media Player to the player.
The status lamp blinks brightly while transferring songs to the player.

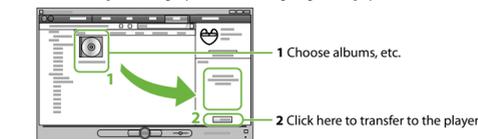

Hint

- See also "Hint about transferring music" and "Notes about transferring music" on the reverse side.

2 Preparing the Player

Charging the player

Upon purchase, first, charge the player.

- Connect the player to a running computer using the stand.
If a screen appears presenting a choice of actions, click "Cancel." Charging starts. The status lamp blinks slowly during charging. When charging is completed, the status lamp will stop blinking and light dimly while the player is connected to the computer. For details about charging time and the battery duration, see "Specifications" on the reverse side.

Checking the remaining battery power


Remaining battery power is indicated in the OPR lamp. When the OPR lamp changes to red, recharge the battery.



* Blinks at about 5 second intervals.

When the battery is used up, the OPR lamp blinks red quickly and a long beep is heard. You cannot operate the player.


3 Playing Music

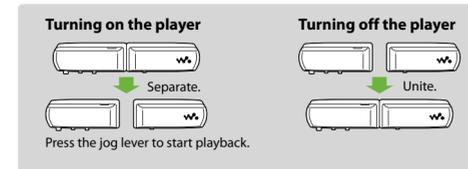


Normal playback




Playing songs

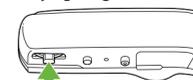

Skipping to the previous/next song

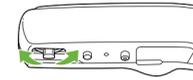

Shuffle playback

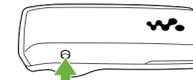


Playing a playlist

Press and hold the SHUF(Shuffle)/PLAYLISTS button to play a playlist. Move and hold the jog lever to ◀◀ (backward) or ▶▶ (forward) to skip to the beginning of the previous/next playlist. To return to playback of all the songs transferred to the player, press and hold the SHUF(Shuffle)/PLAYLISTS button during playback of a playlist.

Note

- When you play a playlist, only the songs registered in the playlist are played back repeatedly.

To stop playback

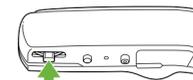

Changing to ZAPPIN playback



Returning to normal playback



ZAPPIN playback



The player plays back song clips for about 4 seconds each.
• If the most recognizable passage of the song cannot be found, the song is played back from about the 45 second point from the beginning. If the length of the song is under about 45 seconds, the song is played back from some point before the end of the song.

Skipping to the previous/next song, shuffle playback, or playlist playback during ZAPPIN playback


You can skip to the previous/next song, play back songs in random order, or play a playlist. The method of operation is the same as for normal playback.

Changing the playback time of song clips in ZAPPIN playback

The playback time for song clips can be set to either "Long" or "Short."

Zappin long

Zappin short

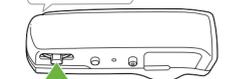

When you press and hold the jog lever until the voice guidance of "Zappin long" is heard, the playback time of song clips changes to about 15 seconds (Long). When you press and hold the jog lever until "Zappin short" is heard during "Long" playback, the playback time of song clips returns to about 4 seconds (Short).

To stop playback completely during ZAPPIN playback

Press the jog lever to return to normal playback, then press the jog lever again.

Hint about transferring music

For details on operating Windows Media Player, refer to the Help of the software or visit the following website: http://www.support.microsoft.com/

Notes about transferring music

- When you transfer songs from Windows Media Player to the player, you cannot use Content Transfer.
- You cannot operate the player during USB connection.
- Do not disconnect the USB cable while the status lamp blinks brightly. Otherwise, data being transferred or stored on the player may be damaged.
- If you transfer songs using Windows Media Player, the songs will not be analyzed by 12 TONE ANALYSIS. The 12 TONE ANALYSIS function is loaded with Content Transfer, which can analyze the sound patterns of songs.
- You cannot delete the transferred songs on the player directly. When you delete songs from the player, use the software you used to transfer the songs, or Windows Explorer.

Hints about playing music

- When playback of the last song is finished, the player automatically restarts playback from the first song and continues in sequential order.
- The playback time of the song clips is set to "Zappin short" by default. You can change the setting to "Zappin long."
- If you turn off the player by uniting the left and right parts during ZAPPIN playback, the player starts ZAPPIN playback the next time that you turn on and start playback.
- Songs stored on the player are played back in the order of the file or folder names (in numerical or alphabetical order). Also, in the overall hierarchy of all files and folders, songs belonging to each folder are played back in their hierarchical order. If you rename the files or folders on the player, the playback order of the songs can be changed. However, the renamed files or folders on the player are recognized as different from those of the original name, so the files or folders of the original name are transferred to the player again.

On other operations

Adjusting the volume

Adjust the volume with the VOL+/- button. The volume can be adjusted in 31 steps: from 0 to 30. "15" is set by default. If you turn off the player with the volume set to "0," the volume will be automatically set to "1" when you start playback next time.

Limiting the volume (AVLS (volume limit))

If you set AVLS (Automatic Volume Limiter System) to on, you can limit the maximum volume to prevent auditory disturbance or distraction, and listen to music at a comfortable volume level. AVLS is set to off by default.

1 Unite the left and right parts to turn off the player.

2 Separate the left and right parts.

3 Press and hold the jog lever for about 5 seconds while pressing the VOL+ button, until the status lamp lights.

The status lamp turns off when you release the jog lever and the VOL+ button. The OPR lamp blinks green 2 times and AVLS is set to on.

The volume is kept to a moderate level.

To return the setting of AVLS to off, repeat steps 1 to 3. When AVLS is set to off, the OPR lamp blinks red 2 times in step 3.

Using Content Transfer

You can transfer songs using iTunes or Windows Explorer by dragging and dropping to Content Transfer.

Notes

- Content Transfer cannot transfer DRM songs to the player.
- You cannot delete the transferred songs on the player directly. When you delete songs from the player, use Content Transfer.

Transferring songs from iTunes through Content Transfer

Drag and drop the songs that you want to transfer to Content Transfer. For details on the operation of iTunes, refer to the Help of the software.

Note

- For details on restrictions on transferring songs from iTunes, visit the support web sites (@® "Customer support web sites").

Transferring songs using Windows Explorer

There are 2 ways to transfer songs using Windows Explorer as follows:

- Drag and drop songs that you want to transfer to Content Transfer.
- Drag and drop songs directly to "My Computer" or "Computer" – "WALKMAN" – "Storage Media" – "MUSIC."

Notes

- The songs transferred directly by dragging and dropping to the player are not analyzed through 12 TONE ANALYSIS.
- The folders up to the 8th level under "Storage Media" can be recognized.

Formatting the player

If you format the player, all data will be erased and all settings will be returned to the default status.

Notes

- Formatting is available only while playback is stopped.

- If the OPR lamp lights red due to low remaining battery power, the player cannot be formatted.
- All data stored on the player will be erased.
- The Content Transfer software included with the player will also be deleted. If necessary, download Content Transfer from the customer support web site.
- The settings of shuffle playback, playlist playback, ZAPPIN playback, and AVLS (volume limit) also return to their defaults.

- Unite the left and right parts to turn off the player.
- Separate the left and right parts.
- Press and hold the jog lever for about 15 seconds until the status lamp blinks quickly. Release the jog lever. The OPR lamp lights red.
- Move the jog lever forward or backward within 30 seconds after the OPR lamp lights red. The status lamp turns off. The OPR lamp lights alternately green and red each time you move the jog lever.
- Press the jog lever while the OPR lamp lights green.

The OPR lamp blinks green quickly and formatting is executed. When the OPR lamp turns off, formatting is complete. If you press the jog lever while the OPR lamp lights red, or if 30 seconds have passed, formatting will be canceled.

Upgrading the player's firmware

You can update the player's firmware, allowing you to add new features to the player. For details about the latest firmware information and how to install it, visit the customer support web site.

1 Download the update program to the computer from the web site.

2 Connect the player to the computer by using the stand, and then start up the update program.

3 Follow the on-screen instructions to update the player's firmware.

Displaying the player information

Before updating the firmware, check the player's information, such as the model name, etc. To check the information, connect the player to the computer by using the stand, and open "information.txt" in "My Computer" or "Computer" – "WALKMAN."

Troubleshooting

If the player does not function as expected, try the following steps to resolve the issue.

1 Find the symptoms of the issue in "Symptoms and remedies," and try any corrective actions listed.

2 Connect the player to the computer by using the stand to charge the battery. You may be able to resolve some issues by charging the battery.

3 Press the RESET button with a small pin, etc., only when playback is stopped.

If you press the RESET button while operating the player, stored data and settings on the player may be deleted.



4 Look for information about the issue on the support web sites (@® "Customer support web sites").

5 If the approaches listed above fail to resolve the issue, consult your nearest Sony dealer.

Symptoms and remedies

The player cannot charge the battery.

- The player is not connected to the supplied stand properly.
 - Disconnect the USB connection, and then reconnect it.
 - Use the supplied stand.
- The battery is charged in an ambient temperature out of the range of 5 °C (41 °F) to 35 °C (95 °F).
- Charge the battery in an ambient temperature of 5 °C (41 °F) to 35 °C (95 °F).
- Your computer is not on.
 - Turn on the computer.
- Your computer has entered sleep or hibernation status.
 - Release the computer from sleep or hibernation status.
- If the symptom that you encountered does not apply to those listed above, press the RESET button, and then reconnect the USB connection.

The player does not work. (It does not respond to any button operations.)

- The left and right parts of the player are united.
 - Separate them and press the jog lever.
- The remaining battery power is low or insufficient.
 - Charge the battery by connecting the player to the computer (@® "Charging the player" on the front side).
- The player is connected to the computer via USB connection.
 - Disconnect the USB connection, then operate the player.

Charging completes very quickly.

- If the battery is already almost fully charged when charging begins, little time is needed to reach full charge.

The player takes a long time to start.

- It may take time to start if many files or folders are stored. While starting, the player makes the startup sound.

The OPR lamp blinks red, a long beep is heard, and the player does not turn on.

- Remaining battery is low.
 - Recharge the battery (@® "Charging the player" on the front side).

Battery life is short.

- The operating temperature is below 5 °C (41 °F).
 - Battery life becomes shorter as a result of the battery characteristics. This is not a malfunction.
- Battery charging time is not sufficient.
 - Charge the battery until the status lamp lights. The status lamp blinks slowly during charging.
- You have not used the player for a prolonged period.
 - The efficiency of the battery will be improved by repeatedly charging and discharging it.
- When usable battery life becomes half the usual time, even after charging the battery fully, the battery should be replaced.
 - Consult your nearest Sony dealer.

Data cannot be transferred to the player from your computer.

- The player is not connected to the supplied stand properly.
 - Disconnect the USB cable, and then reconnect it.
 - There is not enough free space in the built-in flash memory.
 - Delete any unnecessary data from the built-in flash memory using your computer to increase free space.
 - A maximum of 2,640 songs and 500 folders can be transferred to the player.
- Songs with a limited playing period or playing count may not be transferred due to restrictions set by copyright holders. For details on the settings of each audio file, contact the distributor.
- You may be attempting to transfer a file that is not in a playable format.
 - Transfer files in a playable format (@® "Supported file format").

The OPR lamp lights red, a short double-beep is heard repeatedly, and no data is played/the player does not turn on.

- You are trying to play an unsupported format or DRM file.
 - Transfer files in a playable format (@® "Supported file format"). If files that cannot be played are unnecessary, delete them from the player.
- Formatting the player failed to complete, or you formatted the player on the computer.
 - Retry formatting the player (@® "Formatting the player").

- There is no song that can be played on the player.
 - Transfer data to the player.

There is no sound.

- The volume level is set to zero.
 - Turn the volume up.

There is insufficient volume.

- AVLS (volume limit) is enabled.
 - Disable AVLS (volume limit) (@® "Limiting the volume (AVLS (volume limit))").

The OPR lamp lights red while playing back and the voice guidance of "EXPIRED" is heard.

- The playback limitation period of the song has expired, or the playback limitation count has been reached, based on subscription conditions, etc.
 - Visit the distributor's website from which you purchased the song, and update it.
 - If the song is unnecessary, delete it from the player.

Playback starts without performing the playback operation.

- If you move the jog lever in any direction when the player is turned off, the player will turn on, and start playback.

The most melodic and rhythmical clip of a song is not played back in ZAPPIN playback.

- The song was not analyzed by the 12 TONE ANALYSIS.
 - Transfer songs using Content Transfer which will analyze songs by 12 TONE ANALYSIS.
 - Check that 12 TONE ANALYSIS is set to "Automatic" or "Always ON."

At high volume, prolonged listening to the personal audio player can damage the user's hearing.



If you have any questions about this product:

Visit: www.sony.com/walkmansupport
Contact: Sony Customer Information Service Center at 1-(866)-456-7669
Write: Sony Customer Information Service Center 12451 Gateway Blvd., Fort Myers, FL 33913

| | |
|---|--|
| Declaration of Conformity | |
| Trade Name: | SONY |
| Model No.: | NWZ-W252/W253 |
| Responsible Party: | Sony Electronics Inc. |
| Address: | 16530 Via Esprillo, San Diego, CA 92127 U.S.A. |
| Telephone Number: | 858-942-2230 |
| This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. | |

Owner's Record

The model and serial numbers are located on the back of the player. Record them in the space provided below. Refer to these numbers in the spaces whenever you call upon your Sony dealer regarding this product.

Model No. _____

Serial No. _____

Notice for customers: the following information is only applicable to equipment sold in countries applying EU directives

The manufacturer of this product is Sony Corporation, 1-7-1 Konan, Minato-ku, Tokyo, 108-0075 Japan. The Authorized Representative for EMC and product safety is Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Germany.

For any service or guarantee matters please refer to the addresses given in separate service or guarantee documents.

At high volume, prolonged listening to the personal audio player can damage the user's hearing.

Information for safety

On charging the battery

- Do not leave the player connected for extended periods to a laptop computer that is not connected to AC power, because the player may discharge the computer's battery.
- Charging time may vary, depending on the conditions under which you use the battery.
- If you do not intend to use the player for over half a year, charge the battery at least once per 6 to 12 months for the battery maintenance.

On safety

- Be sure not to short-circuit the terminals of the player with other metallic objects.
- Do not touch the rechargeable battery with bare hands if it is leaking. Since battery liquid may remain in the player, consult your nearest Sony dealer if the battery has leaked. If the liquid gets into your eyes, do not rub your eyes as it may lead to blindness. Wash out your eyes with clean water, and consult a doctor.
- Also, if the liquid gets on to your body or clothes, wash it off immediately. If you do not, it may cause burns or injury. If you get burned or injured by the liquid from the battery, consult a doctor.
- Do not put any foreign object in the player. Doing so may cause fire or electric shock. If this occurs, turn off the player immediately, and consult your nearest Sony dealer or Sony Service Center.
- Do not put the player into fire.
- Do not take apart or remodel the player. Doing so can result in electric shock. Consult your nearest Sony dealer or Sony Service Center for exchange of rechargeable batteries, internal checks or repair.

On installation

- Do not put any heavy object on top of the player or apply a strong shock to the player. It may cause a malfunction or damage.
- Never use the player where it will be subjected to extremes of light, temperature, moisture or vibration. The player may become discolored, distorted or damaged.
- Never leave the player exposed to high temperature, such as in a car parked in the sun or under direct sunlight.
- Do not leave the player in a place subject to excessive dust.
- Do not leave the player on an unstable surface or in an inclined position.
- If the player causes interference to radio or television reception, turn the player off and move it away from the radio or television.
- If you want to separate the left and right parts of the player, make sure to hold them each.
- Pulling the neckband may cause damage to the neckband.
- The earbuds may deteriorate due to long-term storage or use.

- When keeping the player stored on the supplied stand, put the stand on a flat place, and avoid shock.
- Do not put any cards such as cash cards or credit cards with magnetic coding near the player whenever the player is not stored in the supplied holder. Otherwise, your cards may become impaired due to the player's magnetic effect.

Note on static electricity

In particularly dry air conditions, mild tingling may be felt on your ears. This is a result of static electricity accumulated in the body, and not a malfunction of the player. The effect can be minimized by wearing clothes made from natural materials.

On heat build-up

- Heat may build up in the player while charging if it is used for an extended period of time.

On safe listening

- Do not use the player while operating a motorized vehicle, it may create a traffic hazard and is illegal in many areas.
- Avoid using the player during sporting competition to avoid injury.

Road safety

- Avoid listening to the player in situations where hearing must not be impaired.

Preventing hearing damage

- Avoid using the player at a high volume. Hearing experts advise against continuous, loud and extended play. If you experience a ringing in your ears, reduce the volume or discontinue use.
- Do not turn the volume up high all at once. Turn up the volume gradually so that loud sound will not hurt your ears.

Caring for others

- Keep the volume at a moderate level. This will allow you to hear outside sounds and to be considerate to the people around you.

Warning

- If there is lightning when you are using the player, take off the player immediately.
- If you experience an allergic reaction to the player, stop using them at once and contact a doctor.

On the use

- Do not use this player while driving, cycling, or operating any motorized vehicle. You should exercise extreme caution or discontinue use in potentially hazardous situations.

- Refrain from using the player according to the in-flight announcements during take off or landing in an aircraft.
- Note that condensation may form temporarily in cases such as when the player is moved quickly from a low-temperature environment to a high-temperature environment or used in a room that has a heater just turned on. Condensation creates a phenomenon where moisture in the air adheres to surfaces such as metal panels, etc., and then changes to liquid. If condensation forms in the player, leave it turned off until the condensation disappears. If you use the player with condensation present, a malfunction may result.

On software

- Copyright laws prohibit reproducing the software or the manual accompanying it in whole or in part, or renting the software without the permission of the copyright holder.
- In no event will SONY be liable for any financial damage, or loss of profits, including claims made by third parties, arising out of the use of the software supplied with this player.
- The software provided with this player cannot be used with equipment other than that to which it is so designated.
- Please note that, due to continued efforts to improve quality, the software specifications may be changed without notice.
- Operation of this player with software other than that provided is not covered by the warranty.
- The ability to display the languages on supplied software will depend on the installed OS on your computer. For better results, please ensure that the installed OS is compatible with the desired language you want to display.
 - We do not guarantee all the languages will be able to be displayed properly on the supplied software.
 - User-created characters and some special characters may not be displayed.
- The explanations in this manual assume that you are familiar with the basic operations of Windows. For details on the use of your computer and operating system, please refer to the respective manuals.
- The recorded song is limited to private use only. Use of the song beyond this limit requires permission of the copyright holders.
- Sony is not responsible for incomplete recording/download or damaged data due to problems of the player or computer.

About sample data^{*1}

The player is pre-installed with sample data. If you delete the sample data, you cannot restore it, and we will not supply any replacement data.

^[1] In some countries/regions some sample data is not installed

Water resistant specifications (Please read before using the player)

Water resistant performance of this player

- The water resistant specifications^{*1} of this player are equivalent to IEC60529 "Degrees of protection against ingress of water (IP Code)" IPX5^{*2} that specifies as "Degrees of protection against ingress of water," but is not completely water-tight.

- ^{*1} The water resistant specifications are met only when the USB jack cover of the player is closed securely. Furthermore, the headphone sections are not water-tight.
- ^{*2} IPX5 (Degrees of protection against jets of water) : The player will maintain its operability even when exposed to direct jet streams of water from any direction in the situation where that approximately 12.5 L/min of water is supplied for periods for more than 3 minutes from a distance of about 3 m by using a nozzle with an inner diameter of 6.3 mm.

- Use the player with the USB jack cover closed securely.
- Do not drop the player into water by intent, and do not use the player underwater.
- The supplied stand is not water resistant. Before charging the player, be sure that the player or the location used for charging is not wet.

- Depending on usage, water may enter the inside of the player and it may cause a fire, electric shock, or malfunction.
- Before using the player, please read and understand the following information thoroughly.

Liquids that the water resistant performance specifications apply to

| | | |
|---|--|--|
| Applicable: fresh water, tap water, sweat | | |
| Not applicable : liquids other than those above (Examples: soapy water, detergent water, water with bath agents, shampoo, hot spring water, pool water, seawater, etc.) | | |

The water resistant performance of the player is based on our measurements under the conditions described above.

Note that malfunctions as a result of water immersion caused by misuse by the customer are not covered by the warranty.

Before using the player, please read the separate sheet "Notes on Water Resistant Specifications" in addition to this manual.

Specifications

Supported file format

| | |
|------------------------------|---|
| Audio Formats (Codec) | Media File format: MP3 (MPEG-1 Layer3) file format <p>File extension: .mp3</p> Bit rate: 32 to 320 kbps (Supports variable bit rate (VBR)) <p>Sampling frequency^{*1}: 32, 44.1, 48 kHz</p> |
| MP3 | Media File format: ASF file format <p>File extension: .wma</p> Bit rate: 32 to 192 kbps (Supports variable bit rate (VBR)) <p>Sampling frequency^{*1}: 44.1 kHz <ul style="list-style-type: none">Compatible with WM-DRM 10</p> |
| WMA | Media File format: MP4 file format <p>File extension: .m4a, .m4p</p> Bit rate: 16 to 320 kbps (Supports variable bit rate (VBR)) ^{*3} <p>Sampling frequency^{*1}: 8, 11,025, 12, 16, 22,05, 24, 32, 44.1, 48 kHz</p> |
| AAC-LC ^{*2} | Media File format: Wave-Riff file format <p>File extension: .wav</p> Bit rate: 1,411 kbps <p>Sampling frequency^{*1}: 44.1 kHz</p> |
| Linear PCM | File extension: .wav <p>Bit rate: 1,411 kbps <p>Sampling frequency^{*1}: 44.1 kHz</p></p> |

- ^{*1} Sampling frequency may not correspond to all encoders.
- ^{*2} Copyright protected AAC-LC files cannot be played back.
- ^{*3} Non-standard bit rates or non-guaranteed bit rates are included depending on the sampling frequency.

Maximum recordable number of songs and time (Approx.)

The approximate times are based on the case in which you transfer only 4 minutes songs in the MP3 format. Other playable audio file format song numbers and times may differ from MP3 format.

| | | |
|---|---------------------|---------------------|
| Maximum recordable number of songs | | |
| | NWZ-W252 2GB | NWZ-W253 4GB |
| 48 kbps | 1,250 | 2,595 |
| 64 kbps | 940 | 1,950 |
| 128 kbps | 470 | 975 |
| 256 kbps | 235 | 485 |
| 320 kbps | 185 | 390 |
| 1,411 kbps (Linear PCM) | 40 | 85 |

| | | |
|--------------------------------|---------------------|---------------------|
| Maximum recordable time | | |
| | NWZ-W252 2GB | NWZ-W253 4GB |
| 48 kbps | 83 hr. 20 min. | 173 hr. 00 min. |
| 64 kbps | 62 hr. 40 min. | 130 hr. 00 min. |
| 128 kbps | 31 hr. 20 min. | 65 hr. 00 min. |
| 256 kbps | 15 hr. 40 min. | 32 hr. 20 min. |
| 320 kbps | 12 hr. 20 min. | 26 hr. 00 min. |
| 1,411 kbps (Linear PCM) | 2 hr. 40 min. | 5 hr. 40 min. |

Headphones

- Type: Closed, dynamic
- Driver unit: 13.5 mm, dome type (CCAW adopted)

Capacity (User available capacity)^{*1}

NWZ-W252: 2 GB (Approx. 1.68 GB = 1,812,660,224 bytes)

NWZ-W253: 4 GB (Approx. 3.49 GB = 3,757,124,968 bytes)

^[1] Available storage capacity of the player may vary.

^[2] A portion of the memory is

Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the

applicable collection point for the recycling of electrical and electronic

equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

Disposal of waste batteries (applicable in the European Union and other European countries with separate collection systems)

This symbol on the battery or on the packaging indicates that the battery provided with this product shall not be treated as household waste.

On certain batteries this symbol might be used in combination with a chemical symbol. The chemical symbols for mercury (Hg) or lead (Pb) are added if the battery contains more than 0.0005% mercury or 0.004% lead.

By ensuring these batteries are disposed of correctly, you will help prevent potentially negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling of the battery. The recycling of the materials will help to conserve natural resources.

In case of products that for safety, performance or data integrity reasons require a permanent connection with an incorporated battery, this battery should be replaced by qualified service staff only.

To ensure that the battery will be treated properly, hand over the product at end-of-life to the applicable collection point for the recycling of electrical and electronic equipment.

For all other batteries, please view the section on how to remove the battery from the product safely. Hand the battery over to the applicable collection point for the recycling of waste batteries.

For more detailed information about recycling of this product or battery, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

License and trademark notice

- “WALKMAN” and “WALKMAN” logo are registered trademarks of Sony Corporation.
- ZAPPIN and its logo are trademarks of Sony Corporation.
- 12 TONE ANALYSIS and its logo are trademarks of Sony Corporation.
- Microsoft, Windows, Windows Vista and Windows Media are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.
- Adobe, Adobe Reader and Adobe Flash Player are trademarks or registered trademarks of Adobe Systems Incorporated in the United States and/or other countries.
- MPEG Layer-3 audio coding technology and patents licensed from Fraunhofer IIS and Thomson.
- IBM and PC/AT are registered trademarks of International Business Machines Corporation.
- Apple, Macintosh and iTunes are trademarks of Apple Inc., registered in the U.S. and other countries.
- Pentium is a trademark or a registered trademark of Intel Corporation.
- All other trademarks and registered trademarks are trademarks or registered trademarks of their respective holders. In this manual, “ and “ marks are not specified.

This product is protected by certain intellectual property rights of Microsoft Corporation. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary. Content providers are using the digital rights management technology for Windows Media contained in this device (“WM-DRM”) to protect the integrity of their content (“Secure Content”) so that their intellectual property, including copyright, in such content is not misappropriated.

This device uses WM-DRM software to play Secure Content (“WM-DRM Software”). If the security of the WM-DRM Software in this device has been compromised, owners of Secure Content (“Secure Content Owners”) may request that Microsoft revoke the WM-DRM Software’s right to acquire new licenses to copy, display and/or play Secure Content. Revocation does not alter the WM-DRM Software’s ability to play unprotected content. A list of revoked WM-DRM Software is sent to your

device whenever you download a license for Secure

Content from the Internet or from a PC. Microsoft may, in conjunction with such license, also

download revocation lists onto your device on behalf of Secure Content Owners.

- Information on Expat

Copyright ©1998, 1999, 2000 Thai Open Source

Software Center Ltd and Clark Cooper.

Copyright ©2001, 2002, 2003, 2004, 2005, 2006

Expat maintainers.

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the “Software”), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED “AS IS,” WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT.

IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

Program ©2010 Sony Corporation

Documentation ©2010 Sony Corporation