

SONY



Active Speaker

User Guide

用户手册

 
 
 
使用者指南

دليل المستخدم



RDP-NWT18

©2012 Sony Corporation Printed in Malaysia

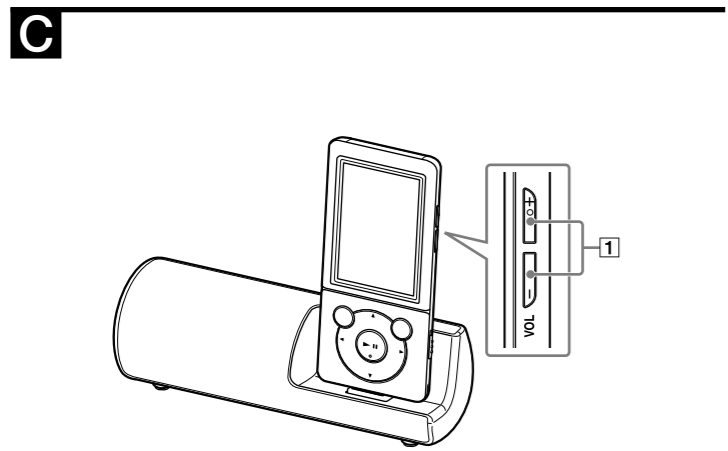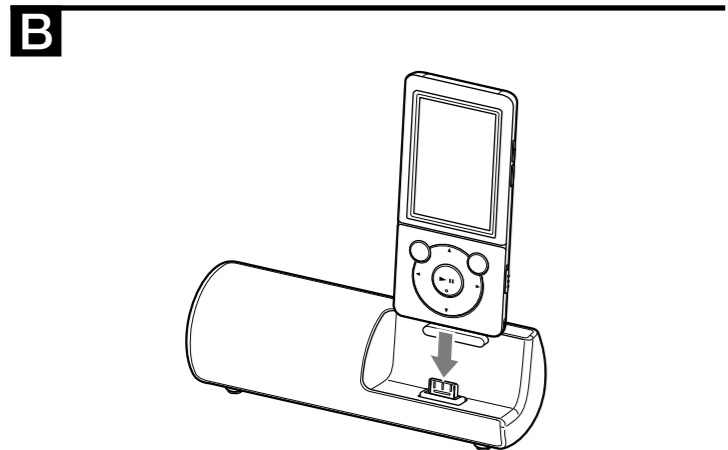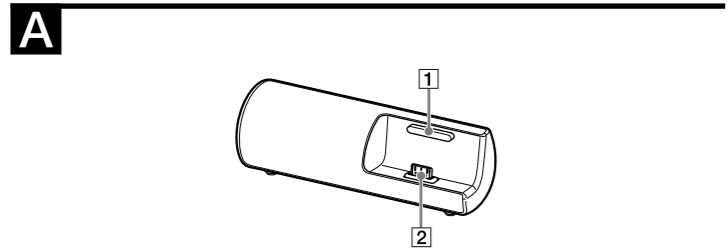

English Product name: Active Speaker

Parts and controls (See fig. A)

- 1 Adjuster (removable)
- 2 WM-PORT

Installation (See fig. B)

Notes on placement

- Do not place the speaker in an inclined position.
- Do not place the speaker in locations that are hot or subject to direct sunlight, dust, high humidity, or extreme cold.
- Use caution when placing the speaker on a specially treated (waxed, oiled, polished, etc.) floor, as staining or discoloration may result.

- 1 Install your Walkman on the speaker.

Notes

- Make sure that the WM-PORT of the speaker is securely inserted into the WM-PORT jack of your Walkman.
- When a strap is attached to your Walkman, be sure not to pinch the strap cords between the Walkman and the WM-PORT of the speaker.
- When installing your Walkman on the speaker, keep the adjuster attached to the speaker. If the Walkman is installed on the speaker without the adjuster, the WM-PORT of the speaker may be damaged.

Listening to music (See fig. C)

- 1 Play back content on your Walkman.
- 2 Press the VOL +/- button (1) on your Walkman to adjust the volume.

Hints

- When you set [SP Output Optimizer] to [RDP-NWT18] (default setting) on your Walkman, the quality of the sound output from the speaker can be optimized. Only this sound quality setting is applied to the speaker, while other sound quality settings are not applied.
- For details on how to perform playback on your Walkman, refer to the "Help guide" supplied with your Walkman.

Notes

- You cannot use the FM radio function while your Walkman installed into the speaker.
- When operating your Walkman while it is installed into the speaker, brace it with your other hand.
- You can adjust the speaker's volume only when your Walkman is installed on the speaker.
- When [SP Output Optimizer] is set to [RDP-NWT18] on your Walkman, battery life may shorten by approx. 30%.

If there is no sound

- Press the VOL + button on your Walkman to turn up the volume.
- Make sure your Walkman is securely connected.
- Make sure your Walkman is playing music.

After prescribing the remedies above, if the problem still persists, press the RESET button of your Walkman to reset it.

If there is excessive hum or noise

- Move the speaker away from any possible sources of noise.

If the sound is distorted

- Press the VOL - button on your Walkman to reduce the volume.
- Set the sound mode of the Walkman to normal or flat sound quality.

About the cleaning

Clean the casings with a soft cloth slightly moistened with water or mild detergent solution. Do not use any type of abrasive pad, scouring powder or solvent, such as alcohol or benzene.

Specifications

Continuous RMS power output	0.3 W
Input	WM-PORT*1
Speaker	35 mm dia.
Operating temperature	5°C to 35°C (41 °F to 95 °F)
Power requirements	3.7 V
Power source	Battery supply from the Walkman
Rated current consumption	200 mA (Walkman)

Dimensions (w/h/d)	Approx. 153.4 × 48.7 × 48.4 mm
Dimensions (w/h/d, upright position)	Approx. 153.4 × 48.7 × 48.4 mm
Mass	Approx. 160 g
Available playback time	10 hours (approx.)*2*3

Design and specifications are subject to change without notice.

- *1 The WM-PORT is a dedicated multi-terminal connector, used to connect a Walkman to its accessories.
- *2 [SP Output Optimizer] set to [Off], MP3 playback, 128 kbps
- *3 When [SP Output Optimizer] is set to [RDP-NWT18] (default setting) on your Walkman, battery life may shorten by approx. 30%.

Trademark Notice

- “WALKMAN” and “WALKMAN” logo are registered trademarks of Sony Corporation.
- All other trademarks and registered trademarks are trademarks or registered trademarks of their respective holders. In this manual, ™ and ® marks are not specified.

简体中文 产品名称：有源扬声器

部件和控制器（见图 A）

- 1 调节器（可拆除）
- 2 WM-PORT

安装（见图 B）

放置注意事项

- 请勿将扬声器放在倾斜的地方。
- 请勿将扬声器放在高温处或暴露在直射阳光、有灰尘、高湿或过冷的地方。
- 将扬声器放在经特殊处理（上蜡、涂油、抛光等）的地板上时请小心，可能会造成染色或变色。

- 1 将Walkman安装在扬声器上。

注意

- 确保扬声器的WM-PORT已牢固插入Walkman的WM-PORT插孔。
- 将挂绳安装到Walkman上时，请勿使挂绳夹在Walkman和扬声器的WM-PORT之间。
- 将Walkman安装到扬声器上时，请将调节器一直安装在扬声器上。如果在未安装调节器的情况下将Walkman安装到扬声器上，扬声器的WM-PORT可能会受损。

听音乐（见图 C）

- 1 播放Walkman上的内容。
- 2 按Walkman上的VOL +/- 钮(1)调节音量。

提示

- 在Walkman上将[扬声器输出优化]设定为[RDP-NWT18]（默认设定）时，可以优化从扬声器输出的音质。只有此音质设定会应用于扬声器，不会应用其它音质设定。
- 有关如何在Walkman上执行播放的详情，请参阅Walkman附带的“帮助指南”

注意

- 当Walkman已安装到扬声器中时，无法使用FM收音机功能。
- 在Walkman已安装到扬声器中进行操作时，请用另外一只手握稳播放器。
- 只有当Walkman安装在扬声器中时才能调节扬声器的音量。
- 在Walkman上将[扬声器输出优化]设定为[RDP-NWT18]时，电池持续时间可能会缩短约30%。

如果没有声音

- 按Walkman上的VOL +按钮调高音量。
 - 确认已牢固连接Walkman。
 - 确认Walkman正在播放音乐。
- 采取以上措施后，如果问题仍然存在，请按RESET按钮将Walkman重置。

如果有过多嗡嗡声或噪音

- 请将扬声器远离任何可能的噪音源。

如果声音失真

- 按Walkman上的VOL - 按钮调低音量。
- 将Walkman的声音模式设定为正常或平淡音质。

关于清洁

请使用稍微浸湿有水或中性洗涤溶液的软布清洁外壳。切勿使用任何类型的研磨垫、擦洗粉或溶剂，如酒精或苯。

规格

持续RMS功率输出	0.3 W
输入	WM-PORT*1
扬声器	直径35 mm
工作温度	5°C至35°C
电源要求	3.7 V
电源	从Walkman电池供电
额定电流消耗	200 mA (Walkman)
尺寸（长/高/宽）	约153.4 × 48.7 × 48.4 mm
尺寸（长/高/宽，竖放）	约153.4 × 48.7 × 48.4 mm
质量	约160 g
可用播放时间	约10小时*2*3

设计和规格若有变更，恕不另行通知。

*1 WM-PORT是连接Walkman和其附件的专用多端子接头。

*2 [扬声器输出优化]设定为[关闭]，MP3播放，128 kbps

*3 在Walkman上将[扬声器输出优化]设定为[RDP-NWT18]（默认设定）时，电池持续时间可能会缩短约30%。

商标声明

- “WALKMAN”和“WALKMAN”标志是Sony Corporation的注册商标。
- 所有其他商标与注册商标分别是其各自所有人之商标或注册商标。在本手册中，未指明 ™ 和 ® 标记。

