


## 1 Getting started


1. Open the battery cover and insert the battery pack.

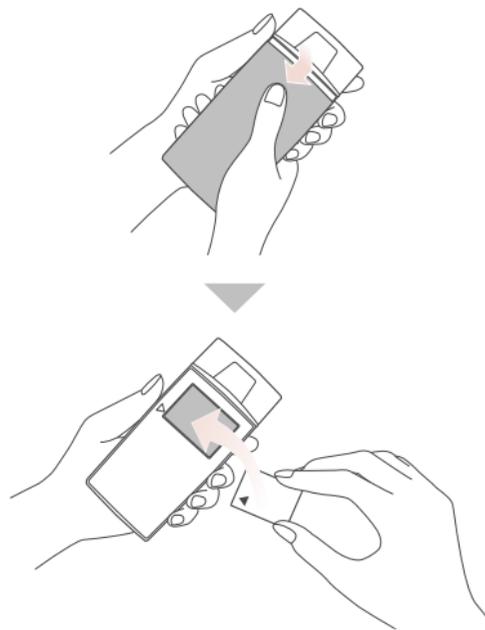

2. Charge the battery pack.


- **Turn off the camera before charging the battery.**
- Connect the camera to the AC Adaptor (supplied), using the micro USB cable (supplied). Then connect the AC Adaptor to the wall outlet (wall socket) using the power cord (mains lead) (supplied).

3. Open the memory card cover and insert the memory card (sold separately).

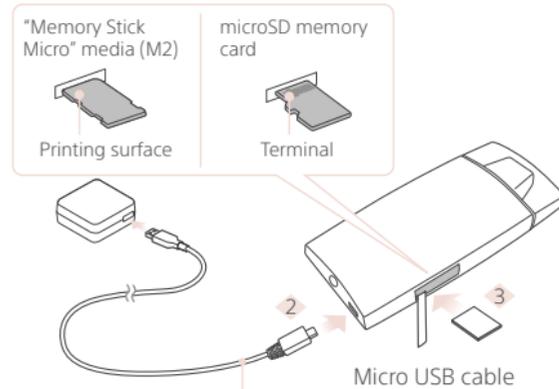

## 2 Initial settings

1. Press the ON/OFF (Power) button.
  - The Language Setting is displayed when you turn on the camera for the first time.

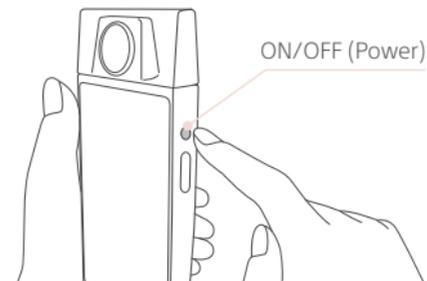


2. Follow the on-screen instructions using the touch panel.

## 3

## Shooting/viewing images

## 1. Press the shutter button.

- You can also shoot images by briefly touching anywhere on the screen (except where an icon is displayed).
- You can rotate the lens so you can easily shoot subjects from the desired angle. You can rotate the lens 180 degrees in a clockwise direction, as indicated by the following illustration.

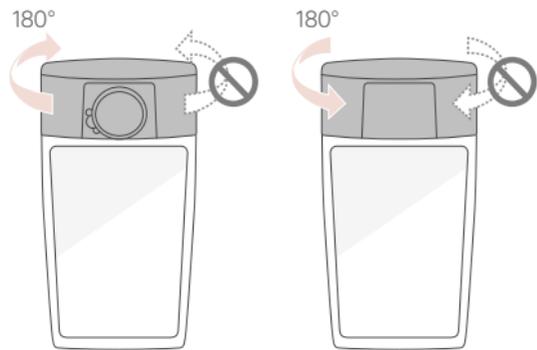
2. Touch  (Playback) to switch to playback mode.

## Self-shooting Tips

- The Flick Touch Shutter function enables you to easily take self-portraits.
  - In shooting mode, touch and hold anywhere on the screen (except where an icon is displayed). The Flick Touch Shutter menu is displayed.
    - Slide your finger from the center to the desired icon.
      - Up:** Normal shooting
      - Right:** Self-timer (2 sec / 5 sec / 10 sec)
      - Down:** Continuous shooting
      - Left:** Continuous shooting with Self-timer



- With the Ring Stand (supplied), you can stabilize the camera.
  - Insert the screw of the ring stand to the tripod receptacle, then secure the screw.

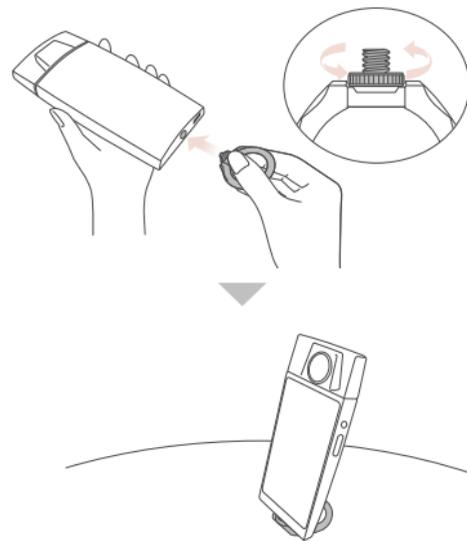

## To get more beautiful portraits

In the default setting, the Beauty Effect mode is on. This mode enables the camera to detect the faces of your subjects and adjust the brightening and smoothing effects on their skin.

**Note**

You cannot shoot movies in the Beauty Effect mode. To shoot movies, touch [REC Mode] and change to a different shooting mode.

You can also apply a cosmetic effect on a saved still image to make a person in the image look better; for example, retouching for smoother skin, larger eyes or a smaller face.

## Refer to the Help Guide

The Help Guide (Operating Instructions) is an online manual. Refer to the Help Guide when you would like to know further details, settings, and precautions.



[http://rd1.sony.net/help/dsc/1420/h\\_zz/](http://rd1.sony.net/help/dsc/1420/h_zz/)