



## 主な仕様

トラック方式	コンパクトカセットステレオ
周波数範囲 (EIAJ*)	DOLBY NR OFF時 30 - 18,000 Hz
出力端子	ヘッドホンジャック (専用リモコンジャック)1個 負荷インピーダンス 8 - 300
実用最大出力 (DC時)	4 mW + 4 mW (EIAJ* 16 )
電源	DC 1.5 V
	充電式電池 (付属：NC-6WM、1.2 V、600 mAh、Ni-Cd)、単3形乾電池 1個
電池持続時間 (EIAJ*)	乾電池、充電式電池の持続時間については「電源」をご覧ください。
外形寸法	約77.1 x 108.6 x 20.6 mm (幅/高さ/奥行き) (最大突起含まず)
最大外形寸法	約77.7 x 109.1 x 20.6 mm (幅/高さ/奥行き) (突起含む) (EIAJ*)
質量	約160 g (本体のみ) 約185 g (本体+充電式電池NC-6WM X EIAJ*)

\* EIAJ (日本電子機械工業会)規格による測定値です。

本機の仕様および外観は、改良のため予告なく変更することがありますが、ご了承ください。

**別売リアクセサリー**  
充電式ニカド電池 NC-6WM、クリーニングカセット CHK-1W、ステレオイヤーレシーバー (ヘッドホン) \* MDR-ED238SP (GROOVE対応)、MDR-Q33SL、MDR-E848SP、MDR-EX705L

国によって扱っているアクセサリーが違います。詳しくはお買い上げ店、ソニーサービス窓口、海外ソニーサービス特約店にご相談ください。

\*ヘッドホンは、本体のJジャックに直接つなぐときも、リモコンにつなぐときも、ステレオミニプラグのものをお求めください。マイクロプラグのものは使えません。

## 故障かな？



故障とお考えになる前に、次のような点をご確認ください。

症状	原因	処置
ブランクスキップ、AMS、1曲リピートが正しく動作しない	消耗した充電式電池または乾電池を使っている。 マンガン乾電池を使っている。 (ブランクスキップやAMSなどは再生と比べて電流を多く消費し、電圧が低下するためです。)	充電式電池を充電する。 乾電池は新しいソニーアルカリ乾電池と交換する。
「ビビビビ」とエラー音が鳴り、操作できない	電池が消耗している。	充電式電池を充電する。 乾電池は新しいソニーアルカリ乾電池と交換する。
操作できない	電池が消耗している。	充電式電池を充電する。 乾電池は新しいソニーアルカリ乾電池と交換する。
	ホールド機能が働いている。	ホールドを解除する。
「ビビビビビビビ」と鳴り、テープ操作ができない	カセットが入っていない。	カセットを入れる。
雑音が入る	近くで携帯電話などの電波を発する機器を使用している。	携帯電話などから離して使用する。
テープ再生中に勝手に早送りになる	ブランクスキップが働いている。	ブランクスキップを解除する (「いろいろな聞きかたをする」参照)
音量が大きくなりえない	AVLSが働いている。	AVLSを解除する。 (「音もれを抑え耳にやさしい音にする」参照。)
音が途切れる雑音がする	ヘッドホンやリモコンのプラグが汚れている。  電池が消耗している。	ヘッドホンのステレオミニプラグおよびリモコンのプラグをきれいにクリーニングする。  充電式電池を充電する。 乾電池は新しいソニーアルカリ乾電池と交換する。
動作や表示がおかしい	————	いったん電源・電池をはずして15秒以上たってから入れなおす。

Sony online http://www.world.sony.com/

「Sony online」は、インターネット上のソニーのエレクトロニクスとエンターテインメントのホームページです。

## 各部のなまえ

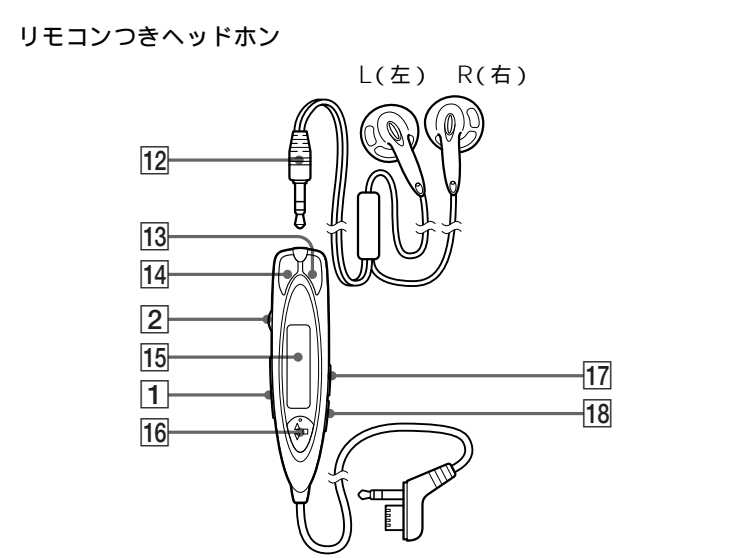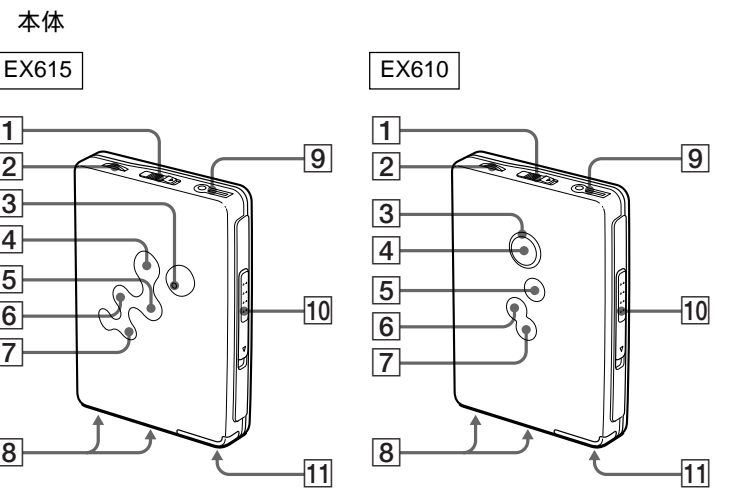

- 1 <sup>ホールド</sup>HOLD (誤操作防止)スイッチ
- 2 <sup>ボリューム</sup>VOL (音量調節)つまみ
- 3 <sup>バッテリー</sup>BATT (電池残量表示)ランプ
- 4 <sup>リピート</sup>◀▶・REPEAT (再生・一曲リピート)ボタン
- 5 ■ (停止)ボタン
- 6 FF・CUE (AMS) (早送り・キュー・AMS )ボタン
- 7 REW・REVIEW (AMS) (巻き戻し・レビュー・AMS )ボタン
- 8 乾電池ケース用端子
- 9 J (ヘッドホン、リモコン)ジャック
- 10 OPEN (カセットがた開け)つまみ
- 11 充電式電池入れ
- 12 ステレオミニプラグ
- 13 REW (−) (巻き戻し・レビュー・AMS )ボタン
- 14 FF (+) (早送り・キュー・AMS )ボタン
- 15 液晶表示窓
- 16 ◀▶・■ (再生・停止)ボタン
- 17 <sup>オープン</sup>SOUND (音質調節・ドルビーB NR入/切)ボタン
- 18 <sup>モード</sup>MODE (テープ走行方法選択・ブランクスキップ入/切・AVLS 入/切)ボタン

<p><b>ソニー株式会社</b> 〒141-0001 東京都品川区北品川 6-7-35</p>	
お問い合わせはお客様相談センターへ	
●ナビダイヤル……………0570-00-3311	受付時間：月～金 9:00～20:00
●携帯電話・PHSでのご利用は……………03-5448-3311	土・日・祝日 9:00～17:00
●Fax……………0466-31-2595	

English
---------

### Preparations

Prepare a dry battery (not supplied) or the rechargeable battery (supplied).

### Dry Battery

Attach the supplied battery case, and then insert one R6 (size AA) battery with correct polarity.

### Rechargeable Battery

- Insert the supplied rechargeable battery NC-6WM into the charger with correct polarity.
- Plug in the charger to the house current (mains). Full charging takes about 1 hour. If the plug does not fit your mains, attach the supplied AC plug adaptor.
- Insert the fully charged battery into the rechargeable battery compartment.

You can charge the battery about 300 times.

**Note**

• Certain countries may regulate disposal of battery used to power this product. Please consult your local authority.

### When to replace/charge the battery

Replace or charge the battery when "□" flashes in the display on the reomte control ro when the BATT lamp on the main unit goes off.

**Note**

• After the battery is replaced, the setting of the SOUND and MODE buttons will be erased.

<b>Battery life</b> (Approx. hours) (in playback)	(EIAJ*)
Rechargeable NC-6WM	16 fully charged
Sony alkaline LR6 (SG)**	44
Rechargeable NC-6WM	60
Sony alkaline LR6 (SG)	used together

\* Measured value by the standard of EIAJ (Electronic Industries Association of Japan). (Using a Sony HF series cassette tape)

\*\*When using a Sony LR6 (SG) "STAMINA" alkaline dry battery (produced in Japan).

**Note**

• The battery life may be shorter depending on the operating condition, the surrounding temperature and battery type.

## Playing a Tape

- Insert a cassette and if the HOLD function is on, slide the HOLD switch in the opposite direction of the arrow to unlock the controls.
- Press ◀▶ (play)・■ (stop) on the remote control and adjust the volume with VOL. (On the main unit, press ◀▶・REPEAT.)

### When adjusting the volume on the main unit

Set the VOL control on the remote control at maximum.

### When adjusting the volume on the remote control

Set the VOL control on the main unit to around 6.

### Operation on the remote control

To	Press
Switch playback to the other side	◀▶・■ for more than a second during playback
Stop playback	◀▶・■ once during playback
Fast forward*	FF during stop
Rewind*	REW during stop
Repeat the current track (Repeat Single Track function)	◀▶・■ twice during playback <i>To stop a single repeat, press ◀▶・■ once</i>

To	Press
Switch playback to the other side	◀▶・REPEAT during playback
Stop playback	■
Fast forward*	FF・CUE during stop


\* Automatic Music Sensor

## Using Other Functions

### Adjusting Playback Mode

You can adjust the playback direction mode (↔ or ⇨) as well as the BL SKIP mode (on or off).

- Press MODE repeatedly. With each press the indications change as follows:

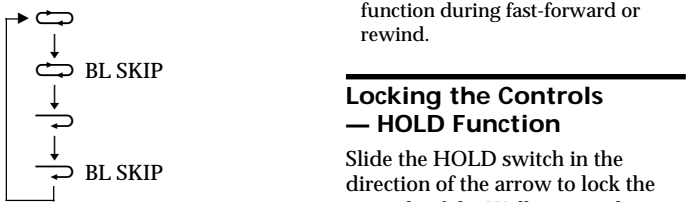

• When "BL SKIP" is displayed, the tape is fast-forwarded to the next track if there is a blank space of longer than 12 seconds. You will hear repeated sets of three short beeps when skipping a blank.

• When "↔" is displayed , both sides of the tape is played repeatedly.

• When "⇨" is displayed, both sides of the tape is played once (if you start from R (REV) side, only R (REV) side will be played).

**Note**

• You cannot adjust the playback mode during fast-forward or rewind.

###
-----

## Playing a Tape Recorded with the Dolby® B NR System

Hold down SOUND until "□□" appears in the display. To cancel Dolby B NR, hold down SOUND again until "□□" disappears.

\* Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

**Note**

• You cannot turn on/off the Dolby B NR function during fast-forward or rewind.

### Emphasizing Sound

- Press SOUND repeatedly. With each press, the indications change as follows:

RV (Sound Revitalizer): emphasizes treble sound

MB (Mega Bass): emphasizes bass sound (moderate effect)

GRV (Groove): emphasizes bass sound (strong effect)

none: normal (no effect)

RV (Sound Revitalizer): emphasizes treble sound	
MB (Mega Bass): emphasizes bass sound (moderate effect)	
GRV (Groove): emphasizes bass sound (strong effect)	
none: normal (no effect)	

**Notes**

- If the sound becomes distorted in the GRV mode, select a different sound mode.
- You cannot change the mode during fast-forward or rewind.

### Protecting Your Hearing — AVLS (Automatic Volume Limiter System)

Hold down MODE until "AVLS" appears in the display.

To cancel the AVLS function, hold down MODE again until "AVLS" disappears.

**Note**

• You cannot turn on/off the AVLS function during fast-forward or rewind.

### Locking the Controls — HOLD Function

Slide the HOLD switch in the direction of the arrow to lock the controls of the Walkman or the remote control.